

# PROTEUS 2000

## **Proteus 2000**

### *Operations Manual*

© 1998 E-MU Systems, Inc.

All Rights Reserved

**FI634 Rev. E**

#### **E-MU World Headquarters**

#### **E-MU Systems, Inc. U.S.A.**

1600 Green Hills Road

Scotts Valley, CA USA

95067-0015

Telephone: 831-438-1921

Fax: 831-438-8612

Internet: [www.emu.com](http://www.emu.com)

#### **Europe, Africa, Middle East**

#### **E-MU Systems, Ltd.**

Suite 6, Adam Ferguson House

Eskmills Industrial Park

Musselburgh, East Lothian

Scotland, EH21 7PQ

Tel: +44 (0) 131-653-6556

Fax: +44 (0) 131-665-0473

#### **Important Notice:**

In order to obtain warranty service on your Proteus 2000 unit, the serial number sticker must be intact and you must have a sales receipt or other proof of purchase. If there is no serial number sticker on the Proteus 2000, please contact E-MU Systems at once.

This product is covered under one or more of the following U.S. patents: 4,404,529; 4,506,579; 4,699,038; 4,987,600; 5,013,105; 5,072,645; 5,111,727; 5,144,676; 5,170,367; 5,248,845; 5,303,309; 5,317,104; 5,342,990; 5,430,244 and foreign patents and/or pending patents. Proteus 2000 is a registered trademarks of E-MU Systems, Inc. All other trademarks belong to their respective companies.

# *Table of Contents*

<b>Introduction .....</b>	<b>1</b>
Product Description .....	1
Overview .....	2
<b>Important Safety Instructions .....</b>	<b>3</b>
<b>Setup .....</b>	<b>13</b>
Unpacking .....	13
Connection Instructions .....	14
Basic Setup .....	14
Studio Setup .....	15
Performance Setup .....	16
Power Up! .....	17
Instant Gratification .....	18
Playing Demo Sequences .....	18
Auditioning Presets .....	18
Selecting and Quick Editing Presets .....	19
<b>Basic Operations .....</b>	<b>21</b>
Front Panel .....	21
Volume Control .....	21
Master Button .....	21
Edit Button .....	21
Control Button .....	21
Audition Button .....	22
Left/Right Cursor Buttons .....	22
Multimenu Button .....	22
Save/Copy Button .....	22
Home/Enter Button .....	23
Data Entry Control .....	23
Controller Knobs .....	23
Front Panel Controller Modes .....	23
Real-time Control .....	23
Quick Edit .....	24
Deep Edit Mode .....	25

Main Screen .....	26
MIDI Channel Selection .....	26
Preset Selection .....	26
Channel Volume .....	27
Channel Pan .....	28
Sound Navigator .....	29
Preset Category .....	29
Instrument Category .....	29
Multitimbral Operation .....	30
<b>Multimenu .....</b>	<b>31</b>
Restoring Multisetups .....	32
Multitimbral Sequencing .....	34
<b>Master Menu .....</b>	<b>35</b>
Defining Master Parameters .....	36
Transpose/Tune .....	36
Bend Range .....	36
Velocity Curve .....	37
Mix Output .....	38
Master Effects .....	40
Effects Mode .....	40
Effects Multi Mode Control .....	40
Master FXA Algorithm .....	41
A Effect Types .....	41
FXA Parameters: Decay/HF Damping FxB -> FxA .....	42
FXA Send Amounts .....	42
Master FxB Algorithm .....	42
B Effect Types .....	43
FxB Parameters: Feedback/LFO Rate Delay Time .....	43
FxB Send Amounts .....	43
MIDI Parameters .....	44
MIDI Mode .....	44
MIDI SysEx ID .....	44
MIDI Enable .....	45
MIDI Program Change -> Preset .....	45
Receive Program Change .....	46
Real-time Controller Assignment .....	46
MIDI Footswitch Assign .....	47
Tempo Controller .....	48
Knob Preset Quick-Edit .....	48
Knobs Deep Edit .....	49
Knobs/Riff MIDI Out .....	49
Preset Edit All Layers Enable .....	49
Front Panel Knob Calibration .....	50
MIDI SysEx Packet Delay .....	51

## Table of Contents

Send MIDI System Exclusive Data .....	51
User Key Tuning .....	53
Output Format .....	53
Base Tempo .....	54
Screen Viewing Angle .....	54
<b>Programming Basics .....</b>	<b>55</b>
Modulation .....	56
Modulation Sources .....	57
Random Sources .....	58
Modulation PatchCords .....	58
Envelope Generators .....	59
Tempo-based Envelopes .....	60
Envelope Repeat .....	60
Low Frequency Oscillators (LFOs) .....	61
Clock Modulation .....	62
Modulation Destinations .....	64
Modulation Processors .....	65
Preset Modulation Processors .....	67
Using the Modulation Processors .....	69
More Examples .....	71
Dynamic Filters .....	73
What is a Filter? .....	74
Parametric Filters .....	77
The Z-Plane Filter .....	78
Signal Flow .....	79
MIDI Channels and Real-time Controls .....	80
Bank Select Commands .....	82
Stereo Mix Outputs .....	83
<b>Edit Menu .....</b>	<b>85</b>
Preset Name .....	86
Four Layer Architecture .....	87
Selecting Layers .....	87
Defining Layer Parameters .....	88
Selecting an Instrument .....	88
Sound Navigator .....	88
Defining Key Range .....	89
Defining the Velocity Crossfade Range .....	92
Defining the Real-time Crossfade Range .....	94
Transposing the Instrument .....	97

Tuning .....	98
Background: Transpose vs. Coarse Tuning .....	98
Amplifier .....	98
Volume Envelope .....	99
Selecting the Mode .....	99
Defining the Volume Envelope .....	100
Chorusing the Layer .....	101
Sound Start Offset and Delay .....	101
Non-Transpose Mode .....	102
Solo Mode .....	102
Assign Group .....	103
Glide .....	104
Z-Plane Filters .....	104
Proteus 2000 Filter Types .....	108
Filter Parameters .....	108
Filter Envelope .....	108
Envelope Repeat .....	109
Defining the Filter Envelope .....	110
Auxiliary Envelope .....	110
Low Frequency Oscillators (LFOs) .....	110
Shape .....	111
Sync .....	112
Rate .....	112
Delay .....	113
Variation .....	114
PatchCords .....	115
Modulator Polarity .....	116
Pitch Bend Range .....	118
Mix Output .....	118
Common Preset Parameters .....	119
Preset Effects .....	119
FXA Algorithm .....	121
A Effect Types .....	121
FXA Parameters .....	122
FXA Send Amounts .....	122
FXB Algorithm .....	122
B Effect Types .....	122
FXB Parameters .....	123
FXB Send Amounts .....	123
Preset Patchcords .....	123
Initial Controller Amount .....	125
Keyboard Tuning .....	126
Preset Links .....	128
Preset Tempo Offset .....	129
Audition Riff Selection .....	129
Play Solo Layers .....	129

<b>Programming Tutorial .....</b>	<b>131</b>
Editing Presets .....	131
Changing the Instrument .....	131
Changing the Tuning of an Instrument .....	132
Chorus .....	133
Volume Envelope .....	133
Working with Filters .....	135
Adding the Filter Envelope .....	136
Changing Filter Types .....	138
Envelope Repeat .....	139
Practice Modulating .....	139
Troubleshooting .....	140
Linking Presets .....	141
Using External Processing .....	142
<b>Effects .....</b>	<b>143</b>
Effects Overview .....	143
The Effects Sends .....	143
Effect Types.....	145
Effect Parameters .....	145
Decay .....	146
High Frequency Damping .....	146
Feedback .....	146
LFO Rate .....	146
Delay .....	146
Effects Programmed in the Preset.....	147
Master Effects .....	148
Effects Mode .....	150
Flexible Effects Control .....	150
Using the Effects Channel Settings in Multi Mode .....	152
Effect B Into Effect A .....	152
General Effect Descriptions .....	154
Reverb .....	154
Chorus .....	155
Doubling .....	155
Slapback .....	155
Stereo Flanger .....	155
Delay .....	156
Stereo Delay .....	156
Panning Delay .....	156
Dual Tap .....	156
Vibrato .....	156
Distortion .....	156

<b>Save/Copy Menu .....</b>	<b>157</b>
Saving a Preset.....	157
Copying Information.....	158
Copy Preset .....	158
Copy Layer .....	158
Copy PatchCords .....	159
Copy Preset PatchCords .....	160
Copy Preset Bank .....	160
Create Random Preset .....	161
Copy User Bank to Flash .....	162
Rename Flash SIMM .....	163
Duplicate Flash .....	164
<b>Appendix .....</b>	<b>165</b>
Front Panel Knob Functions.....	165
Presets .....	166
Proteus 2000 Preset Categories .....	166
Preset Listing.....	167
Instrument Listing .....	175
Riff Listing .....	184
Velocity Curves.....	187
PatchCord Amount Chart.....	189
MIDI .....	190
Received Channel Commands .....	191
Technical Specifications.....	192
Warranty .....	193
<b>Index .....</b>	<b>195</b>





# Introduction

## Product Description

Congratulations on your purchase of the E-MU Proteus 2000 – the composer's dream machine. The power of Proteus 2000 begins with 128 voice polyphony, which means that 128 different instrument lines can be played at once! With all these voices, 16 MIDI channels didn't seem to be quite enough, so we added another MIDI input jack to allow 32 MIDI channel operation. As long as we were going for the gold, we decided to add the ability to access 128MB of sound memory on user upgradable SIMMs. And there's much more as you will soon discover.

Proteus 2000 contains four user-upgradable sound SIMM sockets, allowing you to mix and match sound sets according to your needs. New sounds can be added as easily as plugging in a new 16MB or 32MB SIMM module and up to 128MB of sounds can be added! Each sound set has been meticulously crafted to be the best of its kind. Samples are matched across the keyboard, perfectly looped, and rich in harmonic texture.

Proteus contains 512 user presets and can hold literally thousands of factory presets. *(ROM presets are automatically added when sound SIMMs are installed. As an example, a 32 MB SIMM may contain up to 1024 ROM presets.)* Proteus 2000's Sound Navigator is a major improvement to the main screen that makes it easy to find the exact sound you want from the thousands available. It's powerful, yet simple to use.

Of course the real power of Proteus 2000 becomes apparent when you synthesize your own sounds. The extremely flexible yet easy to use, 4-layer synthesizer voices make it easy to build sounds of any kind. Layers can be switched or crossfaded using key position, velocity, real-time controllers or any modulation source. Proteus 2000 also contains 50 different types of 2nd to 6th order resonant & modeling filters which are used to shape and modify the raw waveforms.

The 64 modulation sources include three multistage envelopes and two LFOs per layer, as well as full MIDI control over virtually every parameter. The digital patch bay, with 24 cords per layer, (and 12 more cords per preset) lets you connect modulation sources to 64 destinations in any imaginable way.

The patch bay contains a set of arithmetic modifiers, letting you create complex synthesis models.

Four front panel real-time controllers give you control over 12 user-selectable parameters. The real-time knobs can adjust multiple synthesizer functions at once, allowing complex levels of control. For example, one knob can simultaneously turn up filter cutoff, while detuning one sample, and adjusting the release time of the volume envelope. Virtually every synth parameter in the Proteus 2000 is controllable using the real-time knobs or by any internal or external control source.

Six 20-bit analog outputs let you process separate sounds and integral effect sends externally. Returns allow the addition of external effects units without the need for a separate mixer.

Once you have created your preset, you can add richness to your sound using Proteus 2000's 24-bit stereo effects. You can choose a different effects setup for each preset from over 60 algorithms. Proteus 2000's effects section is actually two separate effects processors with control over each wet/dry mix level. Effects Processor "A" contains primarily ambiance algorithms like reverb and delays, while effects processor "B" contains primarily spectral algorithms such as chorus, flange, phase, distortion, and delay. Effects can be linked to each preset or used globally to further enhance your sound.

The S/PDIF digital stereo output lets you connect to other digital equipment, such as digital mixers or external effects devices, keeping your signal entirely in the digital domain.

Other features include multiple solo, voice assignment and performance modes for expressive control, 12 user-definable alternate tunings, an extremely easy to use interface and, of course, an extensive MIDI implementation.

## Overview

This is the Operations Manual for setting up and playing Proteus 2000. The first part of the manual describes how to unpack and setup the hardware.

The next chapters provide step-by-step instructions for the most common and widely used features of Proteus 2000. This section also defines each of the parameters (by menu) and provides information on how to use them.

The appendix provides technical information, product specifications and the Index.

# *Important Safety Instructions*

## **Grounding Instructions**

Use in countries other than the U.S.A. may require the use of a different line cord or attachment plug, or both. Refer all servicing to qualified service personnel. There are no user serviceable parts or adjustments inside the unit. There are no user serviceable parts inside the power supply enclosure.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current, reducing the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet properly installed and grounded in accordance with all local codes and ordinances.

## **Danger!**

Improper connection of the equipment's grounding conductor can result in the risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with this product. If it will not fit the outlet, have a proper outlet installed by a qualified technician.


## **User Maintenance Instructions**

1. The Proteus 2000 should be kept clean and dust free. Periodically wipe the unit with a clean, dry, lint free cloth. Do not use solvents or cleaners.
2. There are no user lubrication or adjustment requirements.

**Caution** -*Servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in these operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.*



*This symbol is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.*

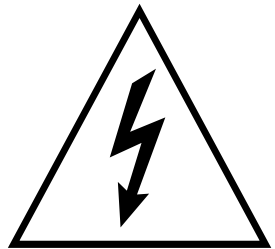

*This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.*



*This symbol is intended to alert you to use caution when moving a cart/apparatus combination to avoid injury.*

## INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

**READ THESE INSTRUCTIONS:** When using electric products, basic precautions should always be adhered to, including the following:

1. Read all instructions before using Proteus 2000 .
2. Keep these instructions.
3. Heed all warnings.
4. Follow these instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Install in accordance with E-MU's instructions. Do not block any openings. This apparatus should be situated so that its location or position does not interfere with proper ventilation. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, tablecloths, curtains, etc.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) which produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the grounding prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Use only attachments/accessories specified by E-MU Systems.
12. Use only with the cart, stand, tripod, bracket, or table specified by E-MU or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. It is recommended that Proteus 2000 be rack mounted. You'll need (4) rack spaces to fit Proteus 2000 into your rack.
13. Unplug the Proteus 2000 apparatus from the power outlet during lightning storms or when left unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, the apparatus does not operate normally or has been dropped.
15. No open flame sources, such as lit candles, should be placed on the apparatus.
16. The apparatus is designed for use in moderate climates.

## Radio and Television Interference

17. The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
18. To reduce the risk of injury, close supervision is necessary when using the apparatus near children.
19. The apparatus should be connected only to a power supply of the type described in the operating instructions and marked on the product.
20. This product, in combination with an amplifier and headphones and speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, consult an audiologist.

The equipment described in this manual generates and uses radio-frequency energy. If it is not installed and used properly—that is, in strict accordance with our instructions—it may cause interference with radio and television reception.

This equipment has been tested and complies with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of the FCC rules. These rules are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that the interference will not occur in a particular installation, especially if a “rabbit ear” TV antenna is used.

If Proteus 2000 does cause interference to radio or television reception, you can try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move Proteus 2000 to one side or the other of the television or radio.
- Move Proteus 2000 farther away from the television or radio.
- Plug Proteus 2000 into an outlet on a different circuit than the television or radio.
- Consider installing a rooftop antenna with a coaxial lead-in between the antenna and television set.

# Wichtige Sicherheitsvorschriften

In Ländern außerhalb der U.S.A. können andere Kabel oder Stecker notwendig werden. Überlassen Sie die Wartung qualifiziertem Fachpersonal. Im Geräteinnern befinden sich keine Bauteile oder Steuerungen, die vom Anwender gewartet werden können. Das Gleiche gilt für das Netzteilgehäuse.

**VORSICHT:** Um die Gefahr eines Brandes oder Stromschlages zu verringern, sollten Sie das Gerät weder Regen noch Feuchtigkeit aussetzen.

## Erdungs- instruktionen

Das Gerät muss geerdet sein. Bei einem Defekt oder Ausfall bietet die Erdung dem elektrischen Strom den Weg des geringsten Widerstandes und reduziert das Risiko eines Stromschlages. Dieses Gerät ist mit einem geerdeten Leiter und Stecker ausgerüstet. Der Stecker muss in eine passende, einwandfrei montierte und geerdete Steckdose in Übereinstimmung mit den örtlichen Vorschriften eingeführt werden.

## Gefahr!

Unvorschriftsmäßiger Anschluss des Gerätes kann zum Risiko eines elektrischen Schlages führen. Im Zweifel über die ordnungsgemäße Erdung sollte ein qualifizierter Elektriker oder eine Service-Stelle hinzugezogen werden. Ändern Sie den mitgelieferten Stecker nicht. Falls er nicht in die Steckdose passt, sollte die Installation einer neuen Steckdose nur durch einen qualifizierten Techniker erfolgen.


## Wartungs- instruktionen für Anwender

1. Der sollte sauber und staubfrei gehalten werden. Das Gerät mit einem sauberen und säurefreien Tuch periodisch abreiben. Keine Lösungs- oder Reinigungsmittel anwenden.
2. Schmier- und Justieren sind nicht notwendig.

**Vorsicht:** Diese Gebrauchsanweisungen sind nur für qualifizierte Techniker bestimmt. Um die Gefahr eines elektrischen Schlages zu vermeiden, sollten Sie keine Arbeiten vornehmen, die nicht in diesen Instruktionen beschrieben sind. Wenden Sie sich bei weiteren Servicefragen nur an eine qualifizierte Servicestelle.



*Dieses Symbol weist Sie auf wichtige Bedienungs- und Wartungsanleitungen in den beiliegenden Drucksachen hin.*

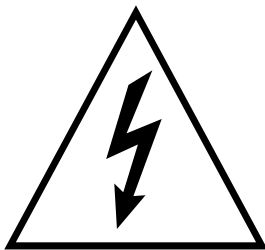

*Diese Symbol warnt Sie vor nicht-isolierten gefährlichen Spannungen im Gehäuseinnern. Diese können so hoch sein, dass die Gefahr eines Stromschlags besteht..*

## INSTRUKTIONEN ZUM BRANDRISIKO, STROMSCHLAG ODER PERSONENSCHADEN

**BITTE LESEN:** Beim Einsatz elektrischer Geräte sollten folgende Vorsichtsmaßnahmen stets beachtet werden:

1. Lesen Sie vor dem Einschalten des Proteus 2000 alle Instruktionen.
2. Zur Vermeidung von Verletzungsrisiken müssen Kinder bei eingeschaltetem Proteus 2000 sorgfältig überwacht werden.
3. Den Proteus 2000 nicht in der Nähe von Wasser in Betrieb nehmen – z. B. in der Nähe von Badewannen, Waschschüsseln, auf nassen Gestellen oder am Swimmingpool.
4. Den Proteus 2000 keiner tröpfelnden oder spritzenden Feuchtigkeit aussetzen. Keine mit Flüssigkeit gefüllten Objekte, wie Vasen, auf das Gerät stellen.
5. Den Proteus 2000 stets so aufstellen, dass seine Belüftung nicht beeinträchtigt wird.
6. Den Proteus 2000 nicht in der Nähe von Hitzequellen aufstellen, wie Heizkörper, offenem Feuer, Öfen oder von Backöfen.
7. Keine offenen Feuerquellen, wie Kerzen, auf dem Proteus 2000 abstellen.
8. Der Proteus 2000 ist nicht für den Einsatz in extremen Klimaverhältnissen konzipiert.
9. Den Proteus 2000 ausschließlich mit einem Netzgerät gemäß Bedienungsanleitung und Gerätemarkierung verwenden.
10. Achten Sie darauf, dass keine Objekte oder Flüssigkeiten durch Öffnungen ins Proteus 2000 Gehäuse gelangen.
11. Der Proteus 2000 ist mit einem polarisierten Kabelstecker (mit zwei flachen Polen und einem Erdungsstift) ausgerüstet. Das geschieht zu Ihrer Sicherheit. Können Sie den Stecker nicht in die Steckdose einführen, ändern Sie nicht den Stecker ab, sondern wenden Sie sich an einen Elektriker, um die veraltete Steckdose ersetzen zu lassen.
12. Verlegen Sie das Stromkabel so, dass niemand darüber laufen oder stolpern und es nicht durch schwere Gegenstände geknickt werden kann. Achten Sie besonders auf Netzstecker, Mehrfachsteckdosen und den Kabelanschluss am Gerät.
13. Das Netzkabel bei Gewittern oder längerem Nichtgebrauch aus der Steckdose ziehen.
14. Dieses Gerät kann bei Verwendung von Kopfhörern und Verstärkern hohe Lautstärkepegel erzeugen, welche zu bleibenden Gehörschäden führen. Arbeiten Sie nicht während längerer Zeit mit voller Lautstärke oder hohem Pegel. Stellen Sie Hörverlust oder Klingeln in den Ohren fest, wenden Sie sich an einen Ohrenarzt.
15. Verwenden Sie nur die von E-MU Systems empfohlenen Befestigungen und Zubehörteile.
16. Überlassen Sie die Wartung qualifiziertem Fachpersonal. Das Gerät soll durch qualifizierte Fachkräfte gewartet werden, wenn:

- A. das Netzkabel beschädigt wurde oder
- B. Gegenstände oder Flüssigkeit in das Gerät gelangten,
- C. das Gerät Regen ausgesetzt war oder
- D. das Gerät stürzte oder sein Gehäuse beschädigt wurde
- E. das Gerät nicht normal oder einwandfrei arbeitet oder Betriebsstörungen auftreten

## **Diese Instruktionen aufbewahren**

## **Alle Warnungen beachten**

## **Alle Instruktionen befolgen**

## **Radio und TV-Interferenzen**

Das in diesem Handbuch beschriebene Equipment verwendet und erzeugt Frequenzen im Radio/Fernsehbereich. Wird das Gerät nicht entsprechend den hier beschriebenen Regeln installiert, können Störungen im Rundfunk- und Fernsehempfang entstehen.

Das Gerät wurde getestet und entspricht den Regeln für Class B Computer entsprechend den Spezifikationen in Subpart J von Part 15 der FCC Bestimmungen. Diese sollten angemessenen Schutz vor solchen Interferenzen in Wohngebieten liefern. Es kann aber nicht garantiert werden, dass diese Interferenzen bei bestimmten Installationen nicht doch auftreten – besonders bei Verwendung von bestimmten TV-Zimmerantennen. Sollte der Proteus 2000 den Radio- oder TV-Empfang stören, versuchen Sie mit folgenden Maßnahmen, die Ursache zu beheben.

- Bewegen Sie den Fernseher oder die Antenne, bis die Störungen verschwinden.
- Stellen Sie den Proteus 2000 auf die jeweils andere Seite des TVs oder Radios.
- Stellen Sie den Proteus 2000 weiter entfernt vom Radio oder TV auf.
- Verwenden Sie einen anderen Stromkreis für den Proteus 2000.
- Installieren Sie eine Dachantenne mit einer koaxialen Antenneneinführung zwischen Antenne und TV-Gerät.

## **Urheberrechts- Informationen**

Die Firmenpolitik von E-MU / ENSONIQ gestattet allen Anwendern freie, vollständige und uneingeschränkte Nutzung aller Presets, Beats, Riffs, Patterns und Audition-Dateien, die in unseren Produkten enthalten sind. Wir können Ihnen allerdings nicht erlauben, die Demo-Dateien erneut zu verwenden, zu modifizieren, darauf aufzubauen oder diese zu verkaufen/vertreiben. Meistens sind diese Kompositionen von den jeweiligen Autoren urheberrechtlich geschützt und an E-MU / ENSONIQ nur zur Produktdemonstration lizenziert. Setzen Sie sich bei weiteren Fragen bitte mit E-MU / ENSONIQ in Verbindung.



## Consignes de sécurité importantes

L'utilisation de l'appareil dans d'autres pays que les États-Unis peut nécessiter l'usage d'un cordon d'alimentation et/ou d'une prise différent(s). Consultez un technicien qualifié pour toute réparation. L'appareil et le dispositif d'alimentation ne contiennent aucune pièce réparable par l'utilisateur.

**ATTENTION :** Afin de réduire les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie ou à l'humidité.

### Mise à la terre

Cet appareil doit être relié à la terre. En cas de dysfonctionnement, la terre fournit un passage de moindre résistance pour le courant électrique et réduit ainsi les risques d'électrocution. L'appareil Proteus 2000 équipé d'un cordon d'alimentation muni d'un conducteur et d'une fiche polarisés. Cette fiche doit être insérée dans une prise secteur appropriée correctement installée et reliée à la terre conformément aux normes locales.

### Danger

Une mauvaise mise à la terre peut entraîner des risques d'électrocution. Consultez un électricien ou un technicien qualifié si vous avez des doutes quant à la mise à la terre de l'appareil. Ne modifiez pas la fiche du cordon d'alimentation fourni avec l'appareil. Si vous ne pouvez pas l'insérer dans la prise, adressez-vous à un technicien qualifié pour faire poser une prise du modèle adapté.


### Maintenance

1. Le Proteus 2000 doit toujours être propre et maintenu à l'abri de la poussière. Nettoyez-le régulièrement à l'aide d'un chiffon sec, propre et non-pelucheux. N'utilisez pas de solvants ni de produits de nettoyage.
2. Aucune lubrification et aucun réglage ne sont nécessaires de votre part.

**Attention :** Les instructions de maintenance sont uniquement destinées à un personnel qualifié. Afin d'éviter tout risque d'électrocution, n'intervenez pas au-delà des instructions décrites dans ce mode d'emploi. Confiez toute réparation à un technicien qualifié.



Ce symbole attire l'attention de l'utilisateur sur la présence d'instructions d'utilisation et de maintenance importantes dans le mode d'emploi fourni avec l'appareil

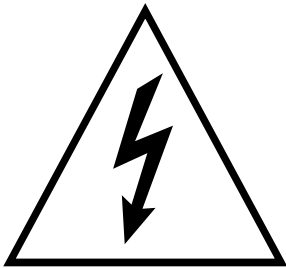

Ce symbole attire l'attention de l'utilisateur sur la présence de tensions élevées dans l'appareil, susceptibles de constituer un risque d'électrocution.

## CONSIGNES RELATIVES AUX RISQUES D'INCENDIE, D'ÉLECTROCUTION OU DE BLESSURES CORPORELLES

**LISEZ CES CONSIGNES :** Lorsque vous utilisez des appareils électriques, certaines précautions élémentaires doivent toujours être respectées. En voici quelques-unes:

1. Lisez toutes les instructions avant d'utiliser le Proteus 2000.
2. Afin de limiter les risques de blessures, une surveillance particulière est nécessaire lorsque vous utilisez le Proteus 2000 en présence d'enfants.
3. N'utilisez pas le Proteus 2000 près de l'eau (près d'une baignoire, d'un lavabo, d'un évier, dans un sous-sol humide, sur une surface mouillée ou près d'une piscine, par exemple).
4. N'exposez pas l'appareil aux éclaboussures. Ne posez aucun récipient contenant de l'eau (vases, par exemple) sur le Proteus 2000.
5. Le Proteus 2000 doit être placé de sorte que sa position ou son emplacement ne gênent pas sa ventilation.
6. Ne placez pas le Proteus 2000 à proximité de sources de chaleur (radiateur, cheminée ou four, par exemple).
7. Ne posez aucune source incandescente (bougies, par exemple) sur le Proteus 2000.
8. Le Proteus 2000 ne doit pas être utilisé dans des environnements à températures extrêmes.
9. Le Proteus 2000 doit uniquement être connecté à une alimentation du type décrit dans le mode d'emploi et sérigraphié sur l'appareil.
10. Veillez à ce qu'aucun corps ou liquide étranger ne s'introduise dans le Proteus 2000.
11. Le Proteus 2000 est équipé d'une fiche polarisée (une broche plus large que l'autre). Ce type de fiche constitue une mesure de sécurité. Si vous ne pouvez pas insérer la fiche dans la prise, contactez un électricien pour faire poser une prise du modèle adapté.
12. Faites circuler le cordon d'alimentation de sorte qu'il ne puisse pas être écrasé ou pincé par d'autres objets. Soyez particulièrement vigilant au niveau des connexions à l'appareil ou aux prises secteur.
13. En cas d'orage ou si l'appareil doit rester inutilisé pendant une période prolongée, débranchez le cordon d'alimentation du Proteus 2000 de la prise secteur.
14. Cet appareil, associé à un amplificateur et à un casque ou des enceintes, est capable de délivrer des niveaux sonores susceptibles d'entraîner des pertes auditives irréversibles. Ne l'utilisez pas de manière prolongée à un niveau élevé ou inconfortable. En cas de troubles de l'audition ou de bourdonnement d'oreilles, consultez un spécialiste.
15. Utilisez uniquement les accessoires préconisés par E-MU Systems.

16. Confiez l'appareil à un technicien qualifié dans chacun des cas suivants :
- A. Le cordon d'alimentation ou la prise a été endommagé.
  - B. Des corps étrangers ou du liquide se sont introduits dans l'appareil.
  - C. Le Proteus 2000 a été exposé à la pluie ou à l'humidité.
  - D. Le Proteus 2000 est tombé ou a été endommagé d'une manière ou d'une autre.
  - E. Le Proteus 2000 ne fonctionne pas normalement ou présente une baisse sensible de ses performances.

**Conservez ces instructions.**

**Respectez tous les avertissements**

**Suivez toutes les instructions**

## Interférences radio et TV

L'appareil décrit dans ce mode d'emploi génère et utilise des fréquences radio/TV. S'il n'est pas installé conformément aux instructions décrites, il peut interférer avec la réception TV ou radio.

Cet appareil a été testé et est conforme aux normes de Classe B selon les spécifications du paragraphe J de la section 15 des dispositions FCC. Ces dispositions sont conçues pour protéger les installations résidentielles contre ce type d'interférences. Toutefois, l'absence d'interférences ne saurait être totalement garantie avec certains types d'installations, en particulier si vous utilisez certaines antennes TV internes.

Si le Proteus 2000 interfère avec la réception TV ou radio, vous pouvez essayer les mesures suivantes:

- Réorientez l'antenne ou le poste de télévision jusqu'à ce que les interférences disparaissent.
- Placez le Proteus 2000 de l'autre côté du poste de télévision ou de la radio.
- Eloignez le Proteus 2000 du poste de télévision ou de la radio.
- Branchez le Proteus 2000 sur une prise différente de celle de la télévision ou de la radio.
- Installez une antenne sur le toit par le biais d'une connexion coaxiale entre l'antenne et le poste de télévision.



# *Setup*

## Unpacking

This section thoroughly describes how to set up your new Proteus 2000 for use. Setup includes unpacking instructions and how to connect the Proteus 2000 cables.


Carefully remove Proteus 2000 from the packaging material. Take care to save the packing materials in case you need to transport the unit. Check to make sure all components are included and in good condition. If there are missing or damaged components, contact E-MU Systems immediately for replacement or repair.


The Proteus 2000 box should include the following components:

- Proteus 2000 unit
- Power cable
- Rack mounting ears
- This Operations Manual

# Connection Instructions

## Basic Setup

 If Proteus 2000 does not seem to be responding correctly, make sure that both Proteus 2000 and your MIDI controller are set to the same MIDI channel.

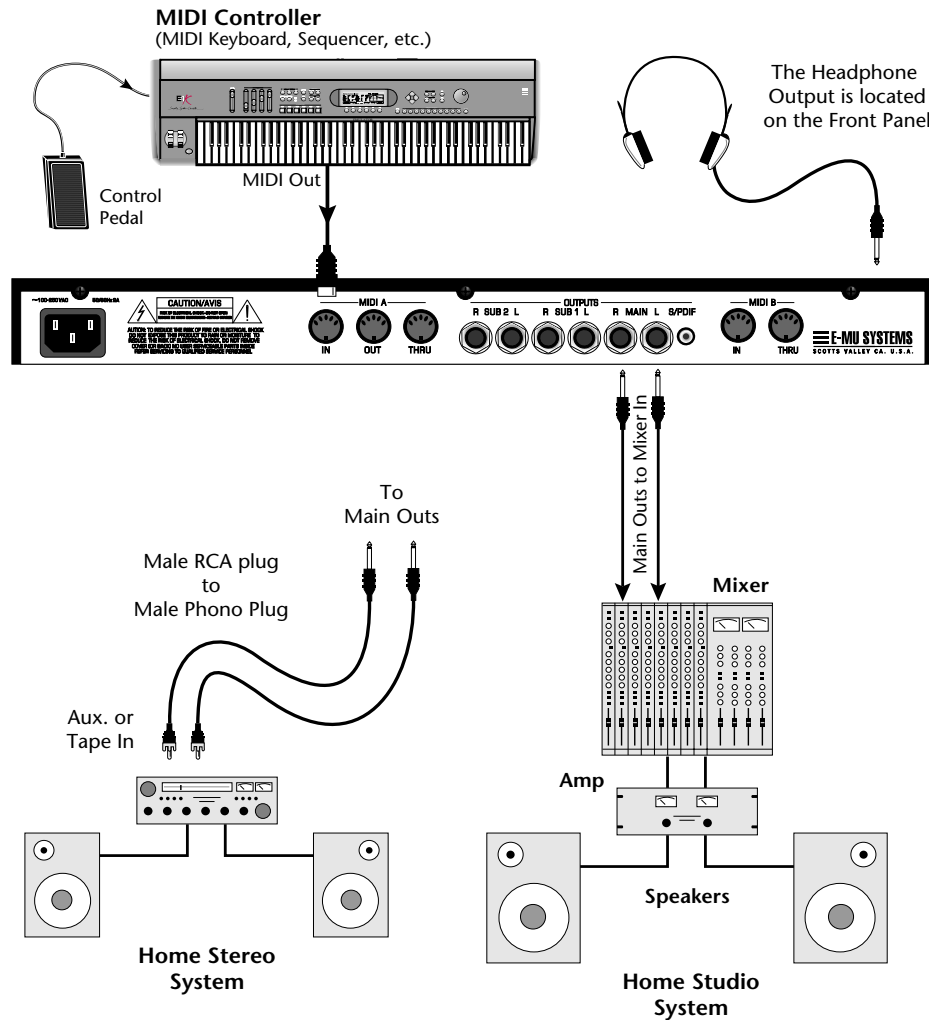


## MIDI In

Proteus 2000 is controlled by MIDI messages received at the MIDI A jack. Normally you will connect MIDI Out of a controller such as a MIDI keyboard, MIDI wind controller or MIDI guitar controller to the MIDI A jack of Proteus 2000.

## Outputs

Proteus 2000 is a high quality, stereo audio device. In order to reproduce its wide dynamic range and frequency response, use a high quality amplification and speaker system such as a keyboard amplifier or home stereo system. A stereo setup is highly desirable because of the added realism of stereophonic sound. Headphones can be used if an amplifier and speaker system is not available. Plug stereo headphones into the headphone jack located on the left side of the front panel. The Right Main output jack serves as a mono output when the Left Main plug is not plugged in. The Left Main output jack is a stereo jack carrying both channels. The S/PDIF output duplicates the function of the main output.

## Studio Setup

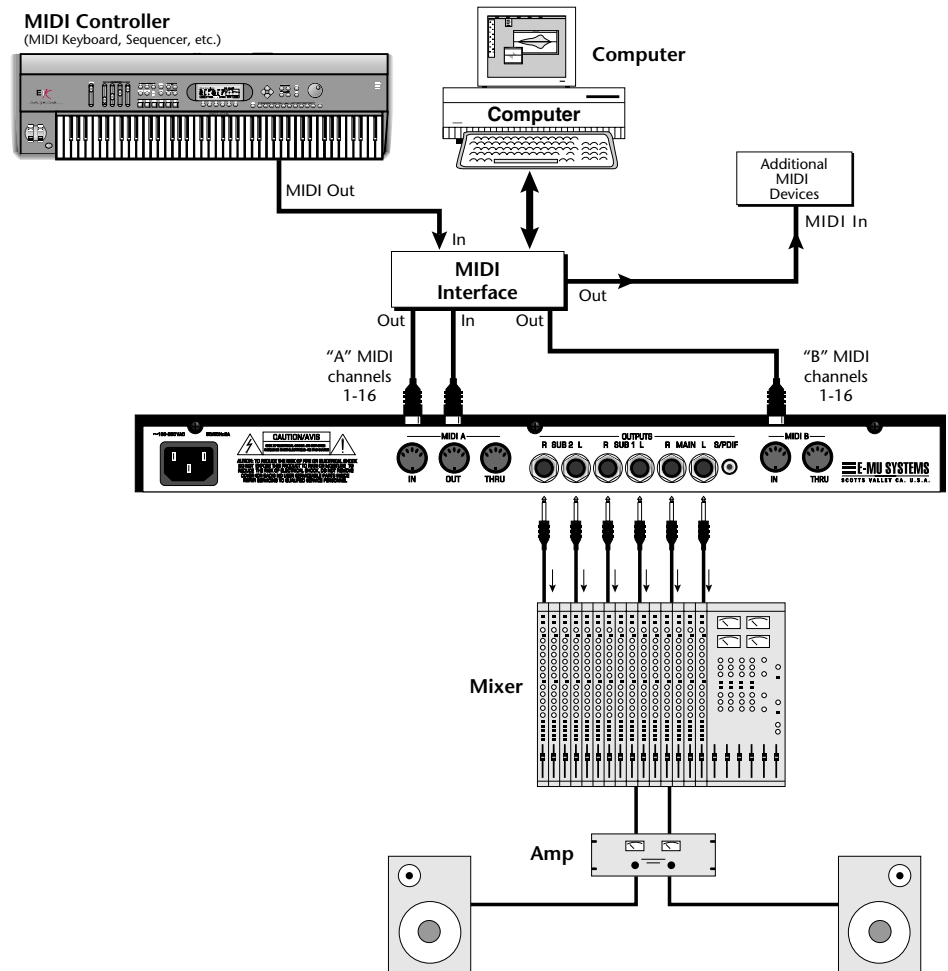

### MIDI In

In this setup, Proteus 2000 is controlled by MIDI messages, received at both MIDI A and MIDI B inputs, which are routed by the MIDI interface. Each MIDI input handles 16 MIDI channels for a total of 32 channels. The MIDI interfaces allow any MIDI controller, such as a MIDI keyboard or a computer, to control the module.


### MIDI Out

The MIDI Out jack transmits program data to a computer or other device.

### Outputs

Three sets of programmable stereo outputs (Main, Sub 1, and Sub 2) are provided. The internal effects are available only on the Main outputs. Specific presets (or MIDI channels) can be routed to one of these stereo pairs in order to be processed further or mixed separately. The S/PDIF output duplicates the function of the main output.

## Performance Setup

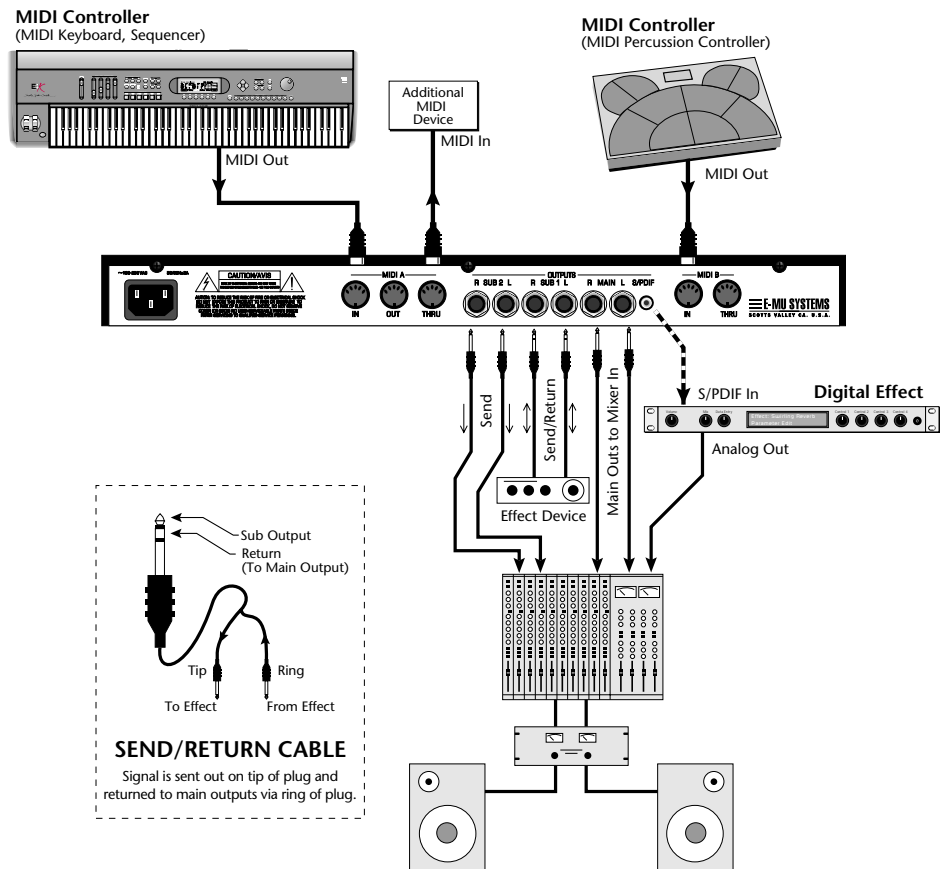

### MIDI In

Proteus 2000 is controlled by MIDI messages received at either MIDI input. In a live performance situation, you might want to use two MIDI controllers as shown above. Connect MIDI outputs of your MIDI controllers such as a MIDI keyboard, MIDI drum pads or a MIDI sequencer to MIDI Inputs A and B of Proteus 2000.

### MIDI Thru

The MIDI Thru jack is used to connect additional MIDI devices onto the MIDI chain. MIDI Thru transmits an exact copy of the messages received at the respective MIDI In jack (A or B).

### Outputs


The Sub 1 and Sub 2 output jacks are stereo jacks. The tip of each jack (accessed when a standard phone plug is inserted) connects to the left or right output of that group. The S/PDIF output duplicates the function of the main output.



If you insert a stereo plug into one of the Sub Outputs, the ring of the plug serves as a signal Return which sums into the Main outputs.

**Therefore, the Sub 1 and Sub 2 jacks can serve as effect sends and returns in order to further process selected instruments and then return them to the main mix.**

You can use the Sub 1 and Sub 2 jacks as send/returns in order to further process selected Proteus 2000 presets without using the effects bus on the mixing board. In a pinch, the effect returns can be used to sum additional instruments into the main outputs. It's like having an extra line mixer when you need more inputs!

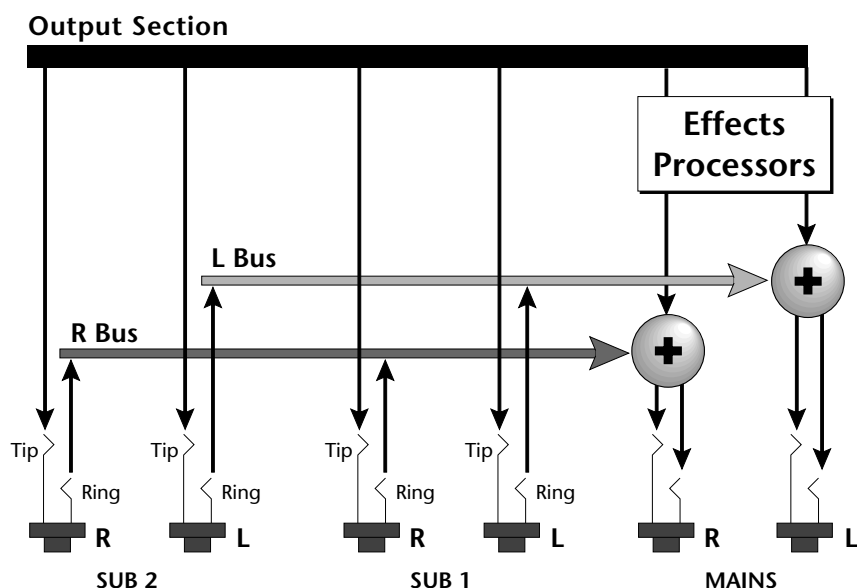

You can use the Sub 1 and Sub 2 jacks as effect returns to the Main Outputs.  
Note that the Effects Processors are only routed to the Main Outputs.

## Power Up!

The power switch is located on the right side of the front panel. You can turn on the Proteus 2000 and its MIDI controller in any order. When power is applied the liquid crystal display will light, indicating that Proteus 2000 is operating. You may have noticed that there is no 110/220 Volt power selector switch on Proteus 2000.

**Proteus 2000 automatically switches itself to the proper line voltage.**

## Instant Gratification

### *Playing Demo Sequences*

This section presents step-by-step instructions for the most fundamental operations to get you up and making sounds quickly.

Proteus 2000 has several factory demonstration sequences that let you hear what this incredible machine can do. The actual number of demo sequences depends on which ROM sounds sets are installed. You can play these demo sequences by accessing the Demo Sequence page.



#### ► To Play a Demo Sequence

1. Press and hold the **Master** and **Edit** buttons at the same time to enter the Demo Sequence page. The screen shown above appears.
2. Select a sequence using the data entry control. The Enter LED will be flashing.
3. Press the Enter button to begin playing the selected sequence. The screen shown below appears.




4. Press the Enter button again to stop playing the sequence.
5. When a demo sequence plays to the end, the next demo will automatically begin playing. The screen will display the new demo name.
6. With the sequence stopped, press either the Master, Edit or Multi button to Exit the demo sequence mode.

### *Auditioning Presets*

The front panel audition button allows you to hear any preset in Proteus 2000 without even hooking up a MIDI keyboard! When the Audition button is pressed, the LED next to the button will illuminate and a short "Riff" (programmed as part of the preset) will play. The Riff is latched on and plays continuously until the button is pressed again. Presets can be changed while Audition is latched on.

The top line of the display changes to show the MIDI Bank Select controller values needed to select the preset being auditioned. This is an extremely handy feature when sequencing.


## Selecting and Quick Editing Presets

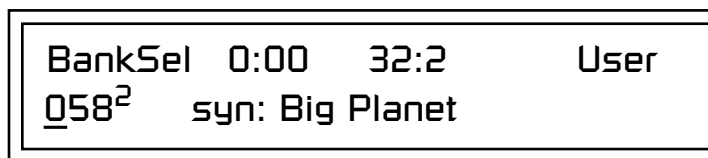

### ► To Audition a Preset

1. Select a preset by turning the data entry control while the cursor is anywhere on the lower line. The preset number field (shown above) is the normal position of the cursor and pressing the Enter button will return the cursor to this position.
2. Press the Audition button on the front panel. The Audition LED will illuminate and a short riff will play the selected preset.
3. Continue to select and audition presets.
4. Press the Audition button again to turn Audition mode off. The LED will extinguish.

The first thing you'll do with the Proteus 2000 is select and play the factory provided presets. Proteus 2000 comes standard with 12 banks containing 128 presets each.

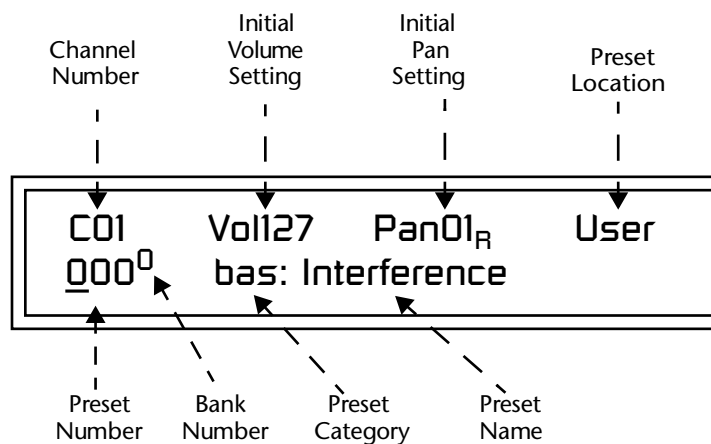

The first four banks are User locations that can be overwritten and used to store your own presets. The presets that come stored in the User presets are duplicated in banks 4-7 of the "CMPSR" ROM bank, so feel free to overwrite them with your own presets. You won't be losing anything.


The *ROM Card* identifier is shown in the top right of the display. The preset is identified in the bottom line of the main screen (the screen that appears when you first power up the unit).

Each bank of 128 presets is identified by a superscripted *Bank Number* to the right of the preset number. The bank numbers reset to 0 at the start of each ROM card you have installed. So with the composer ROM installed, the User banks will go from 0-3, then start over from 0-7 for the CMPSR banks.

To the right of the preset number and bank is the preset *Category* name followed by the *Preset Name*.

### ► To Change the Preset

1. Place the cursor under the first character in the Preset Number field. This is the “Home” position which is selected instantly when you press the Home/Enter button. Pressing either of the two cursor buttons repeatedly also gets you there.
2. Turn the Data Entry Control knob on the front panel to select a new preset number. If you turn the knob slowly, the presets advance one number for each “click” of the knob. If you spin the knob quickly, the numbers advance much faster (more than one number per click).
3. Play the keyboard (or press the Audition button) and listen to the sounds made by your Proteus 2000!
4. **TURN THE FOUR KNOBS** on the front panel and note how they change the sound of each preset! The button to the left of the knobs changes the knob’s function. Don’t worry about ruining the sound, the values are automatically reset as soon as you select a new preset.


 You can select presets from the Preset Number, Bank Number, Preset Category or Preset Name fields.

Bank Organization		
<b>USER</b>	Bank 0	128 Presets
<b>USER</b>	Bank 1	128 Presets
<b>USER</b>	Bank 2	128 Presets
<b>USER</b>	Bank 3	128 Presets
<b>CMPSR</b>	Bank 0	128 Presets
<b>CMPSR</b>	Bank 1	128 Presets
<b>CMPSR</b>	Bank 2	128 Presets
<b>CMPSR</b>	Bank 3	128 Presets
<b>CMPSR</b>	Bank 4	128 Presets
<b>CMPSR</b>	Bank 5	128 Presets
<b>CMPSR</b>	Bank 6	128 Presets
<b>CMPSR</b>	Bank 7	128 Presets

The User Banks are duplicated in the Composer ROM bank.

The four User Banks can hold 512 custom presets. Feel free to overwrite these since the factory user presets are duplicated in nonvolatile ROM.

# Basic Operations

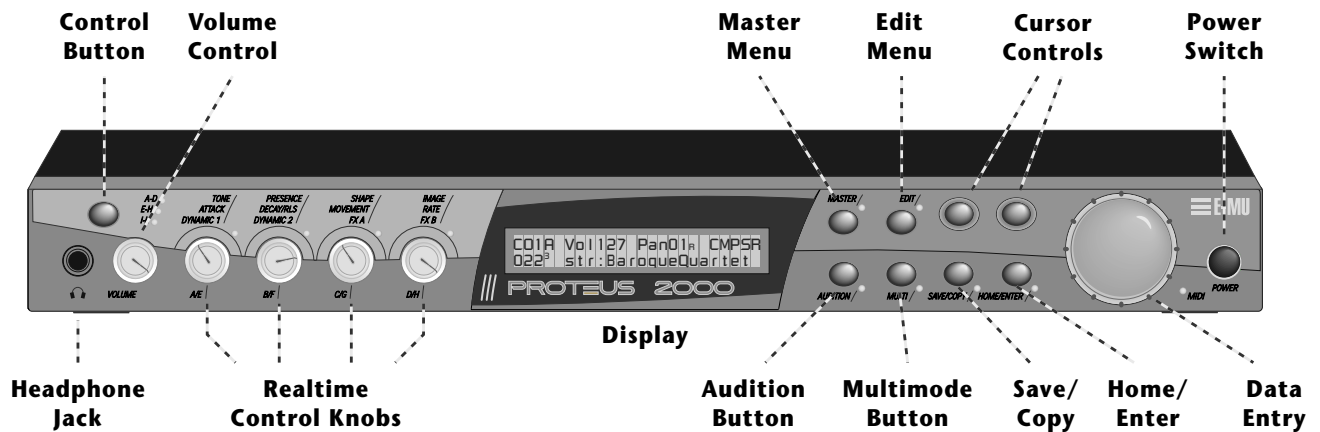

## Front Panel

The Proteus 2000 front panel contains an LCD screen, nine buttons and four real-time controllers. Functions are grouped logically and the controls are arranged for ease of use. Precisely because Proteus is so simple to use, you might be tempted to skip this section. If you just can't help yourself, at least read the Real-time Controller information beginning page 23. There are several "power user" features in the interface which make programming even easier and we wouldn't want you to miss them.

### Volume Control

This control is the master volume control for all audio outputs. The Volume Control does not affect any editing or user interface operations.

### Master Button

The Master menu contains parameters that affect the entire machine, not just certain presets. An illuminated LED to the right of the button indicates that you are in the Master menu.

### Edit Button

Use the Edit menu when you want to create or modify a preset. An illuminated LED to the right of the button indicates that you are in the Edit menu.

### Control Button

The Control button is used to change the function of the Controller knobs (see the next section). Each time you press the Control button, the Control Mode toggles to select only one of the three Control Rows. The currently selected Control Row is indicated by one of the three LEDs to the right of the row's label.


## Audition Button



See "Bank Select Commands" on page 82 for more information on selecting banks via MIDI.

The Audition button allows you to hear any preset without hooking up a MIDI keyboard. When the Audition button is pressed, the LED next to the button will illuminate and a short "Riff" (programmed as part of the preset) will play. The Riff is latched on and plays continuously until the button is pressed again. Presets can be changed while Audition is latched on.

The top line of the display changes to show the MIDI Bank Select controller values needed to select the preset being auditioned. This handy feature lets you know the exact Bank and Preset number to enter into your sequencer.

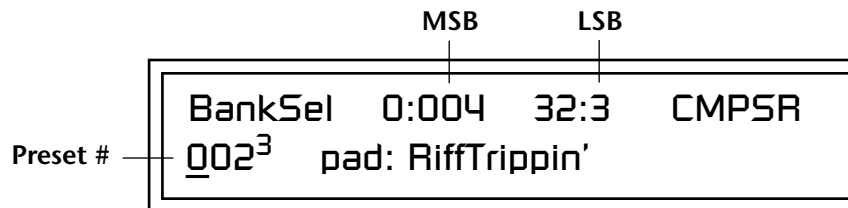

## Left/Right Cursor Buttons

These buttons move the cursor to the next parameter on the display. (The cursor is a little flashing line underneath one of the parameters in the display.) Press either cursor button until the cursor is underneath the desired parameter. The cursor buttons have an auto-repeat feature which advances the cursor when the button is held continuously.

The cursor can be moved bidirectionally using the Data Entry Control while either cursor select button is held down (for example, press and hold the right cursor button and turn the Data Entry Control).

## Multimenu Button

The Multimenu button allows you to select a Multi-setup. A Multi-setup is a group of parameters that you might associate with a particular sequence or song. It is like a "snapshot" of the current configuration of the module. There are 128 setups numbered 0-127.

A Multisetup includes all of the following parameters:

- The Preset/Volume/Pan assignments for each of the 32 MIDI channels.
- All Master menu parameters, except for the User Tuning Tables and the MIDI program change->preset map.
- The Multisetup name.

## Save/Copy Button

The Save/Copy button is used to save or copy presets and to copy data. Selected groups of parameters, such as PatchCord settings, can be copied between Presets and/or between Layers using this menu.

The LED to the right of the button illuminates to indicate that you are in the Save/Copy menu. The LED also illuminates when any preset parameter has been changed in the Edit menu (or if the front panel knobs have been moved with Quick-Edit mode enabled).

### *Home/Enter Button*

The Home/Enter button is dual purpose. In general, this button acts as the “Home” button. For example, when in an Edit menu, this button snaps the cursor to the page name field of the current screen. When viewing the Preset Select screen (we also call it the main screen), this button snaps the cursor to the preset number field. In these instances, the LED is not used.

Some screens and parameter fields use this button as the “Enter” button. In these cases, the LED blinks when the cursor is moved to one of these fields indicating that the module is waiting for your response to initiate the operation.

### *Data Entry Control*

The Data Entry Control is a stepped, variable control switch used to change parameter values. The wheel increments or decrements the current value one unit with each click. This control incorporates acceleration, which advances the value faster if the Data Entry Control is turned quickly.

### *Controller Knobs*

Each of the four Real-time Controller knobs has a corresponding LED to its upper right side. The function of the Real-time Controllers depends on which row is currently selected and the programming of the preset.

## **Front Panel Controller Modes**

The Real-time Controller Knobs serve three purposes:

1. Real-time control of synthesizer parameters
2. “Quick Editing” the initial settings of the real-time controllers
3. “Deep Editing” the parameters

This section describes each of the three uses.

### *Real-time Control*

The Real-time controller knobs provide direct control of the Proteus 2000’s synthesizer parameters. They are always active when on the Preset Select (main) screen. They can optionally be used to transmit MIDI controller messages to other MIDI devices.

The Control button (left of the knobs) changes the function of the real-time controller knobs. Each time the button is pressed, the Control Mode toggles to select one of the three Control Row groups. The currently selected Control Row is indicated by the illuminated LED to the right of the button. The control knob functions are determined by the selected Control Row.

The three Control Rows generate MIDI data that can control the preset on the current MIDI channel (the channel showing on the Preset and main screen. The labels (Tone, Presence, Shape, Image, etc.) printed on these rows show how the factory ROM presets may be programmed to respond. *(The controls might not conform to the front panel labels depending on the preset.)* You can change the way a preset responds to MIDI A-L messages from the Edit menu (PatchCords).

There is an LED next to each of the control knobs which illuminates to indicate that the knob setting has been changed from the value programmed in the preset (when Quick Edit mode is enabled). If the knob position is returned to the original setting, the LED is extinguished.

If the “*Knobs MIDI Out*” parameter in the Master menu (see “Knobs/Riff MIDI Out” on page 49) is set to “transmit,” the system sends a MIDI controller message when you turn off the Control knob. The MIDI controller message is sent on the current MIDI channel (also called the basic channel) using the controller number assigned in the Master menu (see “Real-time Controller Assignment” on page 46).

The knobs only generate a message when you move a knob to a new value. The current value jumps to the new value.

## Quick Edit

This mode uses the Controller knobs to “Quick-Edit” the currently selected preset without having to enter the Preset Edit menu. This mode is only active when on the Preset Select screen and when “Quick-Edit” is enabled in the Master menu (see “Knob Preset Quick-Edit” on page 48).

Initial controller values can be stored in every preset. When you move a knob with Quick-Edit enabled, the Initial Controller Value is updated with the knob’s new value. The knob’s LED lights indicating that the preset value has been changed. The three Control Rows’ MIDI A-L values are stored in the corresponding *Initial Controller Amount* parameter in the Edit menu (see “Initial Controller Amount” on page 125). The Save/Copy button LED illuminates to remind you that the preset has been edited. “Quick-Edits” made to a preset are lost if you select another preset before saving them.



*Quick-Edit mode must be enabled in the Master menu.*

### ► To Quick-Edit a Preset

1. Use the Control Knobs to change the sound of the current preset as desired.
2. Press the Save/Copy button. The display reads, “Save Preset to.”
3. Press the right cursor button to select the bottom row.
4. Optional: Select a new preset location if you don’t want to overwrite the current preset, or if the current preset is a ROM preset.
5. Press the Enter button to save the preset.



## Deep Edit Mode

When in the Master, or Edit menus, you can use the Controller Knobs to edit parameters. Using the Controller Knobs is a faster method for entering data, but the Data Entry Control offers finer precision.

### ► To Enable Deep Edit Mode:

1. Press the Master button and use the Data Entry Control to advance to the “Knobs Deep Edit” screen as shown in the following illustration.




2. Press either Cursor key to move the cursor to the bottom line in the display.
3. Use the Data Entry Control to change the value to “enabled.”
4. Press the Master menu button to exit the Master menu.

### When you enter any of the Edit menus:

1. The four Controller Knobs are used for editing.
2. All the Controller LEDs are off.
3. All the Control Row LEDs are off.

When you turn a knob, the field value jumps to the current knob value. You can still use the Data Entry Control for editing by moving the cursor to the desired field.

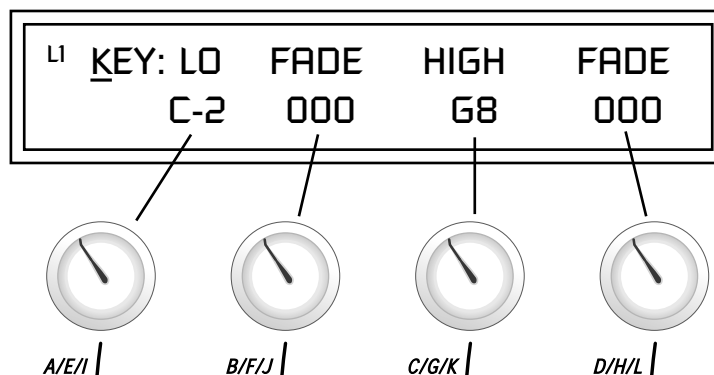


To move through menus horizontally, use the Data Entry Control (the page's title field is the default cursor position). To move through menus vertically (preset layers), press the left cursor to get to the layer field, then change layers with the Data Entry Control.

- Use the Data Entry Control to move through menus (horizontally) or layers (vertically).
- Use the Controller Knobs to change parameter values within each page.

## Main Screen

The Preset Select screen is Proteus 2000's default screen (also called the main screen) and is active when you have not selected any of the other button-activated menus. From this screen you can change or examine the Preset, Volume, Pan Position and Preset Location for each of the 32 MIDI channels.

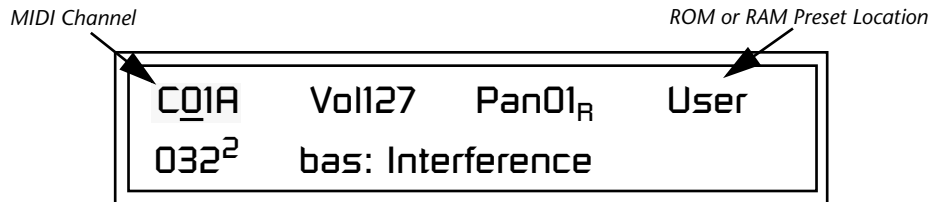

### MIDI Channel Selection



The channel number shown in the main screen is the "basic MIDI channel" when in Omni or Poly modes.

#### ► To Change the MIDI Channel

1. Press either cursor button until the cursor is underneath the channel number. (The cursor is the little flashing line underneath one of the parameters in the display.)
2. Rotate the Data Entry Control to select a MIDI channel (01A-16A, 01B-16B). As the channel number changes, the display changes to show the preset, volume, pan and preset location associated with the displayed channel.


### Preset Selection

Bank	Contents
0	– 128 RAM Presets
1	– 128 RAM Presets
2	– 128 RAM Presets
3	– 128 RAM Presets
ROM 1	0 – 128 ROM Presets
	1 – 128 ROM Presets
	2 – 128 ROM Presets
	⋮
	??
	Depending on ROM sets installed

The User preset banks can be modified or replaced with your own sounds.

#### ► To Change the Preset

1. Press either cursor key until the cursor is underneath the preset number. (The cursor is a little flashing line underneath one of the parameters in the display.) As you rotate the Data Entry Control, the preset number and name changes.
2. The displayed preset is assigned to the displayed MIDI channel. Presets are arranged into banks of 128, as shown in the diagram at left.

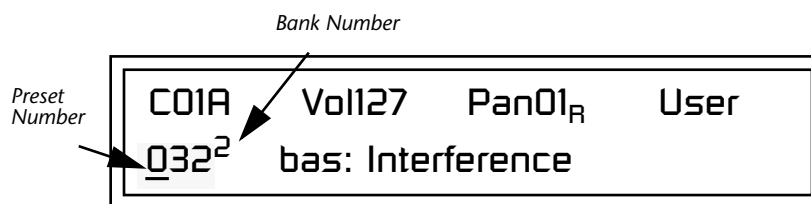

Using the screen above as an example, the superscripted number 2 in the second line of the display identifies the current bank number.


- Select banks independently of the of the preset number by locating the cursor on the Bank field and turning the Data Entry Control.

USER		COMPOSER	
Bank		Bank	Bank
0	128 User Presets	0	128 ROM Presets
1	128 User Presets	4	128 ROM Presets
2	128 User Presets	5	128 ROM Presets
3	128 User Presets	6	128 ROM Presets
		7	128 ROM Presets

The Bank numbers start at zero for each ROM sound set installed in Proteus 2000.

## Channel Volume

Channel Volume sets the volume of the selected MIDI channel in relation to the other channels. This is the same parameter as MIDI volume control #7, and changes made over MIDI are shown in the display.

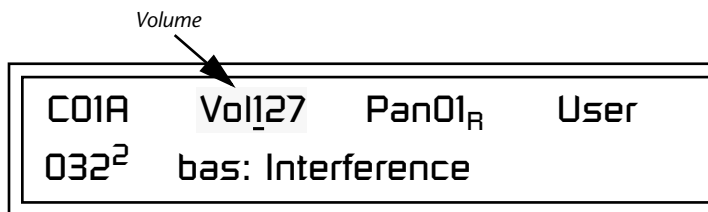


### ► To Change the Channel Volume

1. Press either cursor key until the cursor is underneath the volume value.
2. Rotate the Data Entry Control to select a volume level. The Channel Volume range is 000-127.

## Channel Pan

Channel Pan sets the stereo position of the selected MIDI channel. This control operates like the balance control on your home stereo system. Channel Pan is the same parameter as MIDI pan controller #10, and changes made over MIDI are shown in the display.

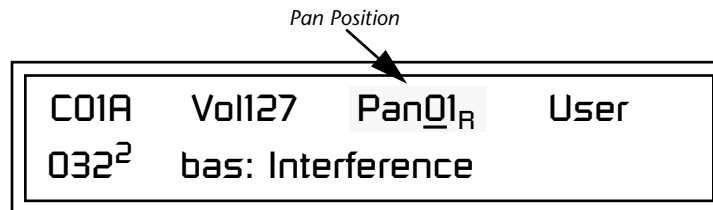

**Note:** Pan settings in the preset ADD algebraically with the Channel Pan setting. Therefore, if the pan setting in the preset were set to “63R,” moving the Channel Pan setting full left would return the sound to the center position.

### ► To Change the Channel Pan

1. Press either cursor key until the cursor is underneath the pan field.
2. Rotate the Data Entry Control to select a pan value. 64L indicates a hard left pan, 63R indicates a hard right pan. With a setting of “00,” the sound is centered in the stereo field.


# Sound Navigator

## Preset Category

Sound Navigator allows you to search through preset and instrument categories to find the type of sound you're looking for. Each preset and instrument has a name and a three letter preset category. You can create your own categories in order to group favorite presets. The preset category is assigned in the Edit menu (Preset Name). Instrument categories are fixed.

When you want to find presets in a particular category, you simply change the category field in the main screen, then move the cursor to the preset name field to scroll through all the presets in the selected category.

When the cursor is on the Preset Category field, turning the Data Entry Control selects different preset categories. The Name Field will change to show the first preset in each category.

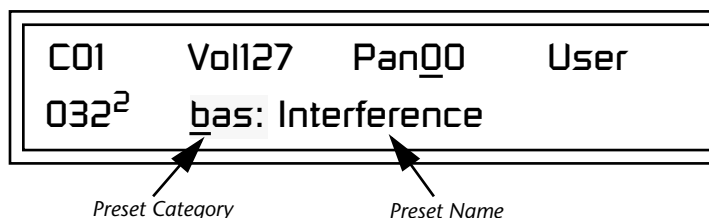

### ► To Change the Preset Category

1. Press either cursor key repeatedly until the cursor is underneath the preset category field.
2. Rotate the Data Entry Control to select one of the preset categories. Preset Categories are displayed in alphabetical order.

### ► To Select a Preset within a Category

1. After selecting a category, move the cursor to the Preset Name field.
2. Rotate the Data Entry Control to scroll through the presets in the selected category. Note that the preset numbers will no longer change sequentially.

## Instrument Category

When the cursor is on the Instrument Category field (Edit menu), turning the Data Entry Control selects different instrument categories. The Name Field changes to show the first instrument in each category. Move the cursor back to the instrument number to select instruments in the selected category.



# Multitimbral Operation




Save the Multisetup  
using the instruction provided in  
Chapter 3:Multisetup.

Multitimbral operation means that Proteus 2000 can play more than one sound at the same time. Follow these instructions to access multiple presets on different MIDI channels simultaneously.

## ► To Set Up Proteus 2000 for Multitimbral Operation

1. Set the MIDI mode to “multi mode,” using the MIDI mode function in the Master menu.
2. Decide which MIDI channels you want the Proteus 2000 to receive (32 channels can be used simultaneously). If you are using 16 MIDI channels or less, just use the “A” MIDI port. Use both MIDI ports if you need more than 16 MIDI channels. You can turn any unused channels OFF using the MIDI Enable function in the Master menu.
3. Select the desired preset for each of the MIDI channels you want the Proteus 2000 to receive using the MIDI Channel/Preset selection screen (see previous instructions).
4. Proteus 2000 now responds multitimbrally on each of the MIDI channels you have specified. The volume and pan position parameters can be adjusted over MIDI (for each MIDI channel) or using the Cursor and Data Entry Control in the Preset Select screen.

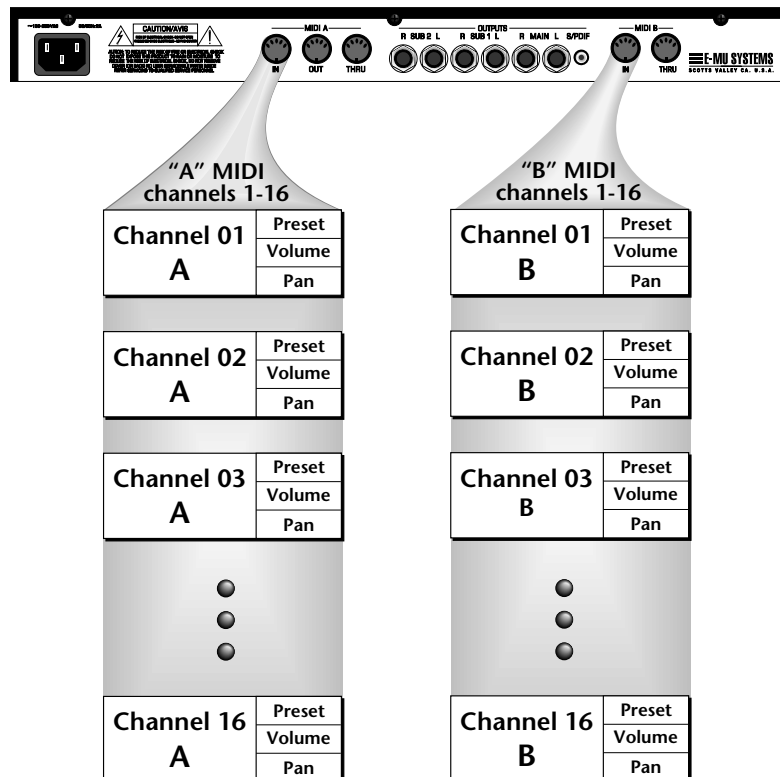

Proteus 2000 has two MIDI inputs with 16 MIDI channels each. Each of the 32 MIDI channels can be assigned to play a specific preset with unique volume and pan settings.

# Multimenu

## Multisetups

The Multimenu button allows you to save and restore Multisetups. A Multisetup is a group of parameters that you might associate with a particular sequence or song. It is like a “snapshot” of the current MIDI channel configuration of the module. There are 128 setups numbered 0-127. All Multisetups are user programmable.

### A Multisetup includes ALL the following parameters:

- Preset/Volume/Pan assignments for each of the 32 MIDI channels.
  - Multisetup Name
  - ALL MASTER MENU PARAMETERS except...
- MIDI Program Change->Preset map
  - User Key Tuning Tables



Multisetups can also be restored (selected) via MIDI Bank and Program change commands. Select: cc00 = 80, cc32 = 00, (dec) then send a Program Change command corresponding to the Multisetup you wish to select.

### ► To Enable the Multisetup Menu

Press the Multi button, lighting the LED. The Multisetup screen displays the menu page most recently selected since powering up Proteus 2000. The cursor appears below the first character of the screen heading on line one.

### ► To Select a New Screen

Press the Home/Enter button or press the Cursor button repeatedly until the cursor is below the screen title heading. Rotate the Data Entry Control to select another screen.

## Restoring Multisetups

### ► To Modify a Parameter

Press either Cursor button repeatedly (or hold down the left or right cursor button while turning the Data Entry Control) until the cursor is below the desired parameter value. Rotate the Data Entry Control to change the value.

### ► To Return to the Main Screen

Press the Multi button, turning off the LED.

Proteus 2000 contains 128 Multisetup locations. These are all User locations which you can use to store your own Multisetups.

Multisetups can also be restored using a MIDI Bank Select command.

**Select:** cc00 = 80, cc32 = 00, (dec) then send a **Program Change** command corresponding to the Multisetup you wish to select.



### ► To Restore (Select) a Multisetup:

1. Press the Multi menu button lighting the LED. The Multi menu screen displays the menu page most recently selected since powering up Proteus 2000. The cursor appears below the first character of the screen heading on line one.
2. Go to the "Restore Multisetup" screen (shown above) using the Data Entry Control. This is the first screen in the menu.
3. Press either cursor button to move the cursor to the bottom line of the screen.
4. Now, use the Data Entry Control to select a Multisetup. The Enter LED will be flashing.
5. Press the Enter button to load the selected Multisetup.

### ► To Save a Multisetup:

1. Set the Preset, Volume, Pan settings the way you want them for all 32 channels. Set the Master menu parameters the way you want them.
2. Press the Multi menu button lighting the LED.



3. If you wish to Name your new Multisetup continue on, otherwise skip to step 8.
4. Scroll to the "Setup Name" screen (shown below) using the Data Entry Control.

**SETUP NAME**

**020 User Setup 23**

5. Press either cursor button to move the cursor to the bottom line of the screen.
6. Scroll to the "Save Multisetup" screen (shown below) using the Data Entry Control.

**SAVE MULTISSETUP to**

**020 Destination Multisetup**

7. Press either cursor button to move the cursor to the bottom line of the screen.
8. Now, use the Data Entry Control to select the destination location. The Enter LED will be flashing.
9. Press the Enter button to save the Multisetup.

# Multitimbral Sequencing

“Multitimbral” means that Proteus 2000 can play multiple sounds at the same time. For a multitimbral sequence to play back correctly, the proper preset must be selected for each MIDI channel. This could be done by inserting preset changes into each track of your sequence before the sequence starts. Proteus 2000 also provides another way to store this “pre-sequence setup” using the Multisetup menu.

Using Multisetups, you’ll set up the preset, volume and pan settings for each MIDI channel as you build your sequence, then save the Multisetup when it’s the way you want it. Sending one preset change command before the sequence starts selects the Multisetup and MIDI settings for all 32 channels.

## ► To Set up Proteus 2000 for Multitimbral Operation

1. Set the MIDI mode to “multi mode,” using the MIDI mode function in the Master menu.
2. Decide which MIDI channels you want Proteus 2000 to receive (32 channels can be used simultaneously). If you are using 16 MIDI channels or less, just use one of the MIDI ports. Use both MIDI ports if you need more than 16 MIDI channels. You can turn any unused channels OFF using the MIDI Enable function in the Master menu.
3. Select the desired preset for each of the MIDI channels you want the Proteus 2000 to receive using the MIDI Channel/Preset selection screen. You can also set the initial Volume and Pan settings for each channel.



4. Proteus 2000 now responds multitimbrally on each of the MIDI channels you have specified. The volume and pan position parameters can be adjusted dynamically over MIDI (during the sequence).
5. Save the Multisetup.

## ► To Link a Multisetup with your Sequence

1. Insert a MIDI bank and program change in the lead-in measure of your sequence to select the proper Multisetup before the sequence starts.
2. The Multisetup will now be selected before the sequence starts.

# Master Menu



**Warning:** Master Menu changes are automatically saved when you exit the module. If the power is turned off before you exit the module any changes you have made will be lost.

The Master menu contains functions that affect the overall operation of Proteus 2000. For example, changing the Master Tune parameter changes the tuning of all the presets, not just the one currently displayed.

## ► To enable the Master menu

Press the Master button, lighting the LED. The Master Menu screen displays the menu page most recently selected since powering up Proteus 2000. The cursor appears below the first character of the screen heading on line one.

## ► To select a new screen

Press the Home/Enter button or press the Cursor button repeatedly until the cursor is below the screen title heading. Rotate the Data Entry Control to select another screen.

## ► To modify a parameter

Press either Cursor button repeatedly (or hold down the right cursor button while turning the Data Entry Control) until the cursor is below the desired parameter value. Rotate the Data Entry Control to change the value.

## ► To return to the main screen

Press the Master button, turning off the LED.

## Defining Master Parameters

### *Transpose/Tune*

Master setup parameters affect overall performance, range, and global effects. This section describes the Master parameters and how to define them.

The Transpose parameter transposes the key of all presets, in semitone intervals. The transpose range is  $\pm 24$  semitones.

Master Tune adjusts the fine tuning of all presets so that you can tune Proteus 2000 to other instruments. The master tuning range is  $\pm 1$  semitone in 1/64th semitone increments (1.56 cents). A master tune setting of “+00” indicates that Proteus 2000 is perfectly tuned to concert pitch (A=440 Hz).

<b>MASTER TRANSPOSE</b> +00 semitones	<b>TUNE</b> +00
--	--------------------

### *Bend Range*





The Bend Range parameter sets the range of the pitch wheel. This affects only presets that have their individual Pitch Bend range (defined in the Edit menu) set to Master. The maximum pitch bend range is  $\pm 12$  semitones or one octave in each direction.

<b>MASTER BEND RANGE</b> +/- 7 semitones
---

## Velocity Curve

You can modify incoming velocity data by a velocity curve in order to provide different types of dynamics in response to your playing, or to better adapt to a MIDI controller. The Master Velocity Curve page lets you select one of thirteen master velocity curves or to leave the data unaltered (linear).


### MASTER VELOCITY CURVE 13

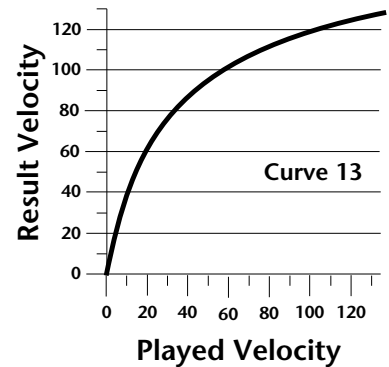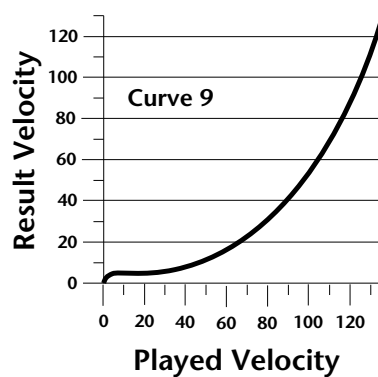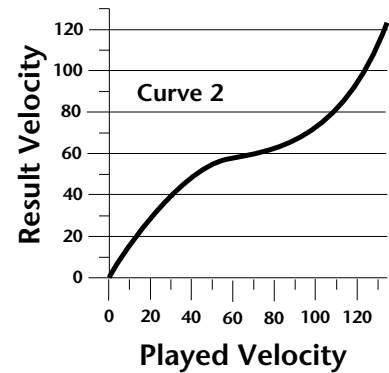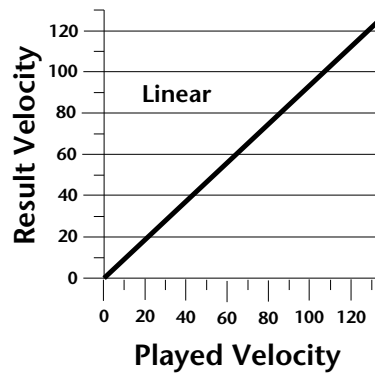

For a complete list of all available velocity curves, see "Velocity Curves" on page 187 of the Appendix.

## Mix Output

The Mix Output parameter allows you to override the routing assignments made in each preset and instead assign the outputs according to MIDI channel. For each of the 32 MIDI channels, you can select Send 1-4, or Preset. When Preset is selected, the output assignment defined in the Preset Edit menu is used.

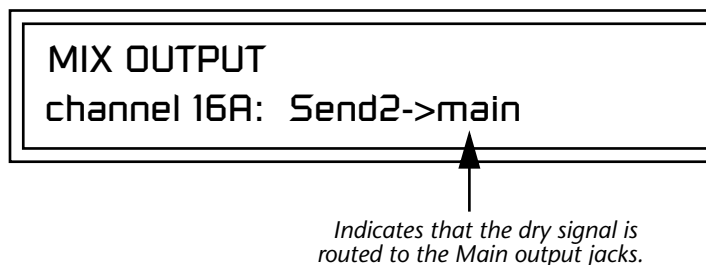

The **Output Routing** field (pointed to by the arrow) reflects the true routing of Send 2 or Send 3 to either:

1) the effects processor input or... 2) the rear panel submix jacks.

Since the Sub 1 output is NOT being used, the signal is routed through the effects processors, then on to the main outputs. If a plug were inserted into one of the Sub 1 jacks the destination field would read "Sub1" and the dry signal would be routed directly to the Sub 1 outputs on the back panel.



### Send Routings

Send 1 - Main Outputs

Send 2 - Subout 1 or Main Outs

Send 3 - Subout 2 or Main Outs


Send 4 - Main Outputs

The Sends function as effect processor inputs (effect sends). Send 2 and Send 3 are also used to route sounds to the Sub 1 and 2 outputs on the back panel. When a plug is inserted into the associated Submix jack on the back panel, **the Dry portion of the Send is disconnected** from the effects processor and the signal is routed directly to the output jack. The actual output routing is shown in parentheses in the display. If you don't want the wet portion of the signal in the main mix, turn down the Send Level. *The entire Send is disconnected from the Effects Processors even if only one plug is inserted into the Submix jack.*

The four Effect Sends allow you to get the most out of the two effect processors. For example, with Effect B set to an echo algorithm, you could route one MIDI channel to Send 3 and set the effect amount to 80%. Another MIDI channel could be routed to Send 4 with an effect amount of only 5%. This is almost like having two different effects!

The Mix Output function is also useful when sequencing since it lets you route specific MIDI channels (and thus sequencer tracks) to specific Sub outputs (on the back panel) where there they can be processed with EQ or other outboard effects.

## OUTPUT SECTION & EFFECTS PROCESSORS

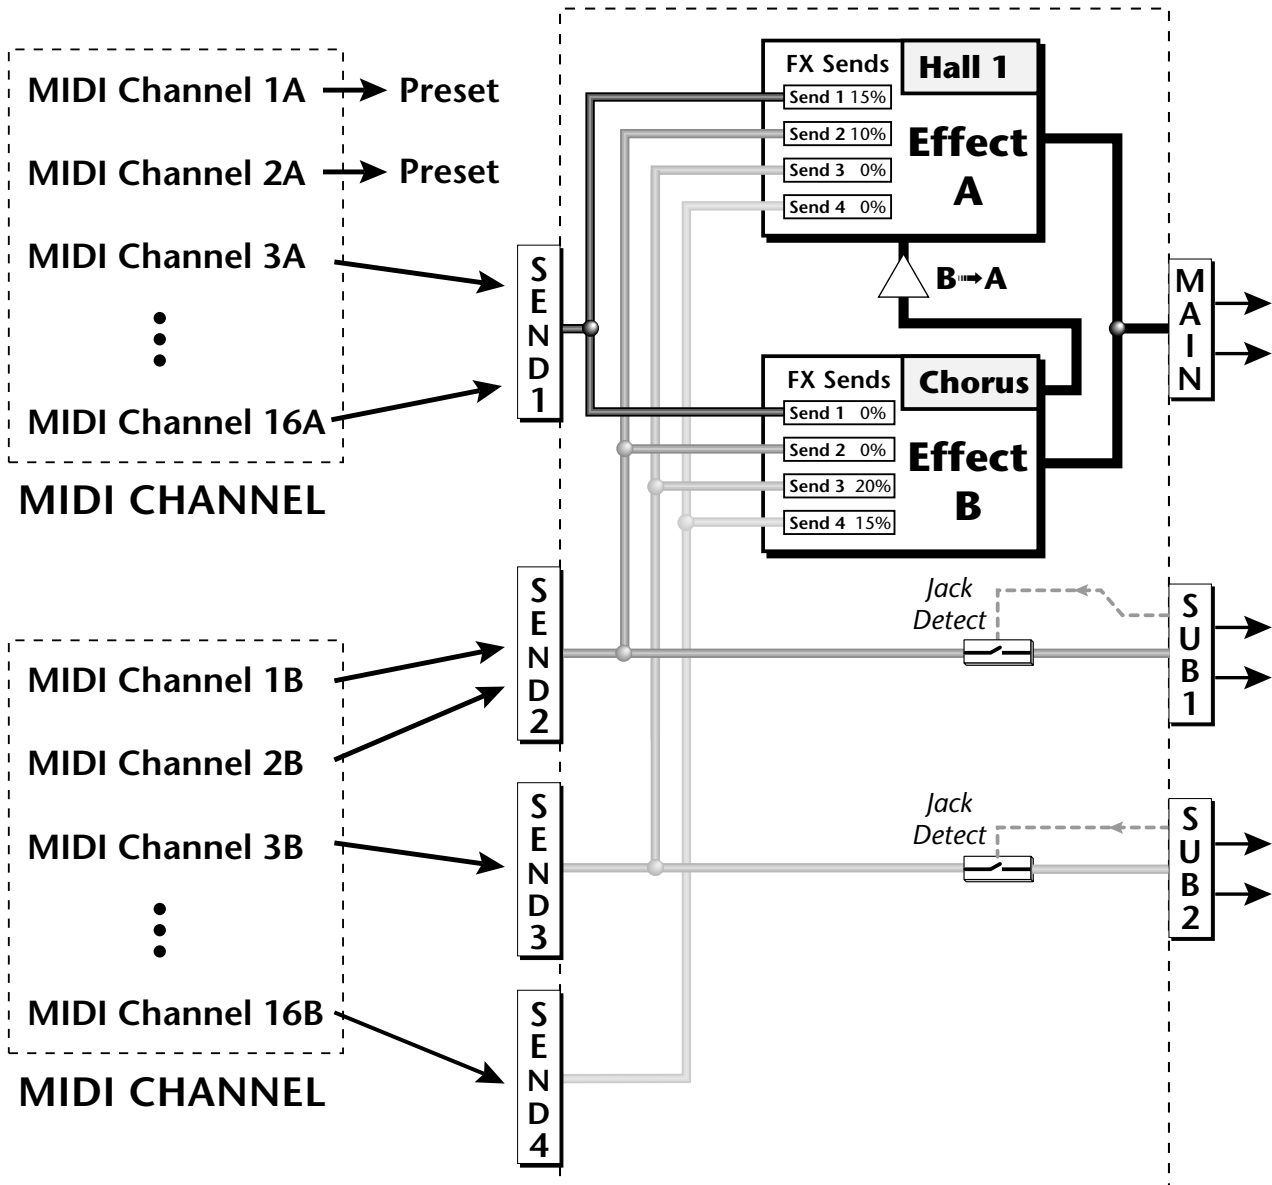

Sends 2 and 3 can be routed to the effects processors or to rear panel submix jacks. When a plug is inserted into a Submix jack, the dry portion of the Send is disconnected from the effects processor and is routed **directly** to the Submix output jacks.

## Master Effects

The digital effect processors can be programmed as part of the preset (using the Edit menu) so that effects will change along with the preset. However, there are only two effect processors, and so you cannot have a different effect on each preset when in Multi mode.

The Master Effects settings assign the effect processors “globally” for all presets to provide a way to use the effects in Multi mode. Detailed information is presented in the Effects chapter (see Effects on page 143).

### *Effects Mode*

The FX Mode page enables or bypasses the effects. When the FX Mode is set to “bypass,” the effects are turned off on a global scale. This includes Effects programmed in the preset.

**FX MODE**  
enabled

### *Effects Multi Mode Control*

The routing scheme for the two stereo effects processors provides a lot of versatility. When in multi mode, you can “use master settings” which applies the Master menu effects settings to all 32 MIDI channels.

**FX MULTIMODE CONTROL**  
use master settings

If you want more control, you can use the “channel” setting which applies the effects settings of the preset on a specified channel to all the other channels. Changing the preset on the specified channel changes the effect.

**FX MULTIMODE CONTROL**  
preset on channel 1A

If you are in Omni or Poly modes this parameter is disabled and the message in parentheses explains that Proteus is currently in Omni mode.

**FX MULTIMODE CONTROL**  
(using Omni mode)



## Master FXA Algorithm

This function selects the type of effect used for the “A” effect. The following effect types are available.

### MASTER FXA ALGORITHM Room 1

#### A Effect Types

- |                     |                       |
|---------------------|-----------------------|
| 1. Room 1           | 23. BBall Court       |
| 2. Room 2           | 24. Gymnasium         |
| 3. Room 3           | 25. Cavern            |
| 4. Hall 1           | 26. Concert 9         |
| 5. Hall 2           | 27. Concert 10 Pan    |
| 6. Plate            | 28. Reverse Gate      |
| 7. Delay            | 29. Gate 2            |
| 8. Panning Delay    | 30. Gate Pan          |
| 9. Multitap 1       | 31. Concert 11        |
| 10. Multitap Pan    | 32. Medium Concert    |
| 11. 3 Tap           | 33. Large Concert     |
| 12. 3 Tap Pan       | 34. Large Concert Pan |
| 13. Soft Room       | 35. Canyon            |
| 14. Warm Room       | 36. DelayVerb 1       |
| 15. Perfect Room    | 37. DelayVerb 2       |
| 16. Tiled Room      | 38. DelayVerb 3       |
| 17. Hard Plate      | 39. DelayVerb 4 Pan   |
| 18. Warm Hall       | 40. DelayVerb 5 Pan   |
| 19. Spacious Hall   | 41. DelayVerb 6       |
| 20. Bright Hall     | 42. DelayVerb 7       |
| 21. Bright Hall Pan | 43. DelayVerb 8       |
| 22. Bright Plate    | 44. DelayVerb 9       |

*FXA Parameters:  
Decay/HF Damping  
FxB -> FxA*

This page lets you define the parameters of the selected Effects algorithm. Use this page to setup the effect decay, high frequency damping amount and to route “B” effects through the “A” effects. See “Effect Parameters” on page 145 for more details.

FXA	DECAY	HFDAMP	FxB>FxA
	040	096	001

*FXA Send Amounts*

These parameters set the effects amounts for each of the four stereo effects busses. See “Master Effects” on page 148 for detailed information.

FXA SEND AMOUNTS			1:100%
2: 50%	3: 10%	4: 0%	

*Master FxB  
Algorithm*

This parameter selects the type of effect used for the “B” effect. The following effect types are available.

MASTER FxB ALGORITHM
Chorus 1

## B Effect Types

- |                |                        |
|----------------|------------------------|
| 1. Chorus 1    | 17. Ensemble           |
| 2. Chorus 2    | 18. Delay              |
| 3. Chorus 3    | 19. Delay Stereo       |
| 4. Chorus 4    | 20. Delay Stereo 2     |
| 5. Chorus 5    | 21. Panning Delay      |
| 6. Doubling    | 22. Delay Chorus       |
| 7. Slapback    | 23. Pan Delay Chorus 1 |
| 8. Flange 1    | 24. Pan Delay Chorus 2 |
| 9. Flange 2    | 25. Dual Tap 1/3       |
| 10. Flange 3   | 26. Dual Tap 1/4       |
| 11. Flange 4   | 27. Vibrato            |
| 12. Flange 5   | 28. Distortion 1       |
| 13. Flange 6   | 29. Distortion 2       |
| 14. Flange 7   | 30. Distorted Flange   |
| 15. Big Chorus | 31. Distorted Chorus   |
| 16. Symphonic  | 32. Distorted Double   |

### *FXB Parameters: Feedback/LFO Rate Delay Time*

The FXB parameters setup the characteristics of the effect. Use this page to define the feedback amount, the LFO rate and delay amount for the selected type “B” effect. See “Effect Parameters” on page 145 for details.

FXB	FEEDBK	LFORATE	DELAY
	000	003	0

### *FXB Send Amounts*

These parameters set the effects amounts for each of the four stereo effects busses. See the Effects chapter for detailed information.

FXB SEND AMOUNTS		1:100%
2: 50%	3: 10%	4: 0%

# MIDI Parameters

## MIDI Mode

MIDI parameters control how the Proteus 2000 sends and receives MIDI data.

MIDI Mode selects one of the three MIDI modes: Omni, Poly or Multi mode.

MIDI MODE	CHANGE
omni	ignored

The **MIDI Mode Change** parameter specifies whether mode changes made through an external MIDI controller are accepted or ignored.

The MIDI modes are as follows:

### Omni

Responds to note information on all MIDI channels and plays the preset currently displayed in the main screen.

### Poly

Responds only to note information received on the currently selected MIDI channel (on the preset selection screen) and plays that channel's associated preset.

### Multi

Responds to data on any combination of MIDI channels and plays the specific preset associated with each of the MIDI channels. You must select multi mode for multitimbral operation.

## MIDI SysEx ID



**WARNING:** When transferring SysEx data from one Proteus 2000 to another, the ID numbers of both units must be the same.

This page defines the MIDI system exclusive (SysEx) device ID number. The SysEx ID lets an external programming unit to distinguish between multiple Proteus 2000 units connected to the same preset editor. In this case each unit must have a unique SysEx ID number.

MIDI SYSEX ID
000

## MIDI Enable

MIDI Enable lets you turn each MIDI channel on and off independently when in Multi mode. This feature is helpful when you have other devices connected to the same MIDI line and do not want the Proteus 2000 unit to respond to the MIDI channels reserved for the other devices.

MIDI ENABLE  
channel 01A: On

Because the MIDI Enable function only makes sense if you are in Multi mode, Proteus 2000 disables this feature when in Omni or Poly mode.

In Multi  
Mode

MIDI ENABLE  
channel 16B: On

In Omni  
Mode


MIDI ENABLE  
(using Omni mode)


## MIDI Program Change -> Preset


You can also remap incoming MIDI program changes to a different numbered preset. This is a handy feature when your master keyboard cannot send a bank change or you want to reorder preset numbers. Any preset can be mapped to any incoming MIDI program change number.


For example, you could set up the Program -> Preset map to call up preset #12 whenever Proteus 2000 receives MIDI program change #26.

The four fields shown below are editable.

 The Program->Preset Change only works for program changes received in Bank 0.

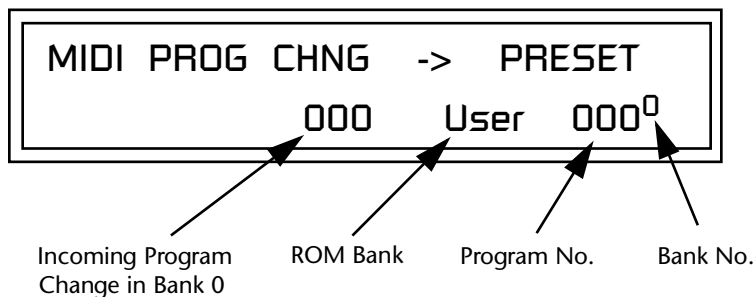

 Programs and presets are the same thing. "Preset" is the E-MU term for MIDI Program.

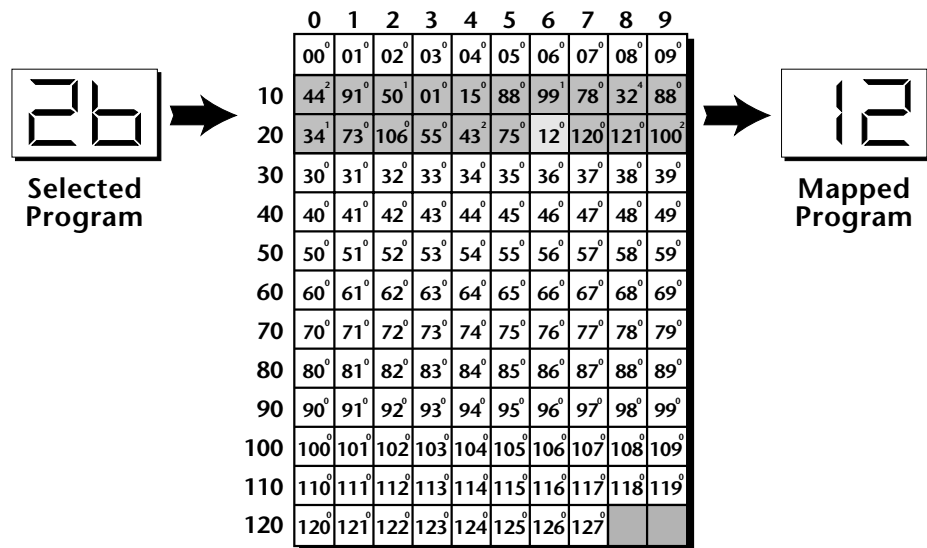

In this chart, program changes 10-29 have been remapped to new preset numbers. All other presets are selected normally.

## Receive Program Change

Use this function to instruct the Proteus 2000 to utilize or ignore incoming MIDI preset changes or Bank Select commands for each channel. Use the cursor buttons to select the channel number field, then use the Data Entry Control to select a channel number. Use the cursor button again to select the On/Off field and the Data Entry Control to change the value.

RECEIVE PROGRAM CHANGE  
channel 01A : on

## Real-time Controller Assignment

Use these three pages to assign twelve real-time control sources. Each MIDI Controller is assigned a letter (A - L). The front panel Controller Knobs *and* twelve MIDI controller numbers share the A-L controller routings. **These screens let you select which MIDI real-time controllers numbers will be received (from 1 to 31 and from 64 to 119) and which controller numbers will be transmitted over MIDI if the front panel controls are turned.** The PatchCord routing and amount in the Edit menu determine what effect the controller has on each preset. Real-time controllers are shown in the PatchCord menu as MIDI A through MIDI L.



*Proteus 2000 factory presets have certain synth parameters assigned to each controller letter and so these are "Global" controller assignments.*

*For example, assigning a MIDI controller to "A" in this screen would let you control filter Fc for all the factory presets. See "Front Panel Knob Functions" on page 165.*

The Real-time Controller assignment also specifies which controller numbers are transmitted when the "Knobs MIDI Out" is enabled (see "Knobs/Riff MIDI Out" on page 49).

#### REALTIME CONTROLLER #

A: 21   B: 22   C: 23   D: 24

#### REALTIME CONTROLLER #

E: 25   F: 26   G: 27   H: 28

#### REALTIME CONTROLLER #

I: 80   J: 81   K: 91   L: 93

**Note:** Controllers 7 and 10 are already assigned to Volume and Pan for each MIDI channel. Controllers 91 & 93 are the standard controller numbers for reverb and chorus send amounts.

Following are a few of the standardized MIDI Controller numbers as defined by the MIDI manufacturers association. The controllers shown in **Bold** are automatically routed to the destination (volume & pan) or have their own PatchCord source. Others, such as Portamento Time, can be routed using a PatchCord to have the desired effect.

<b>1 - Modulation Wheel</b>	<b>7 - Volume</b>
2 - Breath Controller	8 - Balance
3 - Old DX7 Aftertouch	9 - Undefined
<b>4 - Foot Pedal</b>	<b>10 - Pan</b>
5 - Portamento Time	11 - Expression
6 - Data Entry	

## MIDI Footswitch Assign

Like the MIDI Controllers, you can assign three MIDI footswitches to MIDI footswitch numbers. Footswitches numbers are from 64-79. Destinations for the footswitch controllers are programmed in the PatchCord section of the Edit menu.

#### FOOTSWITCH CONTROLLER #

1: 64   2: 65   3: 66

Following are a few of the standardized MIDI Switch numbers.

64 - Sustain Switch (on/off)	67 - Soft Pedal (on/off)
65 - Portamento (on/off)	69 - Hold Pedal 2 (on/off)
66 - Sostenuto (on/off)	

## Tempo Controller

This function allows a MIDI controller to change the Master Tempo. The Global Tempo is used for the clock divisor PatchCords, tempo-based envelopes and synced LFOs. You can assign any controller number from 0-31, mono key pressure, or the pitch wheel to change the Global Tempo. A different controller can be used to change the tempo up or down. The Pitch Wheel can be assigned to both the up and down parameters to vary the tempo up and down from a single controller. If any other controller is assigned to both the up and down parameters, Proteus 2000 redefines the center of the controller's range as zero.

MIDI Controller values are added to the Base Tempo with an offset range of  $\pm 64$ . When the controller is set to "off" the tempo returns to its original setting. This control has no effect when using an external clock.

TEMPO CONTROLLER#	CHAN
Up: 03    Down: 09	16A

## Knob Preset Quick-Edit

"Quick-Edit" changes the initial controller setting in the preset whenever you move a Control Knob. This parameter selects whether or not the front panel Controller Knobs are used to Quick-Edit the currently selected preset. See "Controller Knobs" on page 23 in the Operations chapter for more details.



Quick Edit does not work while in the Edit menu with "Knobs Deep Edit" enabled.

KNOBS PRESET QUICK-EDIT disabled
-------------------------------------



*Knobs  
Deep Edit*

This parameter specifies whether or not the front panel controller knobs can be used to edit parameter values in the Master or Edit menus. This is called “Deep-Editing.” With Knob Deep Edit disabled, the front panel controller knobs retain their function as real-time controllers even when in the Master or Edit modes.

**KNOBS DEEP EDIT**  
disabled

*Knobs/Riff MIDI Out*

This function allows you to select whether or not MIDI controller data is transmitted when you turn the front panel Controller knobs. The knobs transmit on the controller numbers defined by the Real-time Controller Assign parameter (see page 46). This function also enables or disables transmission of Riff note data over MIDI when the Audition button is pressed.

If Deep Edit is enabled, “Knobs MIDI Out” does not work while in any of the editing menus (Master, Edit, Save/Copy).

**KNOBS/RIFF MIDI OUT**  
don't transmit

*Preset Edit All Layers  
Enable*

This function allows you to turn the Edit All Layers feature on or off. “Edit All Layers” is an Edit menu feature which allows you to select all layers (A) in order to edit all four layers simultaneously. Because this feature can be confusing to the beginning programmer, it can be disabled here in the Master menu. Check this feature out when you're ready. It's great!

**PRESET EDIT ALL LAYERS**  
enabled

## Front Panel Knob Calibration

This function calibrates the minimum and maximum values for the five front panel knobs. The controls should be calibrated periodically in order to compensate for normal wear and tear on the controls themselves or if the controls behave strangely. Before calibration, it's usually a good idea to let the unit warm up for about half an hour to ensure you have the maximum range on all the front panel controls.


### ► To Calibrate the Front Panel Control Knobs

1. Press the Master menu button and advance to the Calibrate Knobs page.




CALIBRATE KNOBS  
Start

2. Press the Enter button to begin the calibration process. The following screen appears.



Turn all knobs to MIN  
Press Enter when ready

3. Turn all knobs to their minimum value (which is pegged in the counter-clockwise direction), then press the Enter button. The screen briefly flashes, "Reading Values....," then displays:

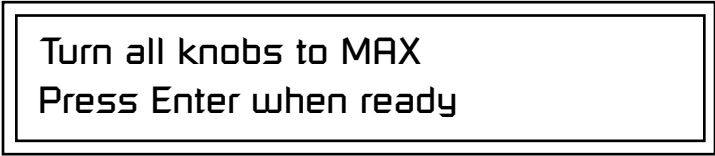

Turn all knobs to MAX  
Press Enter when ready

4. Turn all knobs to their maximum value (pegged in the clockwise position), then press the Enter button. The display shows, "Reading Values... Done." Calibration is complete.

## MIDI SysEx Packet Delay

Sometimes errors occur if the computer or sequencer to which you are sending MIDI SysEx data is faster or slower than the Proteus 2000. The MIDI SysEx Packet Delay command lets you specify the amount of delay between MIDI SysEx packets so the input buffer of your computer does not overflow, causing an error. The value range is from 0 through 8000 milliseconds. A delay value of zero allows full speed MIDI transfer. If you are experiencing data transmission errors, try increasing the delay value until the problem disappears.

**MIDI SYSEX PACKET DELAY**  
**300 milliseconds**

## Send MIDI System Exclusive Data

This command transmits MIDI System Exclusive (SysEx) data to the MIDI Out port of Proteus 2000. The MIDI data can be sent to a computer, sequencer or to another Proteus 2000. When transferring data between two Proteus 2000s be sure both units have the same SysEx ID number! See "MIDI SysEx ID" on page 44 to learn how to change the SysEx ID.

Using the cursor key and the Data Entry Control, select the type of MIDI data you want to transmit. Following are descriptions of the types of MIDI data that can be transmitted.

### Current Multisetup

Transmits all parameters in the Master menu except Tuning Tables, Program/Preset Map and Viewing Angle.

### Program /Preset Map

Transmits the MIDI Program -> Preset Map.

### All User Tuning Tables

Transmits all 12 user User Tuning Tables.

### Multimode Map

Transmits the following parameters:

- Multimode Basic Channel
- Multimode Effects Control Channel
- Multimode Tempo Control Channel

*and for each MIDI Channel...*

- Preset, Volume, & Pan
- Mix Output
- Multimode Channel Enable
- Multimode Bank Map
- Multimode Receive Program Change



*The Preset, Volume, and Pan information for all 32 channels is included when the Multi mode Map settings are transmitted or received.*



**WARNING:** When transferring SysEx data from one Proteus 2000 to another, the ID numbers of both units must match.

### **Bank 0 User Presets**

Transmits all the user defined presets in Bank 0.

### **Bank 1 User Presets**

Transmits all the user defined presets in Bank 1.

### **Bank 2 User Presets**

Transmits all the user defined presets in Bank 2.

### **Bank 3 User Presets**

Transmits all the user defined presets in Bank 3.

### **Any Individual Preset**

Transmits only the selected preset.

The Enter LED will be flashing. Press the Enter button to confirm the operation. To receive MIDI data, simply send the MIDI data into Proteus 2000 from another Proteus or from a computer/sequencer.

**SEND MIDI SYSEX DATA**  
**bank 1 user presets**


#### **► To Record MIDI SysEx Data into a Sequencer:**

1. Setup the sequencer to receive system exclusive data.
2. Place the sequencer into record mode, then Send MIDI Data.

#### **► To Receive MIDI SysEx Data from a Sequencer:**

Simply play back the sequence into Proteus 2000.

## User Key Tuning

 The user key tuning can be used to tune individual percussion instruments.

User Key Tuning lets you create and modify 12 user definable tuning tables. The initial frequency of every key can be individually tuned, facilitating the creation of alternate or microtonal scales.


Using the cursor keys and the Data Entry Control, select the user table number, the key name, the coarse tuning and the fine tuning. The key name is variable from C-2 to G8. Coarse Tuning is variable from 0 to 127 semitones. The fine tuning is variable from 00 to 63 in increments of 1/64 of a semitone (approx. 1.56 cents). For each preset, the specific tuning table is selected in the Edit menu.

**USER KEY TUNING Table:1**  
Key: C1 Crs: 036 Fine: 00


## Output Format

The Output Format parameter sets the digital audio output format. The available formats are S/PDIF, and AES pro. If you are using the digital output, choose either S/PDIF or AES pro to match the format of the receiving device.

**OUTPUT FORMAT**  
S/PDIF

 **DON'T CHEAP OUT!**  
Always use high quality cable for digital audio connections.

The Proteus 2000 contains a S/PDIF digital output. The diagram below shows how an adapter cable for AES pro should be wired.

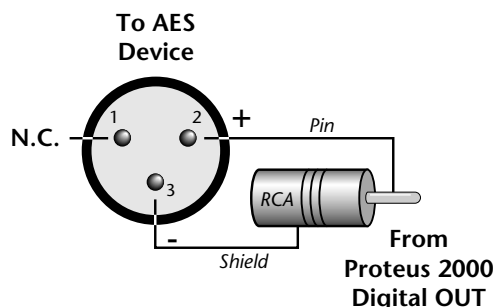

If you use an adapter cable to connect the S/PDIF digital audio output to AES gear, make sure to use high quality, low capacitance cable.

## Base Tempo

Proteus 2000 contains an internal master clock which can be used to: synchronize the LFOs when in Tempo-based mode, control the times of Tempo-based envelopes or used as a modulation source in the PatchCords section. There are two tempo values shown in the display.

- **Base Tempo** - The base tempo is the value to which the MIDI controller specified in the Tempo Controller screen will be applied. (See “Tempo Controller” on page 48.)
- **Current Tempo** - The current tempo is equal to the base tempo modulated by the MIDI controller specified in the Tempo Controller screen. If no MIDI Tempo controller message has been received since the last Base Tempo change, the Current Tempo will be equal to the Base Tempo.

Current Tempo is NOT displayed when the Base Tempo is set to “MIDI Clock”.

### ► To Change the Master Tempo:

1. Move the cursor to the lower line of the display.
2. Adjust the Base Tempo using the Data Entry Control.

<b>BASE TEMPO</b> 120 bpm (current: 182)
---

The Master Tempo values range from 1 through 300 beats per minute (BPM) or you can select “use MIDI clock” to use an external MIDI clock source.

## Screen Viewing Angle

This function changes the viewing angle of the display so that you can read it easily from either above or below the unit. The angle is adjustable from +7 to -8. Positive values will make the display easier to read when viewed from above. Negative values make the display easier to read from below.

<b>VIEWING ANGLE</b> +0
----------------------------

# *Programming Basics*

This chapter explains how Proteus 2000 sounds are constructed and contains important background information on how to create your own custom presets.


Your initial involvement with Proteus 2000 will most likely be using the existing presets and selecting MIDI channels. While the factory presets are very good, there are some things you will probably want to change eventually, perhaps the LFO speed, the filter frequency or the attack time. You may also want to make your own custom presets using complex modulation routings. There are 512 user locations (User Banks 0-3) available to store your own creations or edited factory presets. Best of all, it's easy to edit or create new presets using the Edit menu.

Each preset can consist of up to four instrument layers. Each of the four layers can be placed anywhere on the keyboard and can be crossfaded or switched according to key position, velocity, or by using a real-time control such as a wheel, slider, pedal, LFO or envelope generator. A preset can also be "linked" with up to 2 more presets creating additional layering or splits.

Proteus 2000 has an extensive modulation implementation using two multi-wave LFO's (Low Frequency Oscillators), three multi-stage envelope generators and the ability to respond to multiple MIDI controllers. You can simultaneously route any combination of these control sources to multiple destinations.

# Modulation

To modulate means to dynamically change a parameter, whether it be the volume (amplitude modulation), the pitch (frequency modulation), and so on. Turning the volume control on your home stereo rapidly back and forth is an example of amplitude modulation. To modulate something we need a modulation source and a modulation destination. In this case, the source is your hand turning the knob, and the destination is the volume control. If we had a device that could turn the volume control automatically, we would call that device a modulation source.

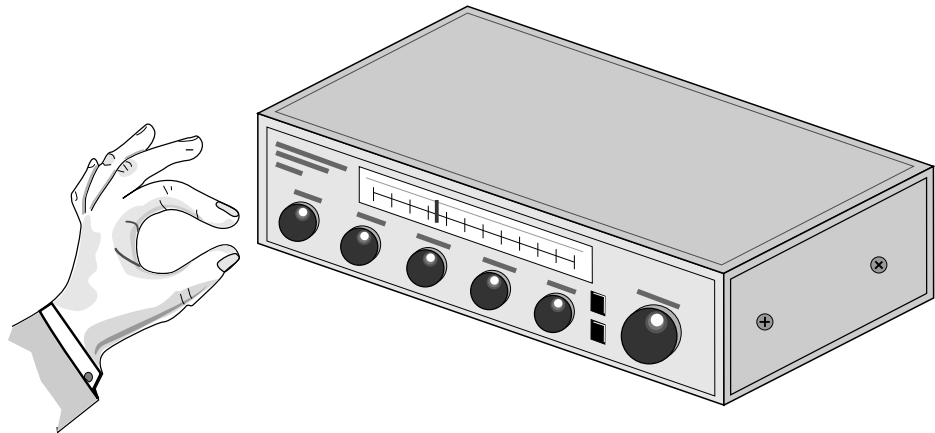

Turning the volume control back and forth on your home stereo is an example of Amplitude Modulation.

Proteus 2000 is designed so that each of the variable parameters, such as the volume, has an initial setting which is changed by a modulation source. Therefore in the case of volume, we have an initial volume that we can change or modulate with a modulation source.

Two main kinds of modulation sources on Proteus 2000 are *Envelope Generators* and *Low Frequency Oscillators*. In the example above, an envelope generator could be routed to automatically turn the volume control as programmed by the envelope. Or, a low frequency oscillator could be routed to turn the volume up and down in a repeating fashion.

Positive modulation adds to the initial amount. Negative modulation subtracts from the initial amount.

## Summing Nodes

All the modulation inputs on Proteus 2000 are summing nodes. This means that you can connect as many modulation sources as you want to an input (such as *Pitch* or *AmpVol*). Modulation sources are simply added algebraically—connecting two knobs, one set to -100 and the other set to +100 yields a net value of zero.



## Modulation Sources



**Tip:** Try routing *Key Glide* to *Filter Frequency* if you want the filter to smoothly follow pitch in solo mode. Routing *Key Glide* to *Pan* creates another interesting effect.

Modulation sources include *Envelope Generators*, *Performance Controllers* and *Low Frequency Oscillators*. In the previous example, an envelope generator was routed to automatically turn the volume control as programmed by the envelope, or, a low frequency oscillator could be routed to turn the volume control up and down in a repeating fashion. The following is a list of the modulation sources used in Proteus 2000.

### Keyboard Key

Which key is pressed.

### Key Velocity

How fast the key is pressed.

### Release Velocity

How fast the key is released.

### Gate

High if the key is pressed, low when the key is released.

### Key Glide

A smoothly changing control source based on the *Glide Rate* and the interval between the last two notes played.

### Pitch and Mod Wheels

Synthesizer pitch bend and modulation wheels.

### Keyboard Pressure (mono aftertouch)

Key Pressure applied after the key is initially pressed.

### Pedal

A continuously variable pedal controller.

### Miscellaneous Controllers A -L

Any type of MIDI continuous controller data.

### Low Frequency Oscillators (2 per layer)

Generate repeating waves.

### Envelope Generators (3 per layer)

Generate a programmable "contour" which changes over time when a key is pressed.

### Noise & Random Generators

Generate spectrums of noise and random signals.

### Footswitches

Change a parameter when the switch is pressed.

### Clock Divisor

The master tempo clock can be divided and used as a modulation source.

## Random Sources

Random modulation sources can be used when you want the timbre of the sound to be “animated” in a random or non-consistent manner.

- **Key Random 1 & 2** generate different random values for each layer which do not change during the note.
- The **White & Pink Noise** Generators produce varying random values. Both white and pink noise sources are low frequency noise designed for control purposes. Either noise source can be filtered even more by passing it through a lag processor.
- The **Crossfade Random** function generates the same random value for all layers in a preset. This source is designed to be used for cross-fading and cross-switching layers, although you may find other uses.


## Modulation PatchCords



*The controller Knobs assignments printed on the front panel are the system defaults. You can change any of these assignments using the Real-time Controller Assignment page in the Master menu (see page 46 for details).*

When setting up modulation with the Proteus 2000, you define a modulation source and a modulation destination. Then, you connect the source to the destination using “PatchCords.” Proteus 2000’s PatchCords are connected in the software. Proteus 2000 has 24 general purpose PatchCords for each layer.

You can connect the modulation sources in almost any possible way to the modulation destinations. You can even modulate other modulators. Each PatchCord also has an amount parameter which determines “how much” modulation is applied to the destination. The modulation amount can be positive or negative. Negative values invert the modulation source.

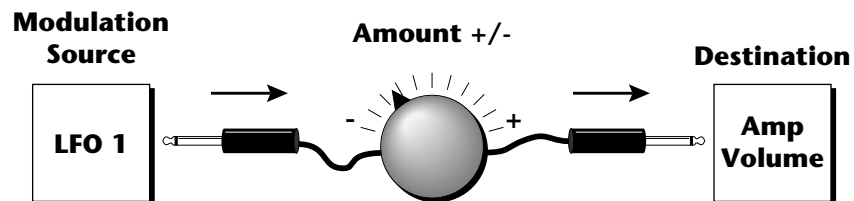


# Envelope Generators



If two adjacent segments have the same level in a “time-based” envelope, the segment will be skipped. Adjacent segments must have different levels for the rate control to work.

An envelope can be described as a “contour” which is used to shape the sound over time in a pre-programmed manner. There are three envelope generators per layer and all of them are the rate/level type.

This is how the rate/level (*time based*) envelopes work: When a key is pressed, envelope starts from zero and moves toward the Attack 1 Level at the Attack 1 Rate. As soon as it reaches this first level, it immediately begins the next phase and moves toward the Attack 2 level at the Attack 2 rate. As long as the key is held down, the envelope continues on through the Decay 1 and Decay 2 stages. If the key is still held when the envelope reaches the end of Decay 2, it simply waits there for you to release the key. When you release the key, the envelope continues into the Release 1 and Release 2 stages, stopping at the end of the Release 2 stage. Proteus 2000’s envelope generators provide great flexibility for programming both complex and simple envelopes.

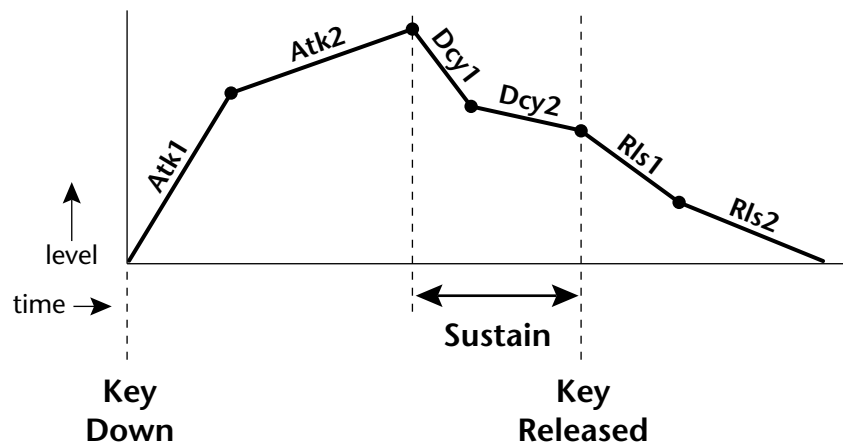

All three envelope generators have the six stages described above. The Volume Envelope generator controls the volume of the voice over time. The Filter Envelope generator is a general purpose envelope most often used to control the filter frequency. Unlike the Volume Envelope, however, the Filter Envelope can have a negative level value as well as a positive level. There is also an Auxiliary Envelope generator which is a general purpose envelope. The Auxiliary Envelope is identical to the Filter Envelope and can have negative as well as positive levels. You can adjust the time of each stage to create myriad envelope shapes, which in turn shape the sound over time.




By routing the Auxiliary or Filter Envelopes to control the pitch (PatchCords) you can easily hear the shape of the envelopes you are creating.

- Volume envelopes contour the way the volume of a sound changes over time determining how we perceive that sound. For example, a bell struck with a hammer is instantly at full volume, then slowly dies away. A bowed violin sound fades in more slowly and dies away slowly. Using Proteus 2000’s Volume Envelope, you can simulate the different types of natural instrument volume envelopes by programming them appropriately.


### Tempo-based Envelopes


Tempo-based envelopes are based on *Time* which is controlled by the Master Tempo (located in the Master menu). The Master Tempo rate scales the time of the Tempo-based envelope segments. The Master Tempo can also be set to use an external MIDI clock so that the envelope times can be synchronized to external sequencer or arpeggiator tempo changes.

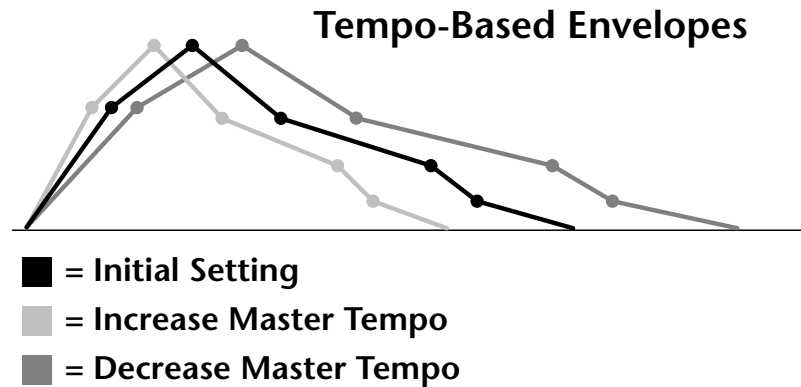

### Envelope Repeat

The Envelope Generators can also be made to repeat. When the envelope repeat function is On, the Attack (1&2) and Decay (1&2) stages will continue to repeat as long as the key is held. As soon as the key is released, the envelope continues through its normal Release stages (1 & 2).

 Only the Filter and Auxiliary Envelopes have the repeating feature.

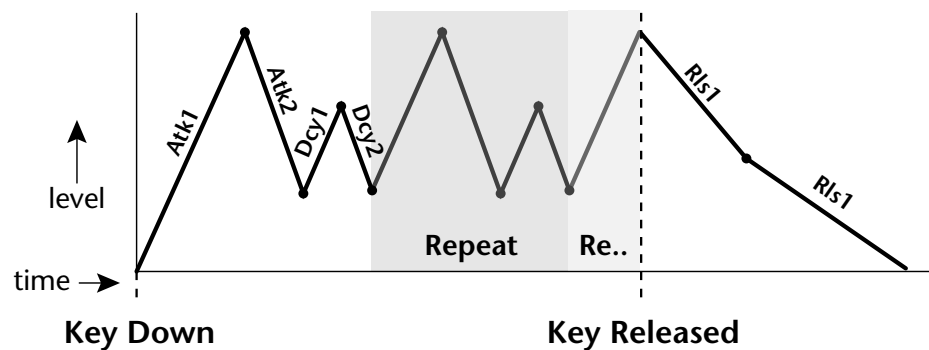

The diagram above shows how the looping envelopes work. When the key is pressed the envelope goes through its regular Attack 1, Attack 2, Decay 1 and Decay 2 stages. In non-looping mode, the envelope would hold at the end of the Decay 2 stage until the key was released. In looping mode however, it jumps back to the Attack 1 stage and repeats the first four stages. It continues to loop through these four stages until the key is released where it immediately jumps to the Release 1 stage.

## Low Frequency Oscillators (LFOs)

### LFO Tricks & Tips:

- The Random LFO wave is truly random and is different for each voice and layer.
- The Pattern (Pat) waveforms will sound the same on different layers and voices.
- Sine + Noise is very useful for simulating trumpet and flute vibrato.

### ★ When routing Hemi-quaver to Pitch:


+38 = major scale  
-38 = phrygian scale  
+76 = whole tone scale  
(+38) + (+76) = diminished (two cords)  
odd amount = S+H sound

**Note:** References to musical intervals in the pattern LFO shapes are with the LFO routed to pitch and a PatchCord amount of +38.



Try combining the Pattern LFOs, or controlling the amount of one with another, or combining them with the clock divisors.

A Low Frequency Oscillator or LFO is simply a wave which repeats at a slow rate. The Proteus 2000 has two multi-wave LFOs for each channel. The LFO waveforms are shown in the following illustration.

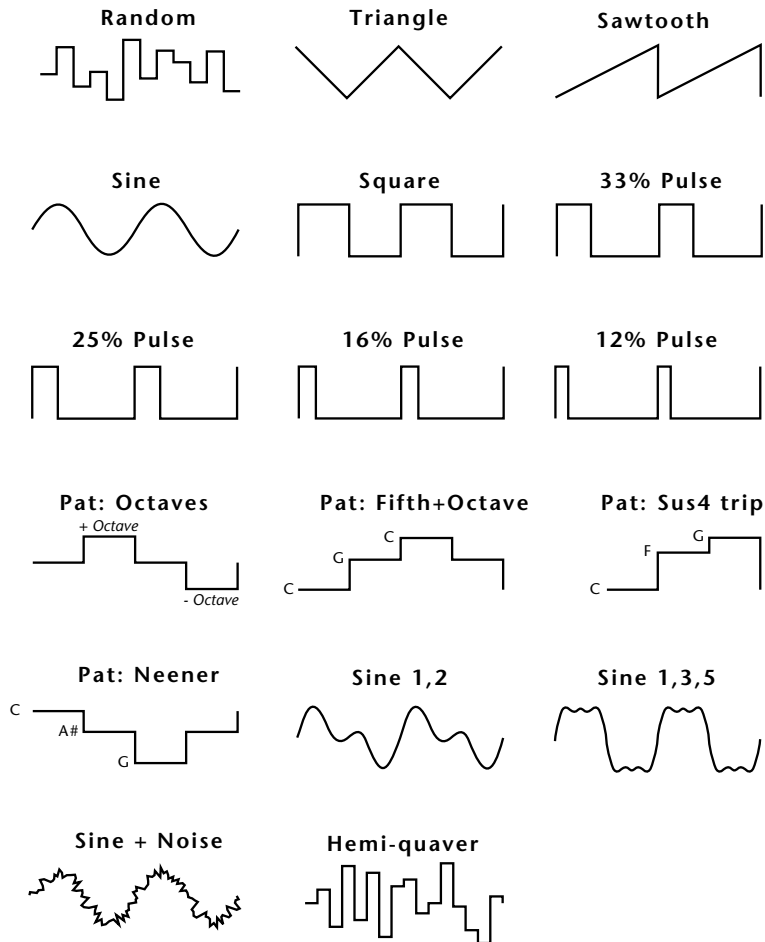


By examining the diagram of the LFO waveforms, you can see how an LFO affects a modulation destination. The shape of the waveform determines the result. Suppose we are modulating the pitch of an instrument. The sine wave looks smooth, and changes the pitch smoothly. The square wave changes abruptly and abruptly changes from one pitch to another. The sawtooth wave increases smoothly, then changes back abruptly. The sound's pitch follows the same course. Controlling the pitch of an instrument is an easy way to hear the effects of the LFO waves.


Like the Auxiliary Envelope, LFOs can be routed to control any real-time function such as Pitch, Filter, Panning, or Volume. A common use for the LFO is to control the pitch of the sound (LFO -> Pitch). This effect is called vibrato and is an important performance effect. Many presets use this routing with the modulation wheel controlling "how much" LFO modulation is applied. Another common effect, Tremolo, is created by controlling the volume of a sound with the LFO (LFO -> Volume).


You might use the LFOs to add a slight bit of animation to the sound by routing the LFO to control the filter. For this effect, set the LFO “amount” low for a subtle effect.

When a PatchCord amount is a negative value, the LFO shape is inverted. For example, inverting the sawtooth wave produces a wave that increases abruptly, then smoothly glides down.

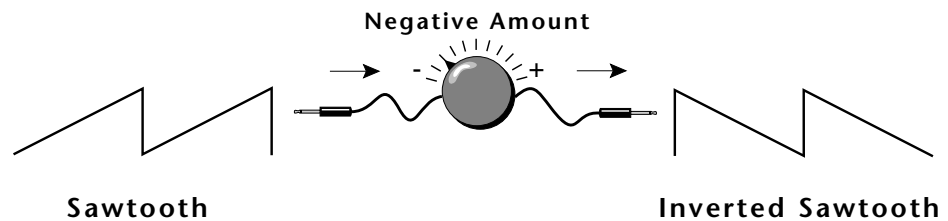

## Clock Modulation


 Envelopes are triggered on the positive going edge of the clock. LFOs are triggered on the negative going edge of the clock.

 The tempo of the master clock is set in the Master menu.

You can use the Master Clock as a modulation source, to trigger the Filter or Auxiliary Envelope generators, trigger Sample Start, synchronize the LFOs, or directly as a square wave modulation source. The Clock source is available in eight divisions (octal whole note, quad whole note, double whole note, whole note, half note, quarter note, eighth note, sixteenth note). You can use the different rates separately or in conjunction to create complex “synchro-sonic” rhythm patterns. You can also use a MIDI Clock as the Master Clock to synchronize to an external MIDI device such as a drum machine or sequencer. (See *Master Tempo* in the Master menu.)

Clocks are routed exactly like the other modulation sources using the PatchCords. The PatchCord Amount MUST be positive (+) for the clock to pass. By modulating the PatchCord Amount, you can route the divided clocks using real-time controllers or other modulation sources.

When an LFO is triggered by a clock, the LFO wave resets to zero every time the clock wave goes low. If the LFO rate is close to the clock rate, the LFO virtually synchronizes with the clock. If the two rates are far apart, the waveform of the LFO will be mildly or radically altered.

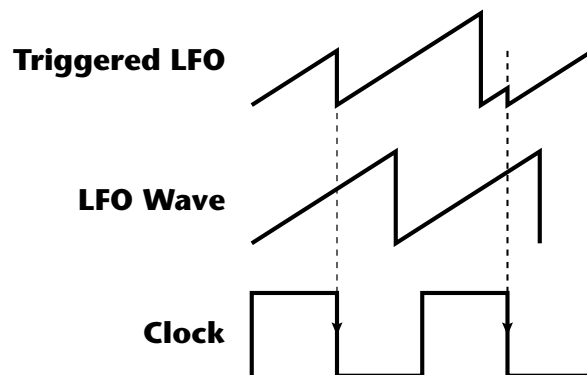

**LFO Trigger** causes the LFO to reset each time the clock waveform goes low.




LFO Synced to 1/4 Note Clock


LFOs can also be perfectly synchronized with the clock at any of 25 note divisions. This allows you to create very cool “synchro-sonic” effects that work perfectly at any tempo. Choosing one of the note divisors in the LFO rate screen selects the synced LFO function.

There are many possibilities for clock modulation and retrigger. For example, you can create a repeating six segment curve of any shape by triggering the Filter or Auxiliary Envelope generators with the clock. A few other possibilities are listed below.

- Turn different voice layers on and off using different clock divisors.
- Switch between Auxiliary and Filter Envelope retriggering using a slider or footswitch.
- Retrigg LFOs or Envelopes using noise or other LFOs to create random or semi random effects.
- Alter the LFO waveform by modulating the rate of a triggered LFO.
- Route multiple clocks with different divisors to the same destination (such as pitch) to create complex patterns. (*Hint: Adjust the PatchCord Amounts.*)

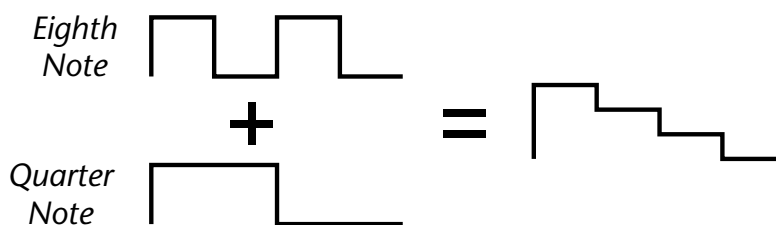

Adding these two clocks together in equal amounts produces a stairstep waveform.

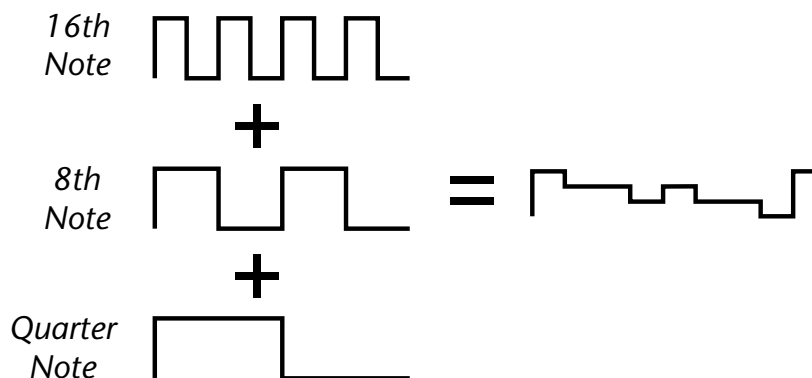


Adding multiple clocks with unequal amounts produces complex repeating patterns.

## Modulation Destinations

The PatchCords section of the Edit menu is where you connect sources to destinations. Each PatchCord has an amount associated with it which controls how much modulation is applied.

L1	PATCHCORD	#01
ModWhl	-> RTXfade	+036

The PatchCords screen above and the diagram below show how modulation sources are connected to destinations. The modulation sources can control any of the destinations in the layer.

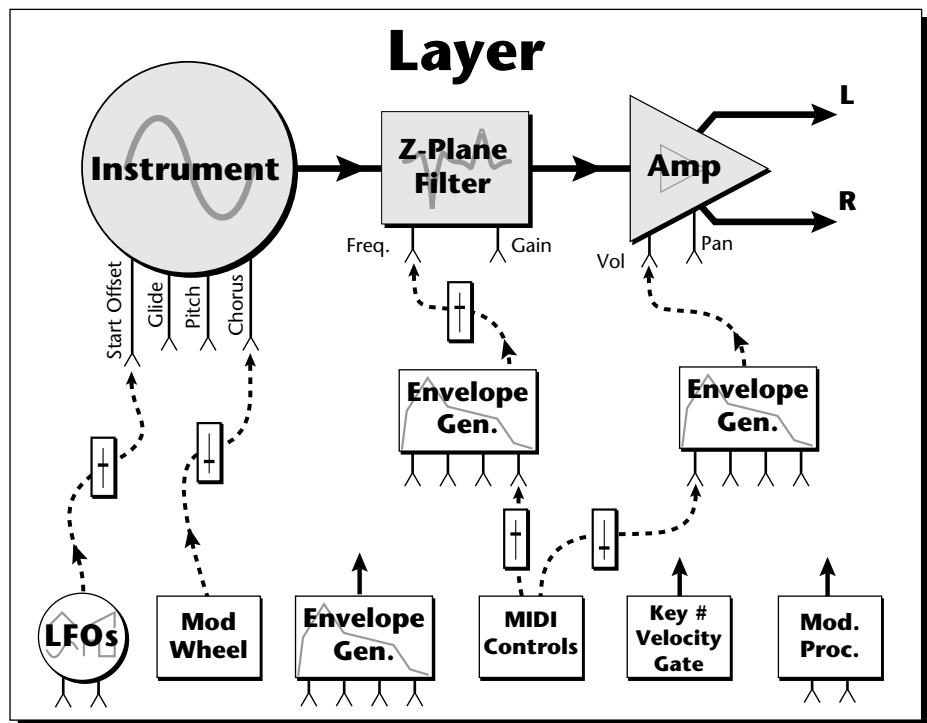

- Note-on modulation sources, such as key, velocity and gate output a single value at note-on time. Realtime modulation sources such as LFOs, envelope generators and modulation wheels can be varied continuously.

The possible modulation routings are completely flexible as shown in the diagram above. Multiple sources can control the same destination, or a single source can control multiple destinations.




# Modulation Processors

Modulation processors are devices which can modify modulation sources such as LFOs and envelope generators before they are applied to a destination. Modulation processors let you create patches and do tricks which would not be possible otherwise. Proteus 2000 implements the following modulation processors:


## Switch

Outputs full value when the input is greater than “0”.

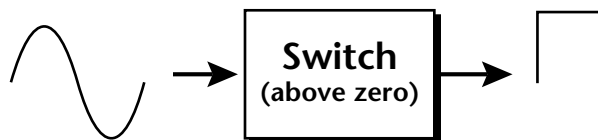

## Summing Amp

Lets you add several modulation signals together before applying them to a destination. This processor can save PatchCords when routing the output to multiple destinations.

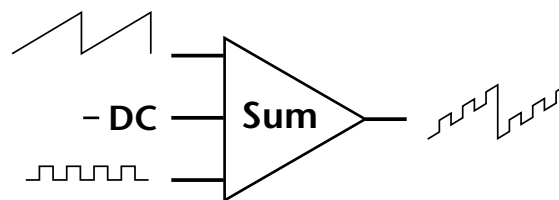


## Lag Processors

Slows down rapid changes in the input signal. The output “lags” behind the input at a pre-programmed rate. There are two lag processors, Lag 0 and Lag 1. Lag 1 has a longer lag time than Lag 0.




## Absolute Value

This function inverts negative input values and outputs only positive values. This device is also called a full wave rectifier.

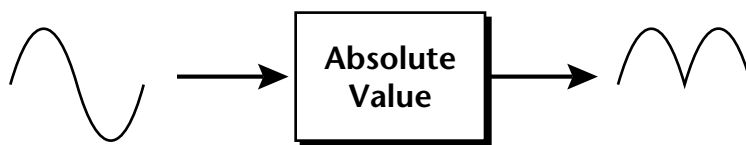

### Diode

The diode blocks negative input values, passing only positive values.

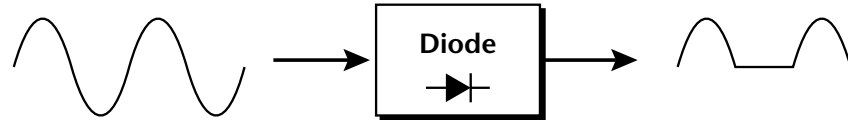


### Flip-Flop

The output of this processor alternates between full value and zero each time the input goes positive from zero or a negative value. With an LFO input, the output will be a square wave of half the input frequency.




### Quantizer

With the input PatchCord set to 100%, the output value is limited to 16 discrete values. The value of the input PatchCord controls the number of steps. The value of the output PatchCord controls the size of the steps.

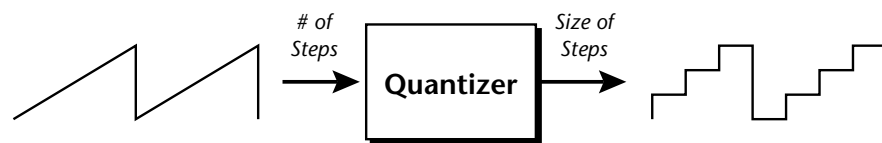


### 4x Gain


This processor amplifies the modulation source by a factor of 4.

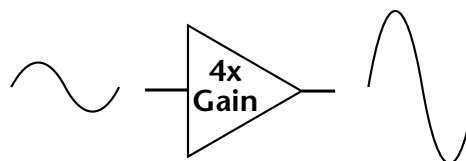

### Lag Inputs

The Lag processors can be used as 2 additional summing amps. Lag0sum and Lag1sum are modulation sources which equal the sum of PatchCords connected to the Lag in destination. The summing amp is located before the lag processor as shown in the following illustration.

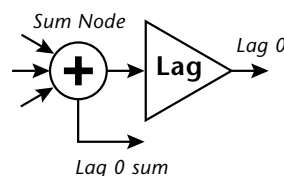

 The value of a digital "1" is equal to the PatchCord amount.

## Preset Modulation Processors




*Preset Modulation Processors start working as soon as the preset is selected. The Layer Modulation Processors take effect only when a key is pressed.*

There are also two “Preset Level” modulation processors located in the “Preset Patchcords” screen of the Edit menu. It is important to understand that although the preset processors *originate* at the *Preset Level PatchCords*, their output is used in the *Layer PatchCords*.

### Preset Lag



Like the Layer Lag processors (*described on page 65*) the Preset Lag slows down rapid changes in the input signal. The output “lags” behind the input at a pre-programmed rate. Unlike the layer level lag processors, the *preset lag* takes effect as soon as the preset is selected. In contrast, the layer level lag processors begin acting only after a keyboard key has been depressed. The Preset Lag also has a *Lag Amount* input which controls the lag time. Positive lag amounts increase the lag time. A MIDI controller (*such as a front panel knob*) is commonly used to control lag amount.

The preset lag could be used to “spin-up” and “spin-down” an LFO, which is controlling some other effect, perhaps left/right panning, pitch, or the filter. A MIDI footswitch could be used as the input to the lag which acts to slow down the instantaneous change of the switch. The slowly changing output value is then routed using a layer patchcord to crossfade between layers or change the speed of an LFO.

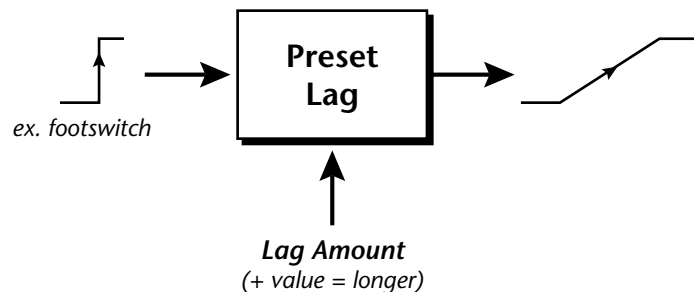


### Preset Ramp

This processor generates a positive or negative going slope whenever the **first** key is depressed on the MIDI channel.

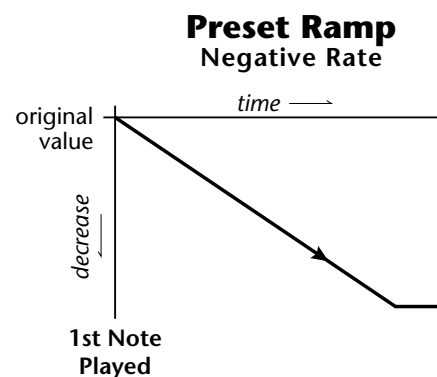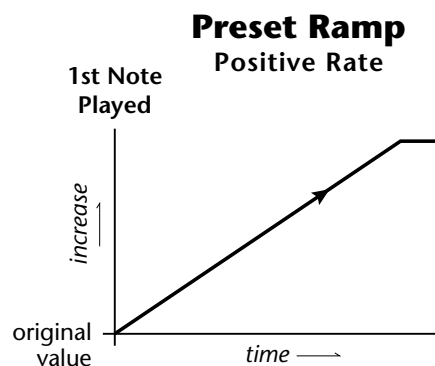

The preset ramp instantly resets when all notes have been released and the next *first key* on the MIDI channel is pressed. The Ramp Rate polarity (+ or -) determines if the ramp will be positive or negative going. The value of the ramp rate sets the increment. Large values produce fast ramps and small values produce slow ramps. Multiple inputs can be connected to the ramp rate (just like all the other destinations in Proteus 2000).

The patch below shows an application for the Preset Ramp which generates an adjustable decay envelope **ONLY** on the first note played to bring in the sound from another layer. Instead of routing the output to the Amp Volume you could just as easily route it to control Pitch, LFO Speed or any other destination you can think of. Study this patch if you want to learn a few new tricks using the patchcords.

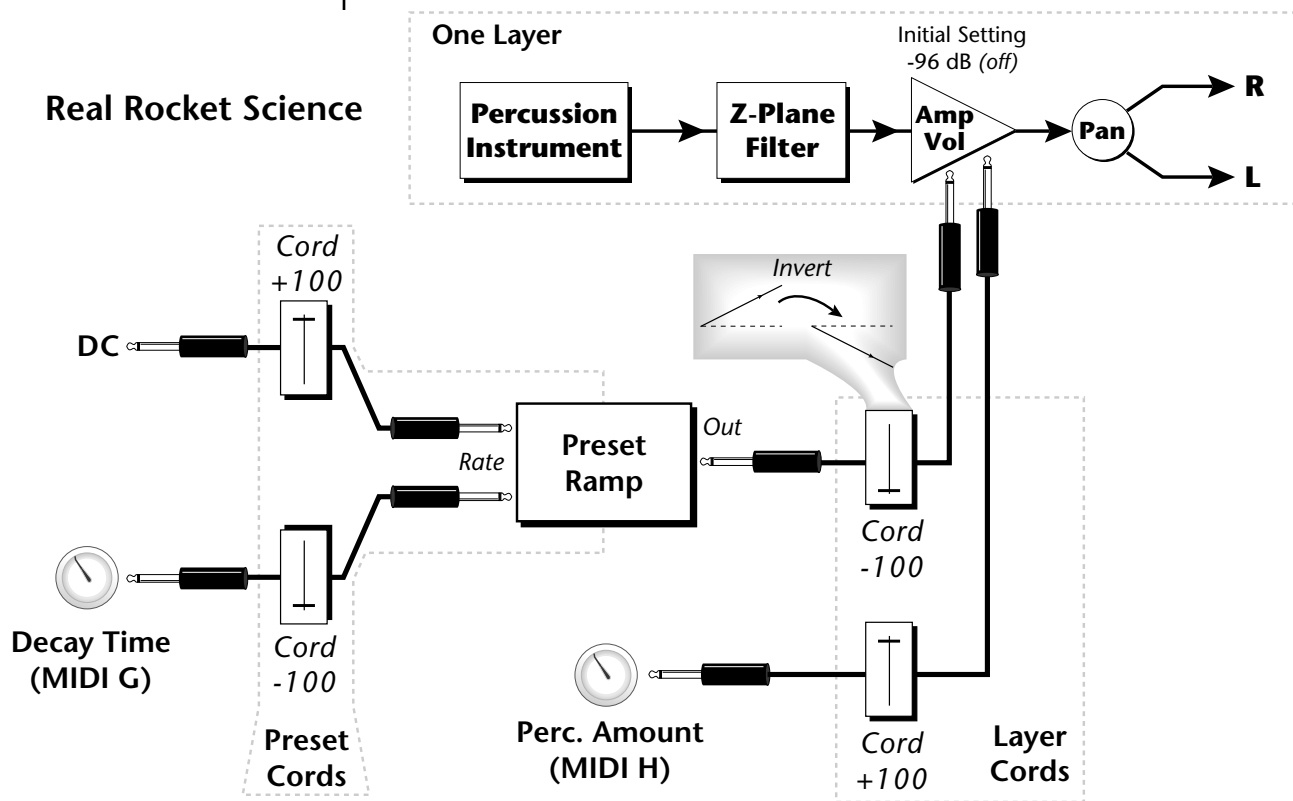


The combination of the DC & Perc. Decay Time Cords has the effect of reversing the Percussion Decay Time knob. The decay time increases as the knob is turned up.

1. DC - Sets initial ramp Fast-Positive (+100)
2. Decay Knob - Inverted value slows ramp as the knob value is increased.
3. Ramp Out Cord - Inverts Ramp slope (downward).
4. Amp Vol - Initial setting is Off (-96dB). Ramp cannot overcome this negative bias.
5. Perc. Amt - When this knob is turned up, the positive bias on the Amp is restored so that so that the Ramp can now affect Amp Volume.
6. Volume Envelope - Fast Attack, Full Sustain, No Release

## Using the Modulation Processors

Modulation processors are inserted into a modulation routing as shown in the following diagram.

The modular analog synthesizers of yesteryear were incredibly flexible, partly because processing devices could be connected in any order. Modulation processors are designed according to this modular concept. They can be linked and used in a wide variety of ways limited only by your imagination. Consider the following example:

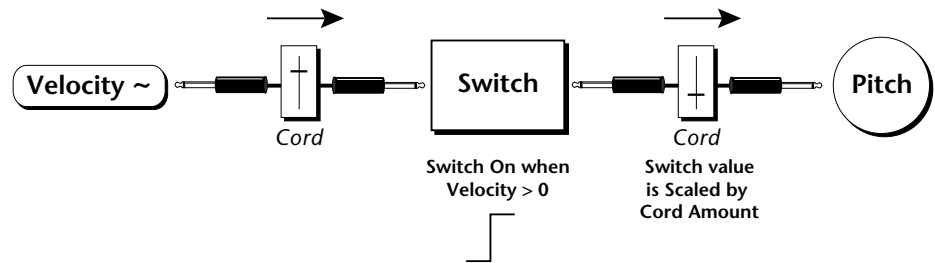


The patch illustrated above is programmed by setting the PatchCord screens as shown below.

L1 PATCHCORD	#01
Vel+- -> Switch	+100

L1 PATCHCORD	#02
Switch -> Pitch	+022

This particular modulation shifts the overall pitch up a fifth when the key velocity exceeds 64. Velocities below 64 play at normal pitch. Notes with velocities of 64 and above are raised a perfect fifth. The Velocity “~” source scales the played velocity around zero. In other words, low velocities (below 64) will have negative values and high velocities (64 and above) will be positive. A velocity of 64 would be zero. The Switch module only outputs a “1” if the input value is greater than zero. This digital “1” value can be scaled through the attenuator on the PatchCord to raise or lower the pitch by any amount. In this case, a scaling value of +22 raises the pitch by a perfect fifth. The amount of the PatchCord on the input to the switch is unimportant because ANY velocity value equal or greater than 64 will flip the switch. If the input PatchCord amount were a negative value however, the action of the velocity would be reversed and velocities less than 64 would raise the pitch and velocities equal or greater than 64 would play the original pitch.

But what if you want the velocity switch point to be something other than 64? Thanks to modulation processors, it can be done. Here's how.

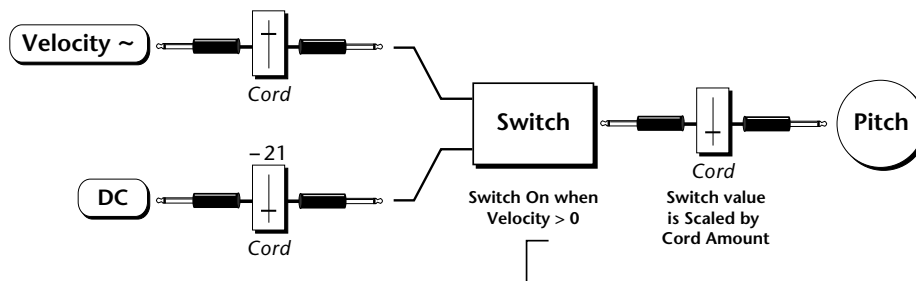

Connect the DC level to the input of the switch along with the velocity value. Note that more than one modulation source can be applied to the input of a processor.

DC offset adds a fixed value based on the PatchCord Amount setting. If applied to the switch along with the velocity, it changes the velocity value required to trip the switch. By setting the DC amount to a negative amount, higher velocity values are required to trip the switch. Setting the DC value to a positive value would bring the velocity switch point down. The PatchCord screens for this patch are shown below.


L1 PATCHCORD	#01
Vel+- -> Switch	+100

L1 PATCHCORD	#02
DC -> Switch	-021


L1 PATCHCORD	#03
Switch -> Pitch	+022

## More Examples

To derive a smooth random function you could route the Pink Noise generator through one of the Lag Processors. A smooth random wave is useful in small amounts to add a degree of natural variation to timbre when routed to filter cutoff. Normal pink noise is low pass filtered audio frequency noise with a 3 dB/octave slope to give equal energy per octave. Proteus 2000 pink noise is actually more like very low frequency filtered noise, but it is perfect for use as a random control source.

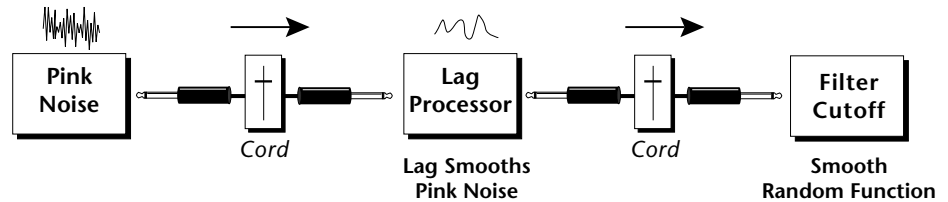

The **Quantizer** can generate interesting whole-tone scales when envelope generators or LFOs are routed to the input. The quantizer turns a smoothly changing input signal into a series of steps. By routing the output of the quantizer to Pitch and adjusting the PatchCord amounts, you can control both the number of steps and the pitch interval of each step.

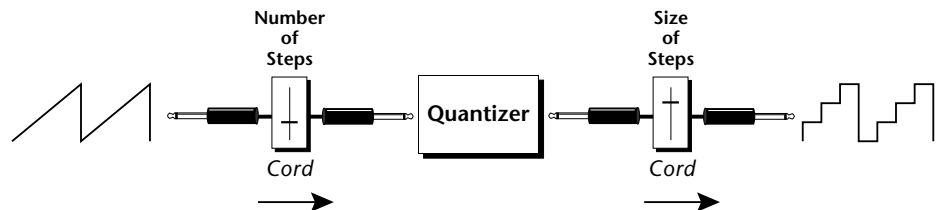



The input PatchCord amount controls how many steps will be generated. With a sawtooth wave (LFO+) feeding the input and the PatchCord amount set to 100%, sixteen steps are generated. The output PatchCord amount controls the size (or interval) of the steps.

Try setting up the following patch exactly as shown below using your favorite preset as a starting point.

L1	LF01	SHAPE	SYNC
		sawtooth	key sync

L1	LF01	RATE	DELAY	VAR
		0.35Hz	000	000

 The 4x Amp can be used to get more steps or increase the interval of the Quantizer.


 Experiment with this patch by connecting other sources and destinations to the Quantizer.

L1	PATCHCORD	#01
LFO1+	-> Quantize	+030

L1	PATCHCORD	#02
Quantize	-> Pitch	+100

L1	PATCHCORD	#03
DC	-> Pitch	-050

This patch generates an ascending arpeggio every time a key is pressed. A diagram of the patch is shown below. The patch is very straightforward except for the DC offset which was added to bring the pitch down into tune. (Sometimes you have to fix a problem, but using the mod processors there's usually a way around it to achieve the desired result.)

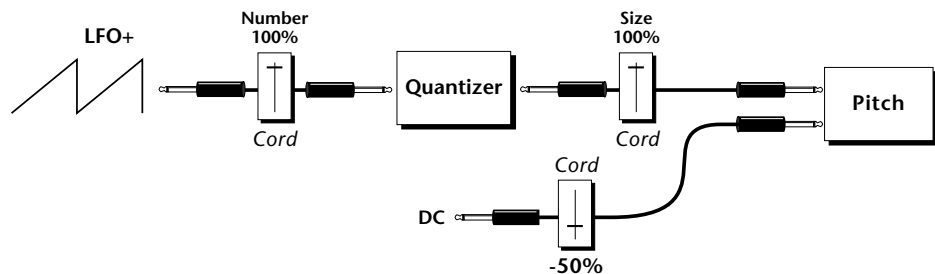


You can start to see some of the possibilities (and there are many). Whenever you find yourself wishing for some esoteric type of control, take a minute to think and see if there is a way to achieve the desired result using the modulation processors.




## Dynamic Filters

The block diagram of the Proteus 2000's signal path is shown below.

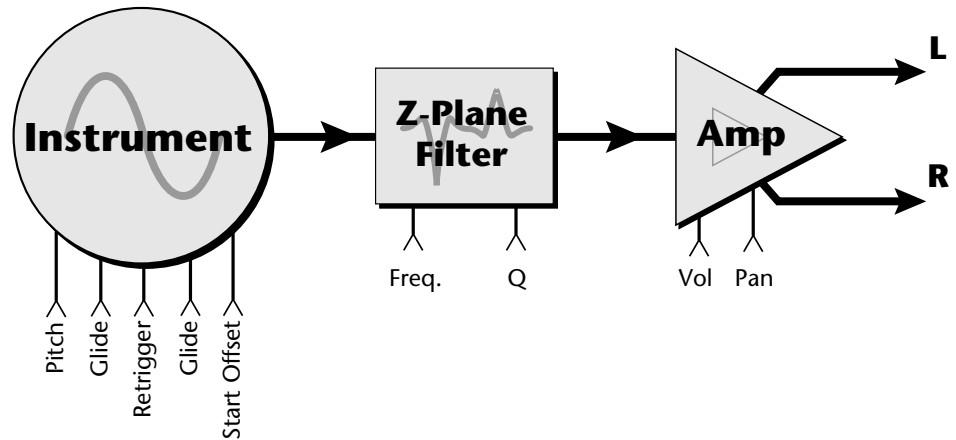


To understand how a filter works, we need to understand what makes up a sound wave. A sine wave is the simplest form of sound wave. Any waveform, except a sine wave, can be analyzed as a mix of sine waves at specific frequencies and amplitudes.

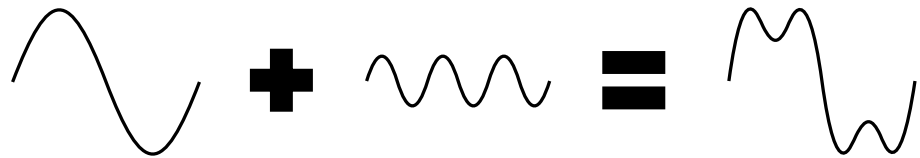


Any waveform can be analyzed as a mixture of sine waves.

One way to represent complex waveforms is to use a chart with frequency on one axis and amplitude on the other. Each vertical line of the chart represents one sine wave at a specific amplitude and frequency.

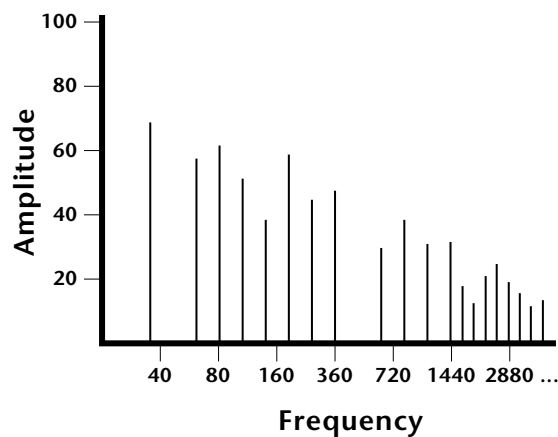


## What is a Filter?


Most sounds are complex waves containing many sine waves of various amplitudes and frequencies. A **filter** is a device which allows us to **remove certain components of a sound depending on its frequency**. For example, a *low-pass filter* lets the low frequencies pass and removes only the high frequencies as illustrated in the following diagram.

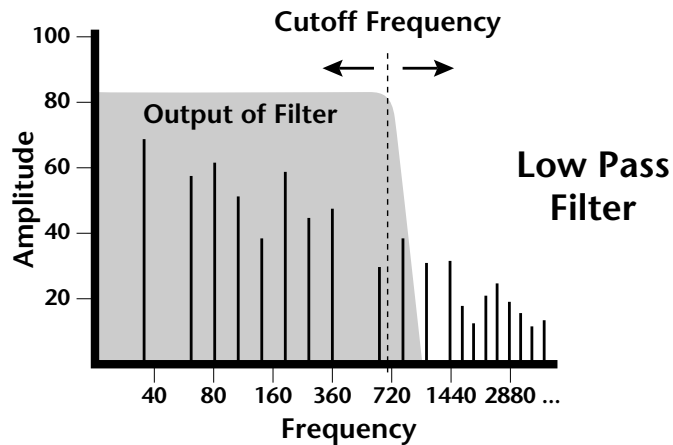

A filter that lets only the high frequencies pass is called a *high-pass filter* as illustrated in the following diagram.

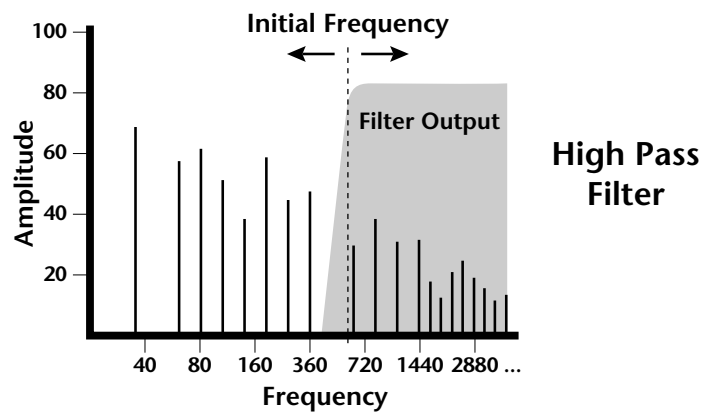


A filter which only lets a certain band of frequencies pass is called a *band-pass filter*.

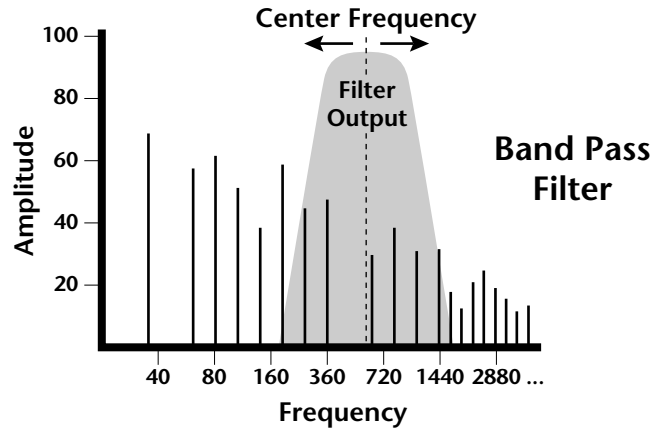


A *notch filter* is just the opposite of a band-pass filter and is used to eliminate a narrow band of frequencies.

Another control found on traditional filters is called Q or resonance. A lowpass filter with a high Q emphasizes the frequencies around the cutoff frequency. The following chart shows how different amounts of Q affect the low-pass filter response. In terms of sound, frequencies around the cutoff tend to “ring” with high Q settings. If a filter with high Q is slowly swept back and forth, various overtones are “picked out” of the sound and amplified as the resonant peak sweeps over them. Bells and gongs are real world examples of sounds which have a high Q.

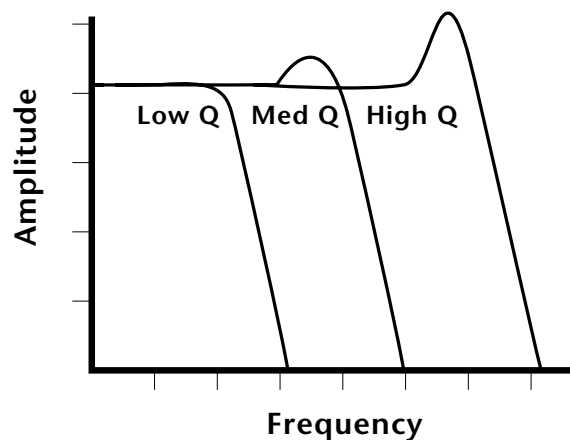

Another characteristic of a filter is the number of poles it contains. Traditional synthesizer filters were usually either 2-pole or 4-pole filters. The Proteus 2000 has selectable 2, 4, and 6-pole low-pass filters. The number of poles in a filter describes the steepness of its slope. The more poles, the steeper the filter's slope and the stronger the filtering action. The tone controls on your home stereo are probably one-pole or two-pole filters. Parametric equalizers are usually either two-pole or three-pole filters.

In terms of vintage synthesizers, Moog and ARP synthesizers used 4-pole filters, Oberheim and E-MU synthesizers were famous for their 2-pole filter sound.

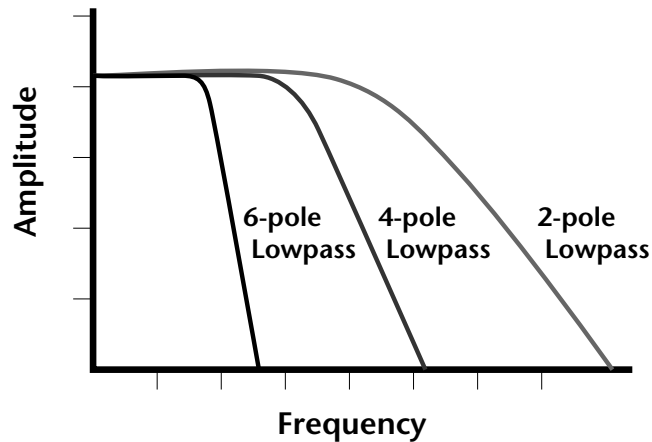


Using a filter, we have a way to control the harmonic content of a sound. As it turns out, even a simple low-pass filter can simulate the response of many natural sounds.

For example, when a piano string is struck by its hammer, there are initially a lot of high frequencies present. If the same note is played softer, there are fewer high frequencies generated by the string. We can simulate this effect by routing keyboard velocity to control the low-pass filter. The result is expressive, natural control over the sound.

If you use an envelope generator to control the cutoff frequency of a filter, the frequency content can be varied dynamically over the course of the note. This adds animation to the sound as well as simulates the response of many natural instruments.


## Parametric Filters

A more complex type of filter is called a parametric filter or *Swept EQ*. A parametric filter allows control over three basic parameters of the filter. The three parameters are: *Bandwidth*, *Frequency* and *Gain*. The Bandwidth allows you to select the width of the range of frequencies to be boosted or cut, the Frequency defines the center frequency of the bandwidth, and the Gain parameter either boosts or cuts the frequencies within the selected band by a specified amount. Frequencies not included in the selected band are left unaltered. This is different from a band-pass filter which attenuates (reduces) frequencies outside the selected band.

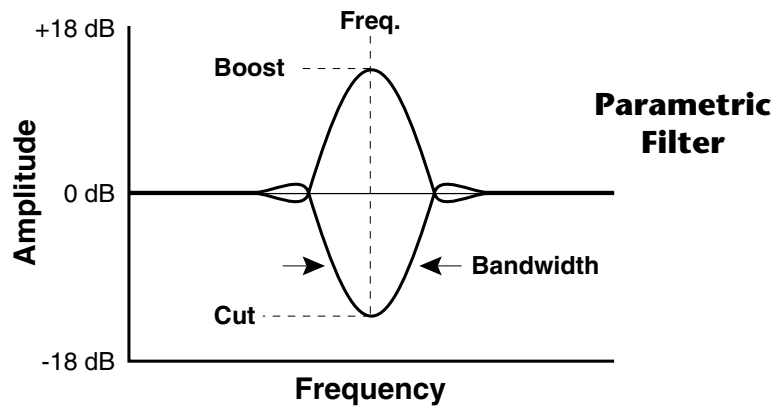

The parametric filter is quite flexible. Any range of frequencies can be either amplified or attenuated. Several parametric sections are often cascaded in order to create complex filter response curves.


If four parametric filter sections were cascaded, it would be possible to create the following complex filter response.

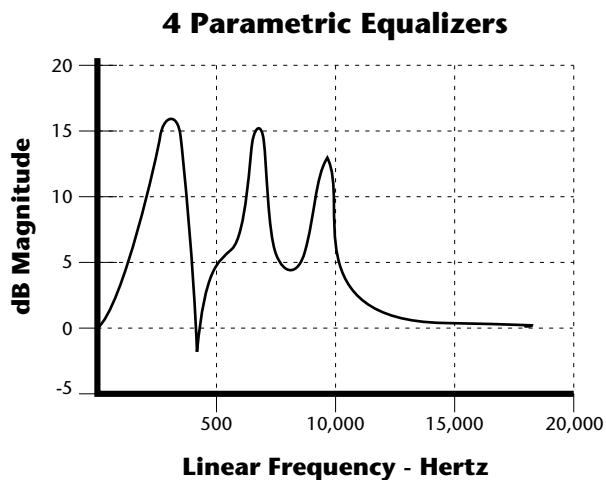

Many natural instruments have complex resonances which are based on their soundboard or tube size. The resonance shown above would be impossible to create using a normal synthesizer filter.

## The Z-Plane Filter

A Z-plane filter is a filter which can change its function over time. In a Z-plane filter, we start with two complex filter types and interpolate between them using a single parameter. See the following diagram.

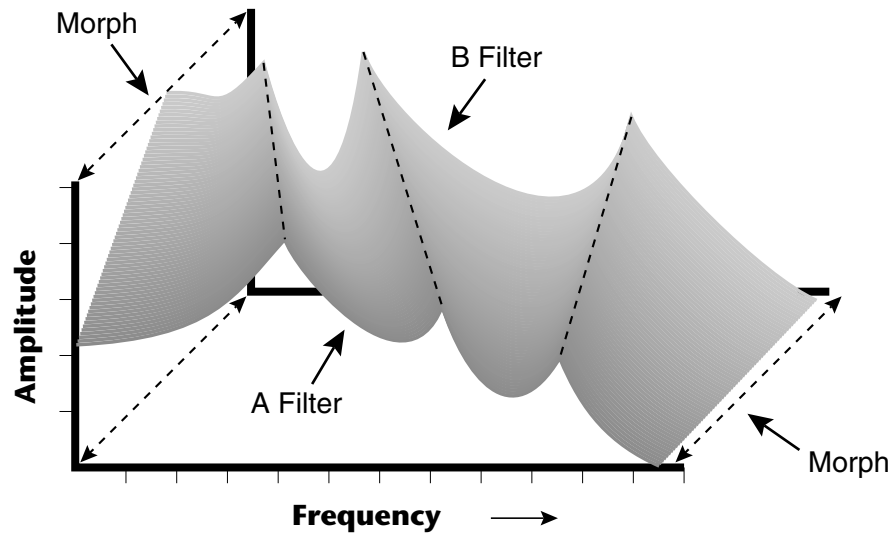

The Z-plane filter has the unique ability to change its function over time.

Filters A and B represent two different complex filters or “frames.” Changing a single parameter, the Morph, changes many complex filter parameters simultaneously. Following along the Morph axis you can see that the filter response smoothly interpolates between the two filters. This is the essence of the Z-plane filter. Through the use of interpolation, many complex parameters are condensed into one manageable entity.


Consider, as an example, the human vocal tract, which is a type of complex filter or resonator. There are dozens of different muscles controlling the shape of the vocal tract. When speaking, however, we don't think of the muscles, we just remember how it feels to form the vowels. A vowel is really a configuration of many muscles, but we consider it a single object. In changing from one vowel to another, we don't need to consider the frequencies of the resonant peaks. You remember the shape of your mouth for each sound and interpolate between them.

This Z-plane filter sweep can be controlled by an envelope generator, an LFO, modulation wheels or pedals, keyboard velocity, key pressure, and so on. In fact, any of the modulation sources can control the Z-plane filter.

Because creating the complex filtering is difficult and very time consuming, we have created 50 different types of filters and installed them permanently in ROM for your use. You simply select and use the filters in a manner similar to choosing an instrument. Because there are so many types of instruments and filters to choose from, the number of possible permutations is staggering.

## Signal Flow

Going back to the Signal Path diagram for a single channel we can reexamine the complete signal path.

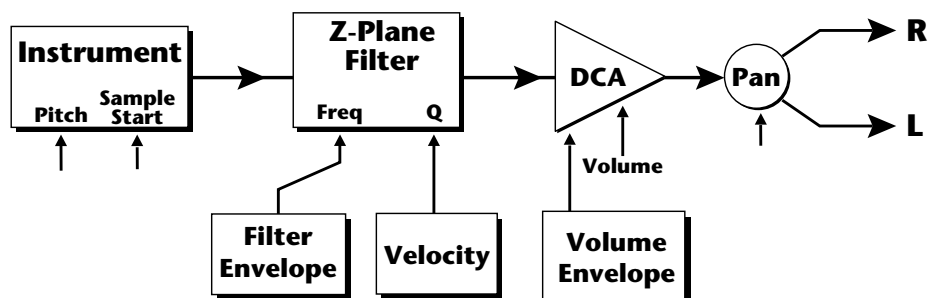

### Instrument

This is the sampled sound wave. The pitch of the instrument can be modulated by any modulation source. The sample start point can be changed only at the time the note is played.

### Z-Plane Filter

The Z-Plane Filter is used to shape the harmonic content of an instrument. The filter envelope is commonly used to shape the harmonic content dynamically over time but the filter frequency can be modulated by any source. The Q parameter can be modulated only at note-on time. There are 50 types of filters available. See “Proteus 2000 Filter Types” on page 108 for a complete list of the filters.

### Digitally Controlled Amplifier (DCA)

Together with the Volume Envelope, the DCA is used to shape the volume contour of a sound. The DCA can be controlled by any modulation source. Velocity is often used as a modulation source for the DCA so that the harder you play, the louder the sound becomes.

### Pan

Adjusts the balance of sound to the left and right channels. Pan can be modulated by any modulation source.

## MIDI Channels and Real-time Controls




The following MIDI controls are automatically routed in Proteus 2000:

Pitch Wheel	pwh
Modulation Wheel	01
Pedal	04
Volume	07
Pan	10
Expression	11

The MIDI real-time controllers may seem confusing at first, but they are really very simple once you understand them. You already know that there are 16 MIDI channels per MIDI cable. (*Proteus 2000 has two MIDI input ports and so can accept a total of 32 MIDI channels.*) Each MIDI channel uses three basic types of messages; note on/off, preset changes, and continuous controller messages. Your MIDI keyboard, in addition to telling Proteus 2000 which note was played, can also send real-time control information, which simply means control occurring in real-time or “live.” (You may be using a MIDI device other than a keyboard, but for simplicity's sake we'll presume that you *are* using a keyboard.) Real-time control sources include such things as pitch wheels or levers, modulation wheels or levers, control pedals and aftertouch and are used to add more expression or control.

Your MIDI keyboard sends out real-time controller information on separate continuous controller numbers. There is a set of 32 continuous controller numbers for each MIDI channel. Some of the controllers, such as the modulation wheel, volume, and pan have standardized numbers. For example, volume is usually sent on continuous controller #7. Your keyboard may have other real-time controls such as a control pedal or data sliders which can also be programmed to control the Proteus 2000.

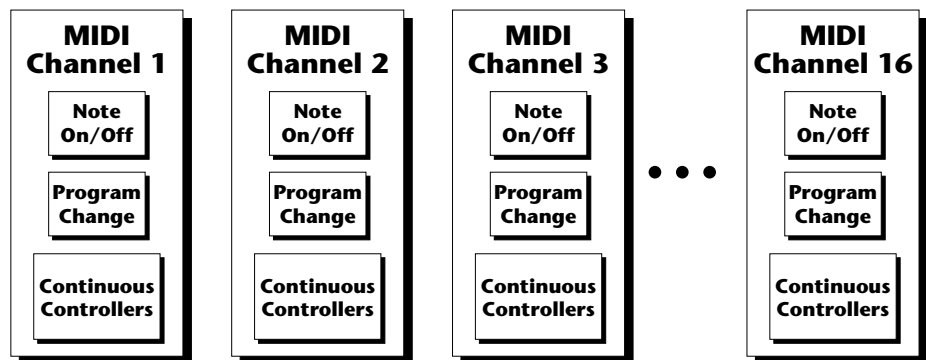


Any MIDI controller can be routed to any modulation destination. First, you have to know which controller numbers your keyboard transmits. Most modern MIDI keyboards let you select a controller number for each control on the keyboard. For example, it may let you select a number from 0-31 for the data slider. The realtime controller numbers that the keyboard transmits must match the numbers Proteus 2000 is receiving, otherwise nothing will happen when you move the controls.

Suppose you wanted to send the four data sliders on your master keyboard. Proteus can handle 12 MIDI controllers (A-L) of your choosing. “MIDI A-L” are simply names for the internal connections that link external MIDI continuous controllers to the PatchCord section of Proteus. There are two parts to the connection. First, MIDI controller numbers are assigned to the letters A-L in the Master menu. Next, the letters A-L are connected to synthesizer control parameters in the PatchCord section of the Edit menu. The PatchCord Amount scales the amount of each controller by a positive or negative value.



The factory presets have the MIDI A-L controls connected to standard synthesizer functions (marked on the front panel of Proteus 2000). By choosing any four of the eight standard functions, your four sliders will work the same on every preset. The chart below shows how this might work if your keyboard transmitted the slider settings on MIDI controllers 12-15.

Control	MIDI Controller #	Routing	Standard Function
Slider 1	12	A	Controls Filter Frequency
Slider 2	13	B	Controls Filter Resonance
Slider 3	14	G	Controls Movement
Slider 4	15	L	Controls FXB Amount

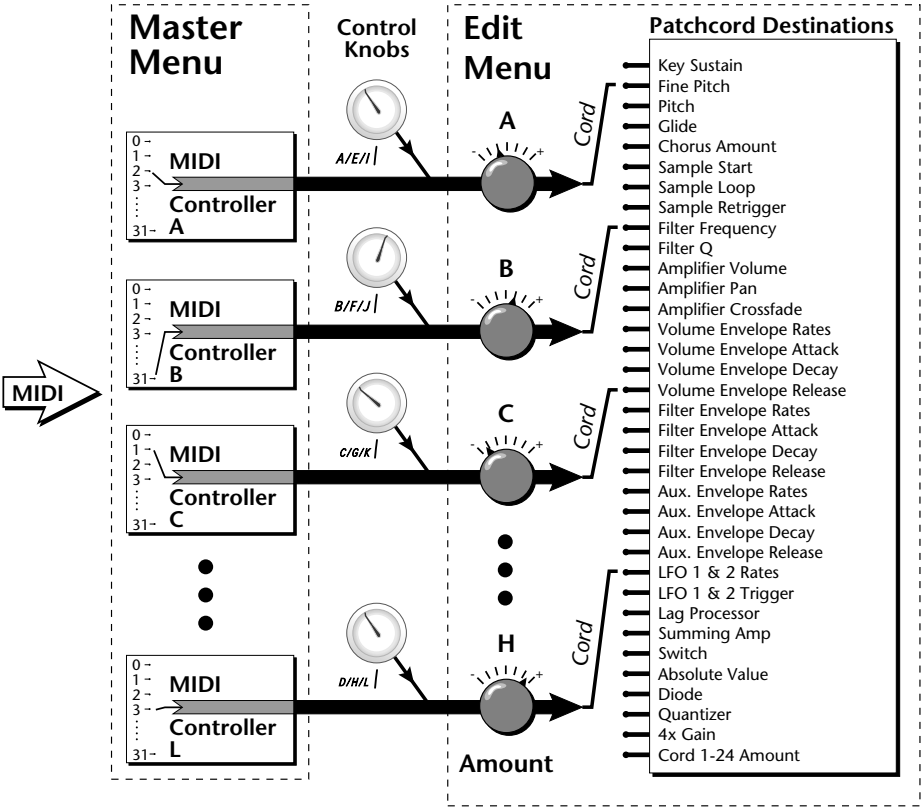

MIDI A-L are internal connections which simultaneously carry front panel controller knob data and MIDI continuous controller data.

The four controller knobs on the Proteus 2000 front panel work just like MIDI real-time controllers. The four controller knobs are permanently assigned to controllers A-L. Pressing the control button adjacent to the row of knobs selects A-D, E-H or I-L functions for the knobs. The front panel knob (A-L) and incoming MIDI controller messages assigned to that letter, both control the same parameter that you select in the PatchCord screen.

## Bank Select Commands



When you press the Audition button, the Bank Select MSB and LSB are displayed on the top line of the display.

When the original MIDI specification was developed, synthesizers had only 8 to 40 preset locations. At that time being able to select up to 128 presets didn't seem like much of a limitation. So it was that the original MIDI specification provided for the selection of up to 128 presets.

Musicians screamed for *MORE* and so the MIDI specification was later amended to include **Bank Select Commands**. It was decided that Bank Select Commands would use Continuous Controllers 0 and 32 to allow the selection of up to 16,384 banks of 128 presets (over two million presets).

Because Bank Selects are implemented using Continuous Controllers, the Bank Selections can be made *per channel*. (This is getting better and better.) For each MIDI channel, you can select any of 16,384 banks and then one of the 128 presets in the bank. Of course no synthesizer has 16,384 banks (yet), but hey, it's nice to know it's possible (for that really BIG project).

Continuous Controller (CC) 0 is the MSB (most significant byte) and CC 32 is the LSB (least significant byte). Normally you send both the MSB and LSB controllers to implement a bank change.

Proteus 2000 remembers the MSB and the LSB that were last sent (or last changed from the front panel). For example, if you have already set the Bank MSB to 04, you need only send the LSB to change banks within the Composer sound set. See the MIDI Bank Select chart below.


The selected bank remains selected until you change it (either via MIDI or by changing the bank from the front panel). Standard MIDI Program Change commands select from 128 presets within the selected bank.

<b>MIDI BANK SELECT</b>			
	<b>MSB</b>	<b>LSB</b>	
	<b>cc00</b>	<b>cc32</b>	
<b>USER</b>	00	00	Bank 0
<b>USER</b>	00	01	Bank 1
<b>USER</b>	00	02	Bank 2
<b>USER</b>	00	03	Bank 3
<b>CMPSR</b>	04	00	Bank 0
<b>CMPSR</b>	04	01	Bank 1
<b>CMPSR</b>	04	02	Bank 2
<b>CMPSR</b>	04	03	Bank 3
<b>CMPSR</b>	04	04	Bank 4
<b>CMPSR</b>	04	05	Bank 5
<b>CMPSR</b>	04	06	Bank 6
<b>CMPSR</b>	04	07	Bank 7

## Stereo Mix Outputs


Proteus 2000 has three sets of polyphonic stereo outputs (Main, Sub 1 and Sub 2). The channels used by a particular preset (or a particular MIDI channel) can be directed to appear at any one of these three stereo outputs. This feature is useful for adding signal processing (EQ, reverb, etc.) of individual sounds prior to final mixdown. By panning a preset completely left or right, it can be routed to a single output jack.

All presets are automatically routed to the Main outputs unless plugs are inserted into the Sub 1 or Sub 2 outputs.

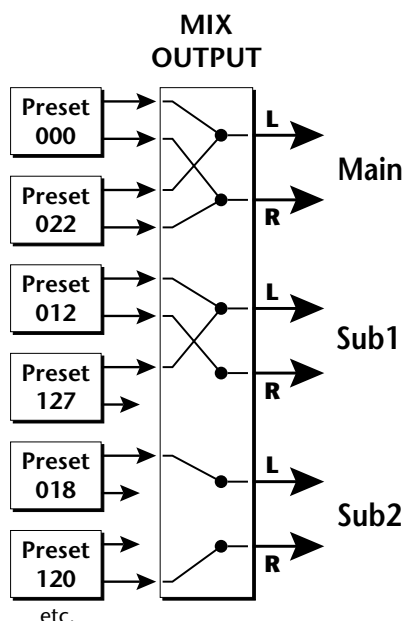

Each preset can be routed to one (and only one) set of stereo outputs. A preset can be routed to a single output using the pan control.

The routing can be performed according to MIDI channel from the Mix Output screen in the Master menu. Simply assign each channel to the desired output.

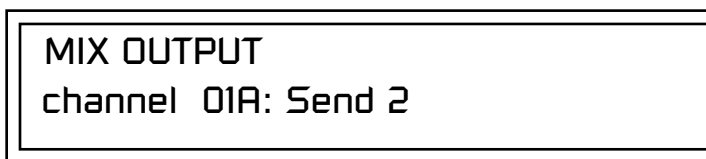

Sends DO NOT correspond to the same numbered Submix output numbers.

### SEND ROUTINGS

**Send 1** - Main Outputs

**Send 2** - Submix 1 (or Main Outs if no plug is inserted into Submix jack)

**Send 3** - Submix 2 (or Main Outs if no plug is inserted into Submix jack)


**Send 4** - Main Outputs

To route a particular preset to a Submix output, first go to the Mix Output screen in the Master menu and set the MIDI channel to "Preset".



MIX OUTPUT  
channel 01A: Preset

Next set the Mix Output routing in the preset to the desired output (for each layer). Yes, you can send each layer to a different output if you want.

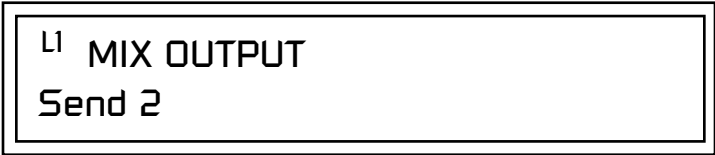

LI MIX OUTPUT  
Send 2

Why have a Send 4 routing at all if it only goes to the Main output? The answer lies in the dual function of the Sends. Sends can be used either as *Effect Sends* or as *External Output* routing busses. Send 4 is only used as an effect send, while Sends 2 and 3 can be used as effect sends **or** external routing busses.

By sending different amounts of presets to the effects, subtle or striking effects can be achieved using the two effect processors. This feature allows you to get the most out of two effects since you can have eight different mixes.

For more information, See "*Mix Output*" on page 38.

# Edit Menu



*While the Edit menu is activated, all incoming MIDI preset changes on the selected channel are ignored.*



*If there is no "A" option in the Layer field, you must enable the "Edit All Layers" function in the Master Menu.*

The Edit Menu contains four layers of preset parameters that you can modify and then save as preset information in one of the user preset locations.

There are four instrument layers in the Edit menu. See the illustration on page 87 for a description of the Preset Layer model.

## ► To Access the Edit Menu

Press the Edit button, lighting the LED. The Edit Menu screen displays the menu page most recently selected since powering up Proteus 2000. The cursor appears below the first character of the screen heading on line one.

## ► To Scroll through Layers

Place the cursor below the layer field. Rotate the Data Entry Control to select a layer (1-4).

You can also select **All Layers** by choosing "A" in the layer field. When All Layers is selected, the existing parameter value for any field will be displayed if the values of all four layers are equal. If the values of all four layers are NOT equal, the value of layer 1 will be displayed with flashing characters. If you change the parameter value, all layers will assume the new value and the display will stop flashing.

## ► To Scroll through Pages

Place the cursor below the page title field. This will automatically be done when you press the Home/Enter button. Rotate the Data Entry Control to scroll through the pages.

## ► To Change a Parameter

Place the cursor below the parameter field. Rotate the Data Entry Control to change the parameter value.


Preset Name

The Preset names consists of two parts: a 3 letter preset category and a 12 letter preset name. Position the cursor under the character location and use the data entry control to change the character.

The preset category is used in conjunction with the Sound Navigator feature. Using the Sound Navigator, a category is selected and the presets in that category are listed in alphabetical order. Creating categories makes it easier to find specific sounds when you need them. For more information on Sound Navigator, see Sound Navigator in Chapter 2: Operations.




The keyboard can also be used to select character. The charts below show the keyboard character assignments.

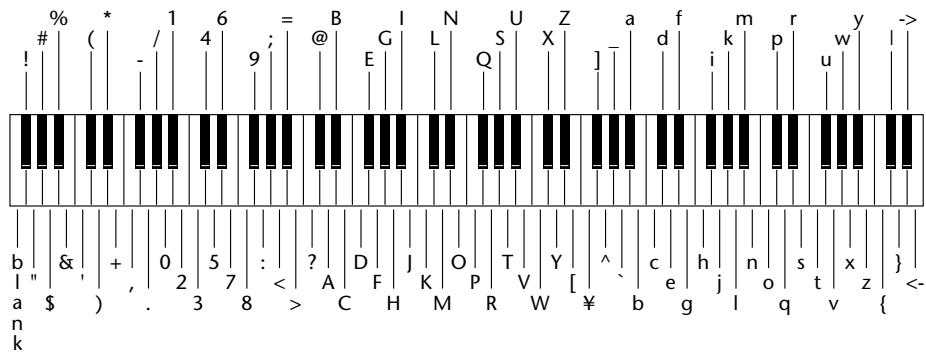

	C	C#	D	D#	E	F	F#	G	G#	A	A#	B	Pitch
-2						blank	!	"	#	\$	%	&	
-1	'	(	)	*	+	,	-	.	/	0	1	2	
0	3	4	5	6	7	8	9	:	;	<	=	>	
1	?	@	A	B	C	D	E	F	G	H	I	J	
2	K	L	M	N	O	P	Q	R	S	T	U	V	
3	W	X	Y	Z	[	¥	]	^	_	`	a	b	
4	c	d	e	f	g	h	i	j	k	l	m	n	
5	o	p	q	r	s	t	u	v	w	x	y	z	
6	{		}	➡	⬅								
Octave													


## Four Layer Architecture

Proteus 2000 provides a 4 layer instrument structure. Each layer is a complete synthesizer voice with 50 filter types, over 64 modulation sources, more than 64 modulation destinations and 24 patchcords to connect everything together. In addition, the four layers can be crossfaded or switched by key position, velocity or any real-time modulation source.

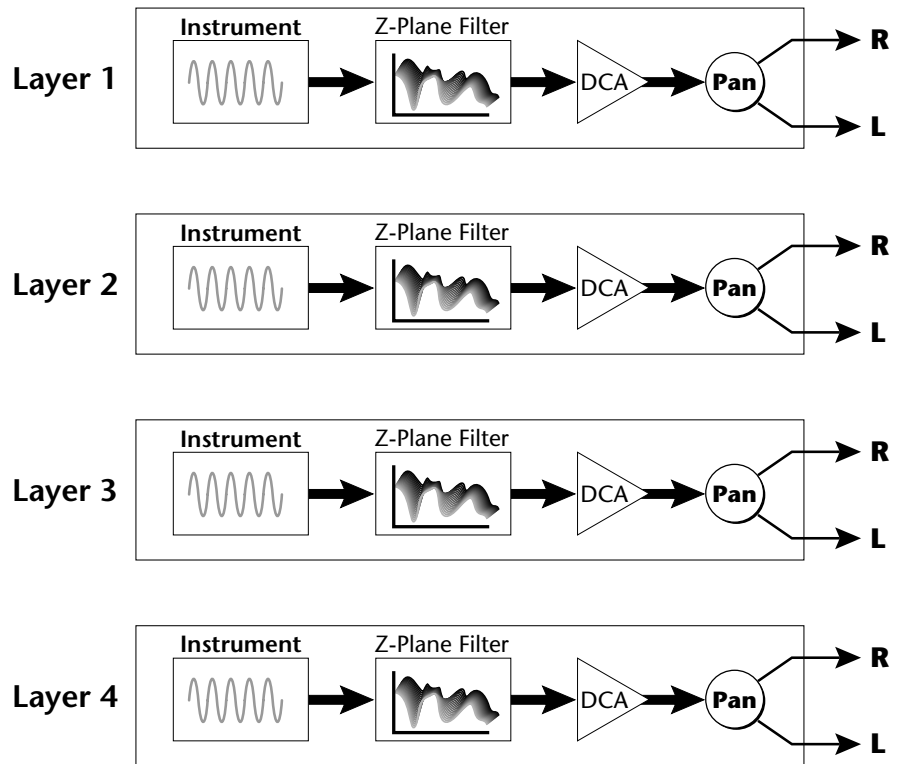

### Selecting Layers

In most of the Edit screens, the selected layer is shown in the upper left corner of the display. Layers 1-4 or All can be selected by positioning the cursor on this field and using the Data Entry Control to change the layer. In the screen shown below, Layer 1 is selected.

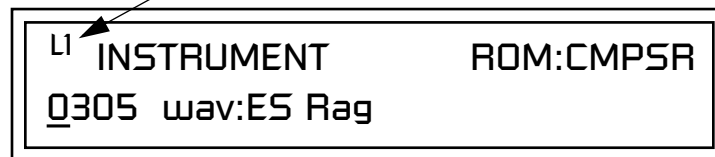


When "All Layers" (A) is selected, the existing parameter value for any field will be displayed if all layers are equal. If the layer parameter values are NOT equal, the value of Layer 1 will be displayed with flashing characters. If you move the Data Entry Control all values will be equal to this new value and the parameter value will no longer flash.

## Defining Layer Parameters

### Selecting an Instrument

The Edit menu parameters define the four layers and include the instrument assigned to the layer, the ranges of the layer, tuning, envelopes, filters, and patch cords. These parameters are defined for each layer on an individual basis (based on the currently selected layer). See “Common Preset Parameters” on page 119 for global preset settings.


The Instrument parameter defines which of the available instrument sounds is played by the current layer.

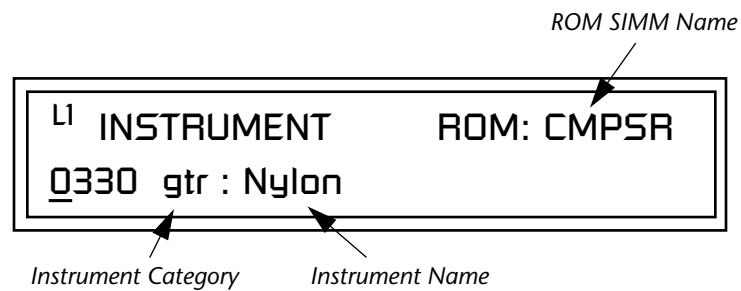

To select an instrument for the selected layer(s), move the cursor to the bottom line of the display and change the instrument using the Data Entry Control.

### Sound Navigator

Sound Navigator also works to help select Instruments although the category names are predefined. When the cursor is on the Instrument Category field, turning the Data Entry Control selects different instrument categories. The Name Field will change to show the first instrument in each category. Move the cursor to the instrument name to select instruments in the selected category.

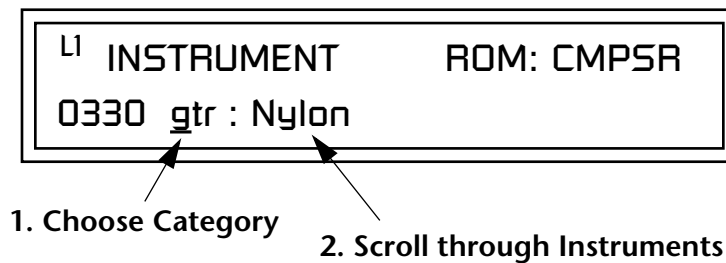


Selecting Categories of Instruments using Sound Navigator.




## Defining Key Range

The Key parameter defines the range on the keyboard used by the current layer. The Key range is from C-2 through G8.

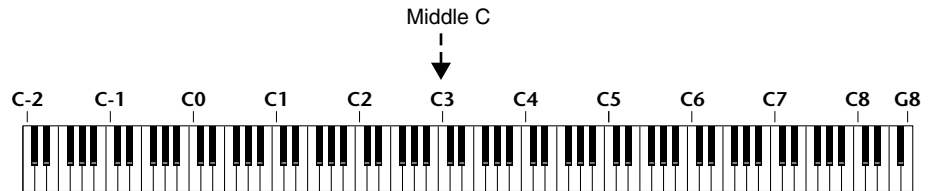


To define the range, set the low key value and the high key value.

You can select key numbers by simply pressing the desired keyboard key when the cursor is positioned on the low or high key field in the display.

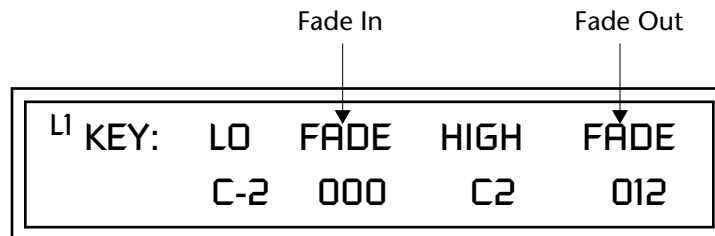


Layers can be crossfaded according to key position by adjusting the Low and High Fade parameters. The first Fade field determines how many semitones it takes the layer to Fade In from the low key. The second Fade field determines how many semitones it takes the layer to Fade Out to the high key. The screen shot above and the diagram below show Layer 1 being faded out over a one octave range.

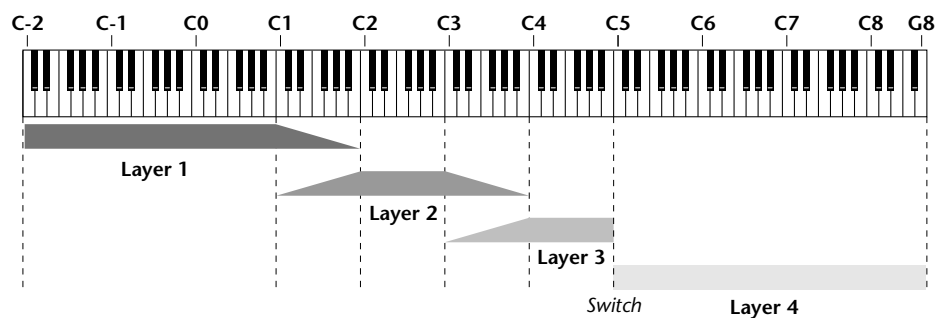


With a High Fade value of zero (as in layer 3 of the diagram), the layer simply switches off at the high key.

### ► To Switch Layers According to Key Position

The Key Range parameter allows you to create a “split” keyboard with up to four sounds adjacent to each other on the keyboard. This is shown in the diagram below.

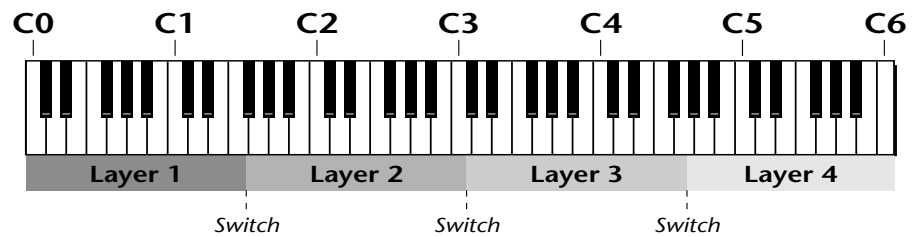

Just assign the low and high key range for each of the four layers with Fade set to zero. Set the Low and High Keys so they don’t overlap other layers.

 You can select key numbers by simply pressing the desired keyboard key when the cursor is positioned on the low or high key field in the display.

L1	KEY:	LO	FADE	HIGH	FADE
		<u>C</u> 0	000	F1	000

L2	KEY:	LO	FADE	HIGH	FADE
		<u>F</u> #1	000	C3	000


L3	KEY:	LO	FADE	HIGH	FADE
		<u>C</u> #3	000	F#4	000

L4	KEY:	LO	FADE	HIGH	FADE
		<u>G</u> 4	000	C6	000

If two layers do overlap, both will play as shown in the next example.

### ► To Stack Layers

If the ranges of two or more Layers overlap it is called *stacking layers*. All Layers assigned to a key sound when the key is played. This is shown in the following diagram. It's very easy to stack layers. Simply duplicate the key ranges for any layers you want to stack.

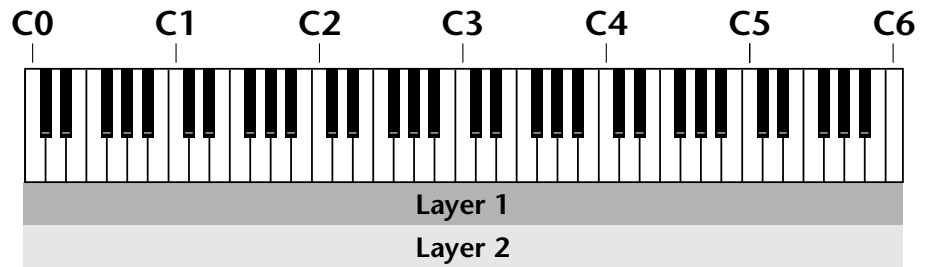

L <sup>1</sup>	KEY:	LO	FADE	HIGH	FADE
		<u>C0</u>	000	C6	000

L <sup>2</sup>	KEY:	LO	FADE	HIGH	FADE
		<u>C0</u>	000	C6	000


## Defining the Velocity Crossfade Range

Velocity is a measure of how hard the key is pressed. Velocity Range lets you control the volume of the layers using velocity. Using this function you can crossfade or cross-switch between layers according to how hard you play the keyboard.

Set the velocity range of the layer by defining the high and low velocity values. Values range from 0 (off) to 127 (hardest).

L2	VEL:	LO	FADE	HIGH	FADE
		36	012	96	012


The Fade fields define the velocity crossfade range for the currently selected layer. The first Fade field defines the Fade In range for the low velocity value. The second defines the Fade Out range for the high velocity value.

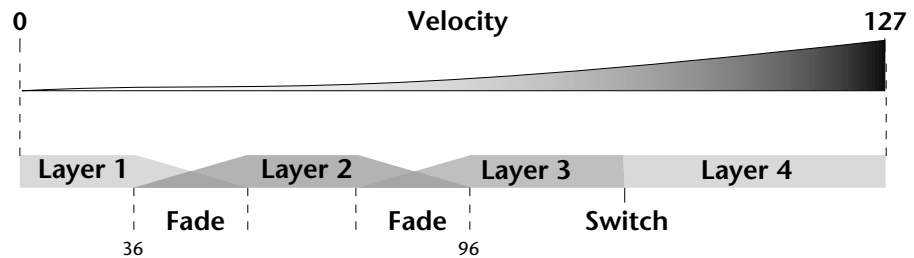

With soft playing, Layer 1 sounds. As you play harder, Layer 1 gradually fades out and Layer 2 fades in. When the keyboard is played hard, Layer 3 plays.

### ► To Set Up a Velocity Crossfade Between Layers

Set the velocity fades so that layer 1 fades out with higher key velocity, while layer 2 fades in. At a velocity of 64, the two sounds are equal volume. You may want to adjust the fade in and fade out points to achieve a natural sounding crossfade. These parameters vary depending on the sounds.

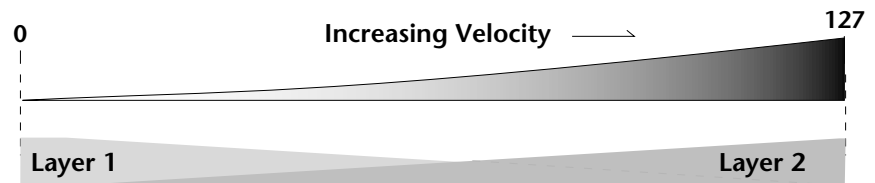


<sup>L1</sup> VEL:	LO	FADE	HIGH	FADE
	<u>000</u>	000	127	127

<sup>L2</sup> VEL:	LO	FADE	HIGH	FADE
	<u>000</u>	127	127	000

## Defining the Real-time Crossfade Range

The Real-time Crossfade window lets you control the volume of the four layers using a real-time controller such as a front panel knob, a pedal or an LFO or Envelope generator. The controller is defined by the PatchCord parameter (see “PatchCords” on page 115).

The Fade fields define the crossfade range in velocity for the currently selected layer. The first Fade field defines the Fade In amount for the low Real-time Control value. The second defines the Fade Out amount for the high Real-time Control value. The Fade value range is from 0 to 127.

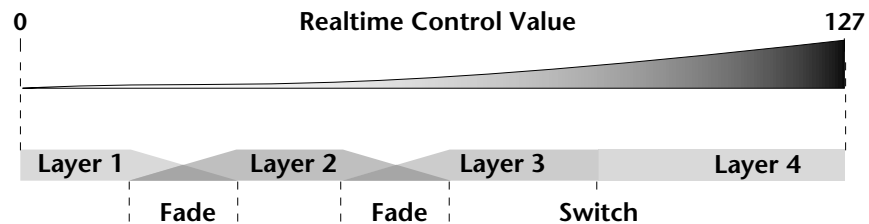

After the Ranges and Fades have been adjusted for each layer in the Real-time Crossfade screen, you must assign a real-time controller to RTXfade (Real-time Crossfade) **on each Layer** in the PatchCord screen. Set the PatchCord Amounts to +100.

### ► To Set Up a Real-time Crossfade Between Two Layers

As the real-time control (knob, pedal, LFO, etc.) is increased, Layer 1 fades out as Layer 2 fades in. This example only uses two of the possible four layers. Refer to the screen diagrams below.

L1	RT:	LO	FADE	HIGH	FADE
		000	000	127	127

L2	RT:	LO	FADE	HIGH	FADE
		000	127	127	000

1. Select a preset.
2. Press the Edit button to access the Edit menu.
3. Go to the Instrument page and select instruments for Layers 1 and 2.

4. Press Enter, then use the Data Entry Control to advance to the Real-time Crossfade page.
5. Define the High and Low range of each Layer. In this example the entire range of 0-127 is used.
6. Define the Fades for each Layer. This is just an initial setting. The Range and Fade parameters may have to be adjusted later to get a smooth crossfade.
7. Press Home/Enter and use the Data Entry Control to advance to the PatchCord page. Select Layer 1.
8. Select the modulation source for the crossfade (knob, pedal, LFO, Envelope) and set the destination to RTXfade. Set the Cord Amount to +100.
9. Select Layer 2. Select the same source and destination for the crossfade and set the Cord Amount to +127.


L1 PATCHCORD		#01
MidiA	-> RTXfade	+100

10. Play the keyboard while adjusting the real-time controller. Go back to the Real-time Crossfade screens to fine tune the crossfade if necessary. Decreasing the fade size will narrow the region where both layers are sounding.

### ► To Randomly Cross-Switch Between Four Layers

In certain situations, you may want to switch between several layers randomly. **Crossfade Random** is a modulation source specifically designed to handle this situation. Unlike the other random sources, Crossfade Random generates one random number for all layers each time a key is pressed.

To set up a four layer Cross-Switch, simply assign each of the four layers to a different Real-time Crossfade range, then assign XfdRnd to RTXfade in the PatchCords for each layer.

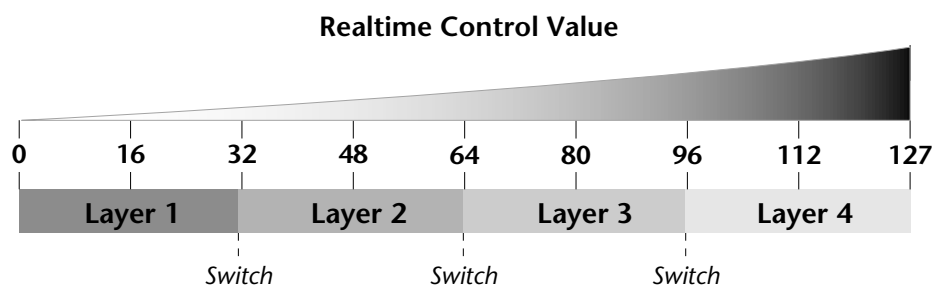

1. Press the Edit button to access the Edit menu.
2. Go to the Instrument screen and select Instruments for Layers 1 through 4.
3. Press Enter, then use the Data Entry Control to advance to the Real-time Crossfade page.

L1	RT:	LO	FADE	HIGH	FADE
		000	000	<u>031</u>	000

L2	RT:	LO	FADE	HIGH	FADE
		<u>032</u>	000	063	000

L3	RT:	LO	FADE	HIGH	FADE
		<u>064</u>	000	095	000

L4	RT:	LO	FADE	HIGH	FADE
		09 <u>6</u>	000	127	000

4. Define the High and Low range of each Layer as shown above.
5. Press Home/Enter and use the Data Entry Control to advance to the PatchCord page. Select Layer 1.
6. Select XfdRnd as the modulation source and RTXfade as the destination. Set the Cord Amount to +100.
7. Repeat step 6 for the remaining three layers.




## Transposing the Instrument

L1	PATCHCORD	#01
	XfdRand -> RTXfade	+100

- That's it! Now set each Layer up the way you want. Try radically different instruments, filter settings, or tunings. Or you can make each layer just slightly different for a more natural effect. Try adjusting the Fades or overlapping the ranges if you want more than one layer to play at once.

The Transpose parameter lets you transpose the key of the current layer's Instrument. Transpose works by shifting the keyboard position in semitone intervals relative to middle C. Use this parameter to transpose different layers apart by semitone intervals. For example, by transposing one layer by +7 semitones, it will track other layers at a perfect fifth interval.



The range of transposition is -36 to +36 semitones.

L1	TRANPOSE
	+36 semitones

## Tuning

The Tuning parameter changes the pitch of the key in semitone and 1/64 semitone intervals.

L1 <u>T</u> UNING			
Coarse:	+36	Fine:	+63

Use the Coarse field to shift the tuning by semitone intervals. Use the Fine field to shift tuning by 1/64 semitones (or 1.56 cents) intervals.

### Background: Transpose vs. Coarse Tuning

Transpose works by shifting the keyboard assignment of the Instrument (as if you were sliding the keyboard up and down with the Instrument remaining in the same position). Coarse Tuning keeps the instrument placement on the keyboard and actually tunes the samples up using a digital process called interpolation. Use Course Tuning on drum instruments to change the pitch while keeping sample placement constant. Coarse Tuning can also be useful to slightly change the timbre of the instrument.


## Amplifier


This parameter sets the initial volume and pan position of the current layer. These values can be changed using any Real-time Controller set up in the PatchCords. The value range for the volume is from -96 dB to +10 dB. 0 dB is the default setting. Routinely turning the volume up to +10 dB is not recommended because it doesn't allow other modulation sources to increase the volume further.

L1 <u>A</u> MPLIFIER	
Volume:	+10dB      Pan: 48L

This field determines the initial Pan value for the current layer. The value range for Pan is from 64L to 0 (left) and 0 to 63R (right). Pan adjusts the volume into the left and right output channels relative to the Pan setting in the main Preset Select screen (see "Channel Pan" on page 28). So, if you, for example, set the Pan value in the Preset Select screen to 64L and set this Pan value to 63R, the actual pan amount would be 0 as these two pan parameters are relative to each other.

## Volume Envelope

 *Factory Mode is useful for Instruments containing multiple drums, since each drum can have its own envelope settings.*

 *If two adjacent segments have the same level in a "time-based" envelope, the segment will be skipped. Adjacent segments must have different levels for the rate control to work.*


An envelope can be described as a "contour" which is used to shape the sound over time. The *Volume Envelope* controls the volume of the sound in the current layer over time. The way the volume of a sound evolves has a profound effect on how we perceive the sound.

Each instrument has its own Factory preset Volume Envelope setting. The Volume Envelope allows you to program your own envelope settings.


### Selecting the Mode

The Mode field determines whether the layer will use the instrument's default envelope (Factory) or use the user-programmed Volume Envelope. There are three mode options and repeat.

- **Factory:** Uses the factory preset envelope contained in each instrument. If you select the "Factory" mode, the Volume Envelope parameters are disabled and the factory defined settings are used instead.

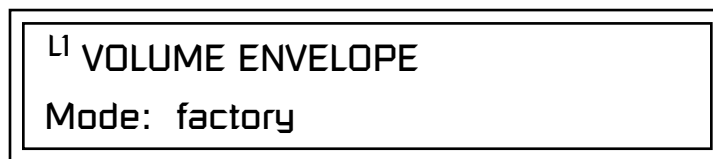

- **Time-based:** Defines the Volume Envelope rates from 0 to 127 (approximately 1 ms to 160 seconds). The Master clock has no affect on time-based rates.
- **Tempo-based:** The Volume Envelope times vary based on the master tempo setting. Note values are displayed instead of a number when the time corresponds to an exact note value. Tempo-based envelopes are useful when using external sequencers and arpeggiators because the envelope rates compress and expand according to the Master Tempo setting, keeping the envelopes in sync with the sequence or arpeggio.

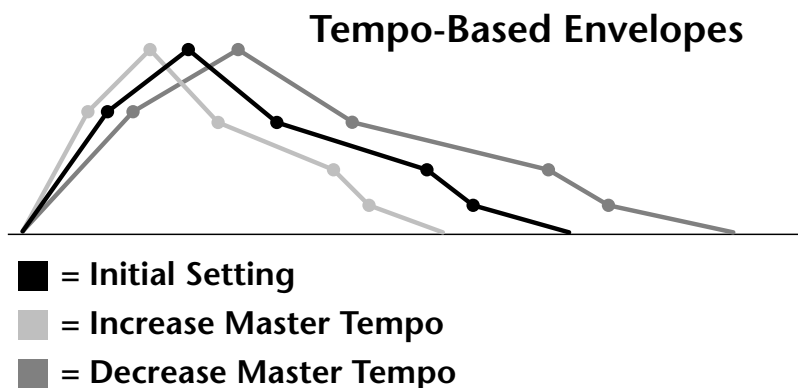

Tempo-based envelope rates change according to the Master Tempo rate.



See the Programming Basics section of this manual for detailed information about how the Envelopes work.

### Defining the Volume Envelope

The Volume Envelope controls the volume of the layer over time. The Volume Envelope has six stages to the contour: Attack 1, Attack 2, Decay 1, Decay 2, Release 1 and Release 2. When a key is pressed, the Envelope goes through the first four stages. If you continue to hold down the key, the envelope holds at the Decay 2 level. When the key is released, the envelope continues through the Release stages ending at the Release 2 level.

L1	VOL ENV	RATE	LEVEL
	<u>Attack 1</u>	84	100%


As soon as the Attack 1 level is reached, the Attack 2 phase begins. When the Attack 2 Level is reached, the Decay 1 phase begins. When the key is released, the envelope immediately jumps to the Release 1 stage, then the Release 2 stage finally ending at the Release 2 level.

If you have selected the factory mode, the Volume Envelope parameter screen looks like the following illustration.

L1	VOL ENV	RATE	LEVEL
	(using factory envelope)		



If the Release 2 level is set at a value other than zero, the note will continue to sound after the key is released. This might be useful for drone effects, but the channel won't stop sounding until all channels are used up.

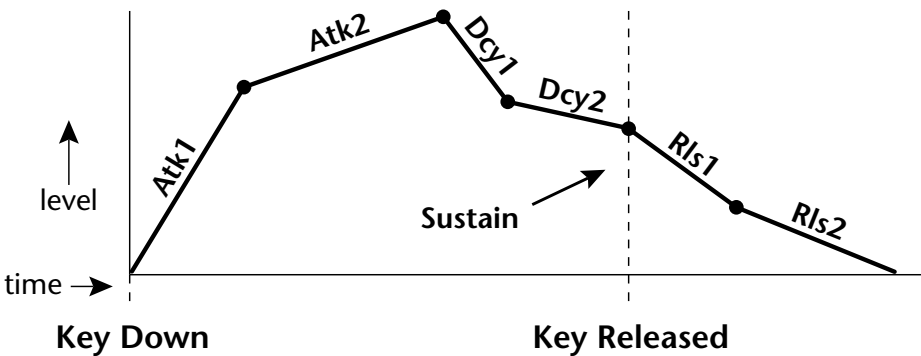

On the Volume Envelope, levels can only be set to positive values. The value range is from 0 to +100.

## Chorusing the Layer



**WARNING:** Because it works by doubling instruments, Chorusing halves the number of notes you can play.

Chorusing “thickens” the sound by doubling the sound in stereo and then detuning it. Every layer with chorus turned on uses twice the polyphony for that layer.


L1	CHORUS	WIDTH
	off	100%

The first field in this screen turns Chorus On or Off and allows you to adjust the amount of detuning (1 to 100%). The *Width* parameter controls the stereo spread. 0% reduces the chorus to mono and 100% provides the most stereo separation.

## Sound Start Offset and Delay

**Sound Start** sets where the instrument begins playing when you hit a key. Setting the Start Offset amount to “0” plays the sample from the beginning. Higher values move the Sample Start Point further into the sample toward the end. There is also a PatchCord source which can be used to change the Sound Start point at note-on time.

L1	SOUND	START	DELAY
		127	127

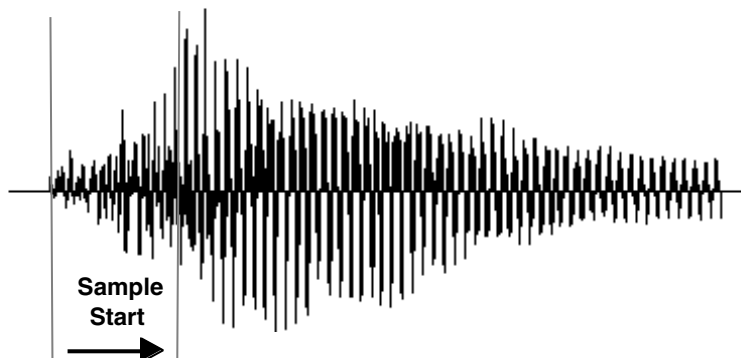

Controlling the Sound Start using Key Velocity (< Amt -) brings in the attack of the wave only when you play hard. This is especially effective with percussion instruments.

**Delay** defines the time between when you hit a key (note-on) and the onset of the current layer’s note and the start of the envelopes (if applicable). Delay values below zero are *Tempo-based* values, meaning the time is based on the Master Tempo setting. Note values are displayed by adjusting the Delay Time value below zero. The sound will be delayed by the selected note value based on the master clock.

## Non-Transpose Mode

This function turns keyboard transposition On or Off for the current layer. With Nontranspose “on,” the keyboard will not control the pitch of the instrument. This is a useful function for drones, attack “chiffs,” or other sound effects which you may not want to track the keyboard.

L1 NONTRANPOSE  
off

## Solo Mode

Provides the playing action of a monophonic instrument such as a lead synthesizer by preventing more than one note from sounding at once. There are eight different solo modes provided. Try setting up different layers with different solo mode and glide rates or combine solo mode with polyphonic playing modes.

L1 SOLO MODE  
synth (low)



In order to define a monophonic glide (see the Portamento parameter), you must be in Solo mode.

The Solo modes are:

**Multiple Trigger:** Last note priority. No key-up action. Retriggers envelopes and samples when a key is pressed.

**Melody (last):** Last note priority. No key-up action.

***First solo note:*** Envelopes start at Attack segment from zero. Samples start at the beginning.

***If previous note is releasing:*** Envelopes start at Attack segment, but from current level. Samples start at the beginning.

***When playing “Legato”:*** Envelopes continue from current segment and level. Samples start at the loop or the beginning if unlooped.

**Melody (low):** Same as Melody (last), but with low note priority. Newly played keys which are higher than the lowest solo key held do not sound.

**Melody (high):** Same as Melody (last), but with high note priority. Newly played keys which are lower than the highest solo key held do not sound.

**Synth (last):** Similar to Melody (last) but this mode has key-up action. When you release the currently sounding solo key while holding other keys down, the highest held solo key sounds in a Legato fashion.


## Assign Group

**Synth (low):** Same as Synth (last) but with low note priority. When you release the currently sounding solo key while holding other keys down, the lowest held solo key sounds in a Legato fashion (MiniMoog).

**Synth (high):** Same as Synth (last) but with high note priority. When you release the currently sounding solo key while holding other keys down, the highest held solo key sounds in a Legato fashion.

**Fingered Glide:** Same as Synth (last), except that Glide is disabled when playing Staccato, enabled when playing Legato.

Use the Assign Group parameter to assign a certain number of channels to each layer. By assigning all voices in the preset to assign groups, important parts are protected from being “stolen” by more recently played keys. Or you can assign a voice, such as an open high hat, to a mono channel so it is cancelled by a closed high hat on the same mono channel. Layers rotate within their assigned “bin” of channels, not interfering with other bins.

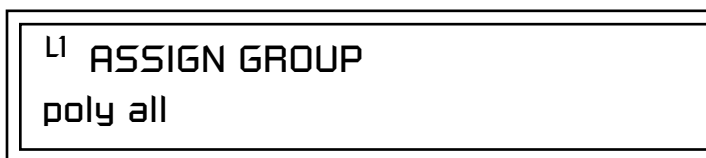

The modes are:

**Poly All:** Notes are played polyphonically with dynamic channel assignment using all 32 channels.

**Poly 16 A-B:** Two bins of 16 channels each. Notes are played polyphonically with dynamic channel assignment using no more than 16 channels.

**Poly 8 A-D:** Four bins of 8 channels each. Notes are played polyphonically with dynamic channel assignment using no more than 8 channels each.

**Poly 4 A-D:** Four bins of 4 channels each. Notes are played polyphonically with dynamic channel assignment using no more than 4 channels each.

**Poly 2 A-D:** Four bins of 2 channels each. Notes are played polyphonically with dynamic channel assignment using no more than 2 channels each.

**Mono A-I:** Nine monophonic channels, Any layers assigned to the same letter interrupt each other without affecting other layers.


Glide

Glide creates a smooth transition from one note to the next instead of the normal instantaneous change in pitch when a new key is pressed. This effect is commonly heard on slide guitars, synthesizers and violins.

<b>L1 GLIDE RATE</b>	<b>CURVE</b>
<b>0.000 sec/oct</b>	<b>linear</b>

The **Glide Rate** parameter defines the time it takes to glide to the new pitch (the larger the value, the slower the glide rate) The glide rate value range is from 0 through 32.738 seconds (zero means off).

The **Glide Curve** describes how the glide accelerates as it slides between notes. Because of the ear's non-linear response to pitch, a linear glide sounds slow at the beginning and speeds up toward the end. Exponential curves actually sound smoother and more linear. Eight exponential curves are provided. Choose one that suits your style.

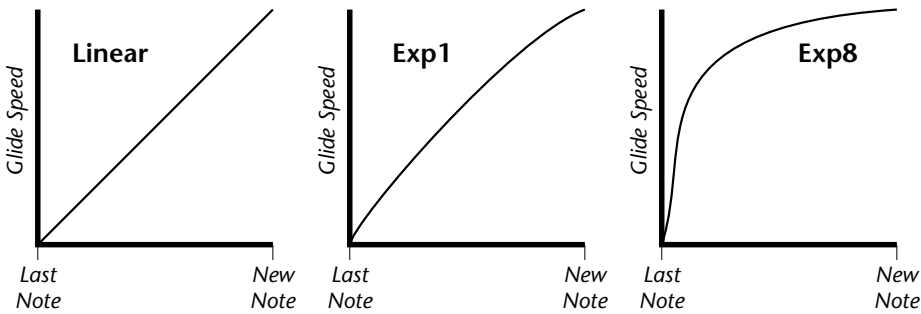

Glide can be either polyphonic or monophonic depending of the state of *Solo Mode*.

Z-Plane Filters

A filter is a device which changes the output of a signal (sound) by removing certain elements of the signal based on the frequency and amplitude. The "Order" of a filter defines the number of filter elements it contains. The more elements, the more complex the filter.

Proteus 2000 contains 50 different types of E-MU's celebrated Z-plane filters. In addition to the standard Low pass, High pass and Band pass filters, Proteus 2000 contains Swept Octave Equalizers, Phasers, Flangers, Vocal Formant Filters, and digital models of classic synthesizer filters.

In the filter chart below you will notice that the "Order" of the filters varies from 2nd to 12th order. Higher order filters have more sections and can produce more complex formants. Proteus 2000's filter chips can implement



128 filters of 2nd to 6th order complexity or 64 filters of 12th order complexity. Therefore, if you decided to use all 12th order filters, Proteus 2000 would be limited to 64 voices. Filters are dynamically allocated according to their usage so that the maximum number of voices is always available. *See page 74 for more information about filters.*

## Filter Types

This screen allows you to choose the type of filter for the current layer.

<b>L1 FILTER</b>	<b>Ord</b>	<b>Type</b>
Phazer 2 E4	6	PHA

Filter Types	
<b>LPF</b>	Low-pass filter
<b>HPF</b>	High-pass filter
<b>BPF</b>	Band-pass filter
<b>EQ+</b>	EQ boost
<b>EQ-</b>	EQ cut
<b>VOW</b>	Vowel / formant
<b>PHA</b>	Phaser
<b>FLG</b>	Flanger
<b>REZ</b>	Special resonance
<b>WAH</b>	Wah-wah
<b>DST</b>	Distortion
<b>SFX</b>	Special Effect

Filter Name	Order	Type	Description
Smooth	02	LPF	Typical OB type low-pass filter with a shallow 12 dB/octave slope.
Classic	04	LPF	4-pole low-pass filter, the standard filter on classic analog synths. 24 dB/octave rolloff.
Steeper	06	LPF	6-pole low-pass filter which has a steeper slope than a 4-pole low-pass filter. 36 dB/octave rolloff!
MegaSweepz	12	LPF	"Loud" LPF with a hard Q. Tweeters beware!
EarlyRizer	12	LPF	Classic analog sweeping with hot Q and Low end.
Millennium	12	LPF	Aggressive low-pass filter. Q gives you a variety of spiky tonal peaks.
KlubKlassik	12	LPF	Responsive low-pass filter sweep with a wide spectrum of Q sounds
BassBox-303	12	LPF	Pumped up lows with TB-like squelchy Q factor.
Shallow	02	HPF	2-pole high-pass filter. 12 dB/octave slope.
Deeper	04	HPF	Classic 4-pole high-pass filter. Cutoff sweep progressively cuts 4th Order High-pass.
Band-pass1	02	BPF	Band-pass filter with 6 dB/octave rolloff on either side of the passband and Q control.
Band-pass2	04	BPF	Band-pass filter with 12 dB/octave rolloff on either side of the passband and Q control.
ContraBand	06	BPF	A novel band-pass filter where the frequency peaks and dips midway in the frequency range.
Swept1>1oct	06	EQ+	Parametric filter with 24 dB of boost or cut and a one octave bandwidth.

Filter Types		Filter Name	Order	Type	Description
LPF	Low-pass filter	Swept2>1oct	06	EQ+	Parametric filter with 24 dB of boost or cut. The bandwidth of the filter is two octaves wide at the low end of the audio spectrum, gradually changing to one octave wide at the upper end of the spectrum.
HPF	High-pass filter	Swept3>1oct	06	EQ+	Parametric filter with 24 dB of boost or cut. The bandwidth of the filter is three octaves wide at the low end of the audio spectrum, gradually changing to one octave wide at the upper end of the spectrum.
BPF	Band-pass filter	DJAlkaline	12	EQ+	Band accentuating filter, Q shifts “ring” frequency.
EQ+	EQ boost	AceOfBass	12	EQ+	Bass-boost to bass-cut morph
EQ-	EQ cut	TB-OrNot-TB	12	EQ+	Great Bassline “Processor.”
VOW	Vowel / formant	BolandBass	12	EQ+	Constant bass boost with mid-tone Q control.
PHA	Phaser	BassTracer	12	EQ+	Low Q boosts bass. Try sawtooth or square waveform with Q set to 115.
FLG	Flanger	RogueHertz	12	EQ+	Bass with mid-range boost and smooth Q. Sweep cutoff with Q at 127.
REZ	Special resonance	RazorBlades	12	EQ-	Cuts a series of frequency bands. Q selects different bands.
WAH	Wah-wah	RadioCraze	12	EQ-	Band limited for a cheap radio-like EQ
DST	Distortion	AahAyEeh	06	VOW	Vowel formant filter which sweeps from “Ah” sound, through “Ay” sound to “Ee” sound at maximum frequency setting. Q varies the apparent size of the mouth cavity.
SFX	Special Effect	Ooh-To-Aah	06	VOW	Vowel formant filter which sweeps from “Oo” sound, through “Oh” sound to “Ah” sound at maximum frequency setting. Q varies the apparent size of mouth cavity.
		MultiQVox	12	VOW	Multi-Formant, Map Q To velocity.
		Ooh-To-Eee	12	VOW	Oooh to Eeee formant morph.
		TalkingHedz	12	VOW	“Oui” morphing filter. Q adds peaks.
		Eeh-To-Aah	12	VOW	“E” to “Ah” formant movement. Q accentuates “peakiness.”
		UbuOrator	12	VOW	Aah-Uuh vowel with no Q. Raise Q for throaty vocals.
		DeepBouche	12	VOW	French vowels! “Ou-Est” vowel at low Q.
		PhazeShift1	06	PHA	Recreates a comb filter effect typical of phase shifters. Frequency moves position of notches. Q varies the depth of the notches.

### Filter Types

<b>LPF</b>	Low-pass filter
<b>HPF</b>	High-pass filter
<b>BPF</b>	Band-pass filter
<b>EQ+</b>	EQ boost
<b>EQ-</b>	EQ cut
<b>VOW</b>	Vowel / formant
<b>PHA</b>	Phaser
<b>FLG</b>	Flanger
<b>REZ</b>	Special resonance
<b>WAH</b>	Wah-wah
<b>DST</b>	Distortion
<b>SFX</b>	Special Effect

Filter Name	Order	Type	Description
PhazeShift2	06	PHA	Comb filter with slightly different notch frequency moving the spacing of notches. Q varies the depth of the notches.
FreakShifta	12	PHA	Phasey movement. Try major 6 interval and maximum Q.
CruzPusher	12	PHA	Accentuates harmonics at high Q. Try with a sawtooth LFO.
FlangerLite	06	FLG	Contains three notches. Frequency moves frequency and spacing of notches. Q increases flanging depth.
AngelzHairz	12	FLG	Smooth sweep flanger. Good with vox waves. eg. I094, Q=60
DreamWeava	12	FLG	Directional Flanger. Poles shift down at low Q and up at high Q.
MeatyGizmo	12	REZ	Filter inverts at mid-Q.
DeadRinger	12	REZ	Permanent "Ringy" Q response. Many Q variations.
ZoomPeaks	12	REZ	High resonance nasal filter.
AcidRavage	12	REZ	Great analog Q response. Wide tonal range. Try with a sawtooth LFO.
BassOMatic	12	REZ	Low boost for basslines. Q goes to distortion at the maximum level.
LucifersQ	12	REZ	Violent mid Q filter! Take care with Q values 40-90.
ToothComb	12	REZ	Highly resonant harmonic peaks shift in unison. Try mid Q.
EarBender	12	WAH	Midway between wah & vowel. Strong mid-boost. Nasty at high Q settings.
FuzziFace	12	DST	Nasty clipped distortion. Q functions as mid-frequency tone control.
BlissBatz	06	SFX	Bat phaser from the Emulator 4.
KlangKling	12	SFX	Ringling Flange filter. Q "tunes" the ring frequency.

## Proteus 2000 Filter Types

### Filter Parameters

The Freq and Q parameters control various elements of the filter depending on the type of filter used. See the table in the *Filter Types* section for details about what the Freq and Q fields control in each filter.

L1	FILTER	
Freq:	255	Q: 019

## Filter Envelope

The Filter Envelope is normally used to control the filter frequency and has six stages. Unlike the Volume Envelope, the Filter Envelope must be patched to the Filter Frequency using a PatchCord. In this respect, it can be thought of as a general purpose envelope generator which is normally patched to control the filter. The Filter Envelope Levels can be negative as well as positive.

There are three mode options:

- **Time-based:** Defines the Filter Envelope rates from 0 to 127 (approximately 1 ms to 160 seconds). The Master clock has no affect on time-based rates.

L1	FILT ENV	RATE	LEVEL
	Attack 1	84	100%

- **Tempo-based:** The Filter Envelope times vary based on the master tempo setting and are displayed in values such as 1, 2, 3, etc. Note values are displayed instead of a number when the time corresponds to an exact note value. Tempo-based envelopes are useful when using arpeggiators and sequencers because the envelope rates compress and expand according to the Master Tempo setting, keeping the envelopes in sync with the music. See the illustration on page 60.


L1	FILT ENV	RATE	LEVEL
	Attack 1	1/4	100%

### Envelope Repeat

The Envelope Generators can also be made to repeat. When the envelope repeat function is On, the Attack (1&2) and Decay (1&2) stages will continue to repeat as long as the key is held. As soon as the key is released, the envelope continues through its normal Release stages (1 & 2). For more information, see “Envelope Repeat” on page 60.

#### ► To Turn on Envelope Repeat:


1. Move the cursor until it is underneath the Mode field as shown below.

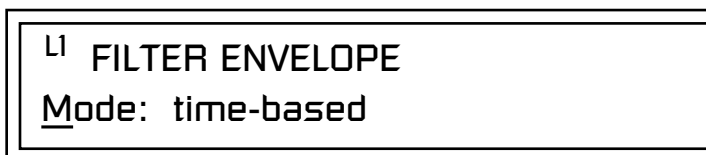


2. Turn the data entry control clockwise. The lower line changes to:




3. Move the cursor underneath the on/off field, then turn the data entry control clockwise so that Repeat is On.

 See the *Programming Basics* section of this manual for detailed information about how the Envelopes work.

 The default PatchCord settings connect the Filter Envelope to Filter Frequency but the envelope can be routed to any real-time control destination using a PatchCord.

## Defining the Filter Envelope

The Filter Envelope controls the filter frequency of the layer over time. The Envelope has six stages to the contour: Attack 1, Attack 2, Decay 1, Decay 2, Release 1 and Release 2. When a key is pressed, the Envelope goes through the first four stages. If the key continues to be held, the envelope holds at the Decay 2 level. When the key is released, the envelope immediately jumps to the Release 1 stage, then the Release 2 stage finally ending at the Release 2 level.

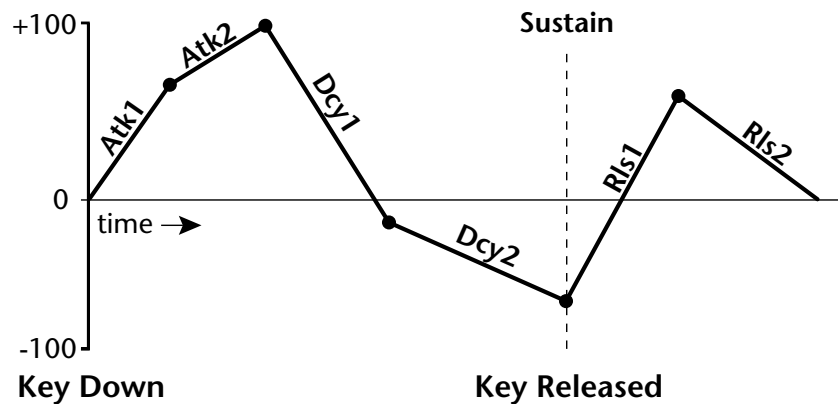

## Auxiliary Envelope

The Auxiliary Envelope is a supplementary general purpose envelope that can be routed to any real-time control destination in the PatchCords. It is identical to the filter envelope generator. See “Filter Envelope” on page 108 for full details.

## Low Frequency Oscillators (LFOs)

A Low Frequency Oscillator or LFO, is simply a wave that repeats at a slow speed. Proteus 2000 has two LFOs per layer identified on the display as LFO1 and LFO2.

An LFO can be routed to any real-time control destination using a PatchCord. LFOs have a myriad of uses, some of which probably haven’t been thought of yet. The following examples show a few common uses.

- Control the pitch of the sound (LFO -> Pitch). This effect is called “vibrato” and is an important performance tool. Many presets use this routing with the modulation wheel controlling “how much” modulation is applied.
- Create a “tremolo” effect by routing the LFO to control the volume (LFO -> AmpVolume).
- Add a bit of animation to the sound by routing the LFO to control the filter. Set the PatchCord amount low for a subtle effect.

The LFOs have five parameters: Shape, Sync, Rate, Delay and Variation.

## Shape

LFO waveforms have different shapes. The shape of the waveform determines the effect of the LFO. LFOs have traditionally been used to add vibrato or repeating movement to a sound. These new shapes offer a lot of new programming possibilities.

If you modulate the pitch of an instrument, it's easy to visualize the shape of the waveform. For example, the sine wave has a smooth, rolling shape that changes the pitch smoothly. The square wave changes between two pitches abruptly. A sawtooth waveform increases the pitch smoothly, then abruptly changes back down. The available waveforms are shown below.


### LFO Tricks & Tips:

- The Random LFO wave is truly random and is different for each voice and layer.
- The Pattern (Pat) waveforms will sound the same on different layers and voices.
- Sine + Noise is very useful for simulating trumpet and flute vibrato.

### ★ When routing Hemi-quaver to Pitch:

+38 = major scale  
-38 = phrygian scale  
+76 = whole tone scale  
(+38) + (+76) = diminished (two cords)  
odd amount = S+H sound

**Note:** References to musical intervals in the pattern LFO shapes are with the LFO routed to pitch and a PatchCord amount of +38.

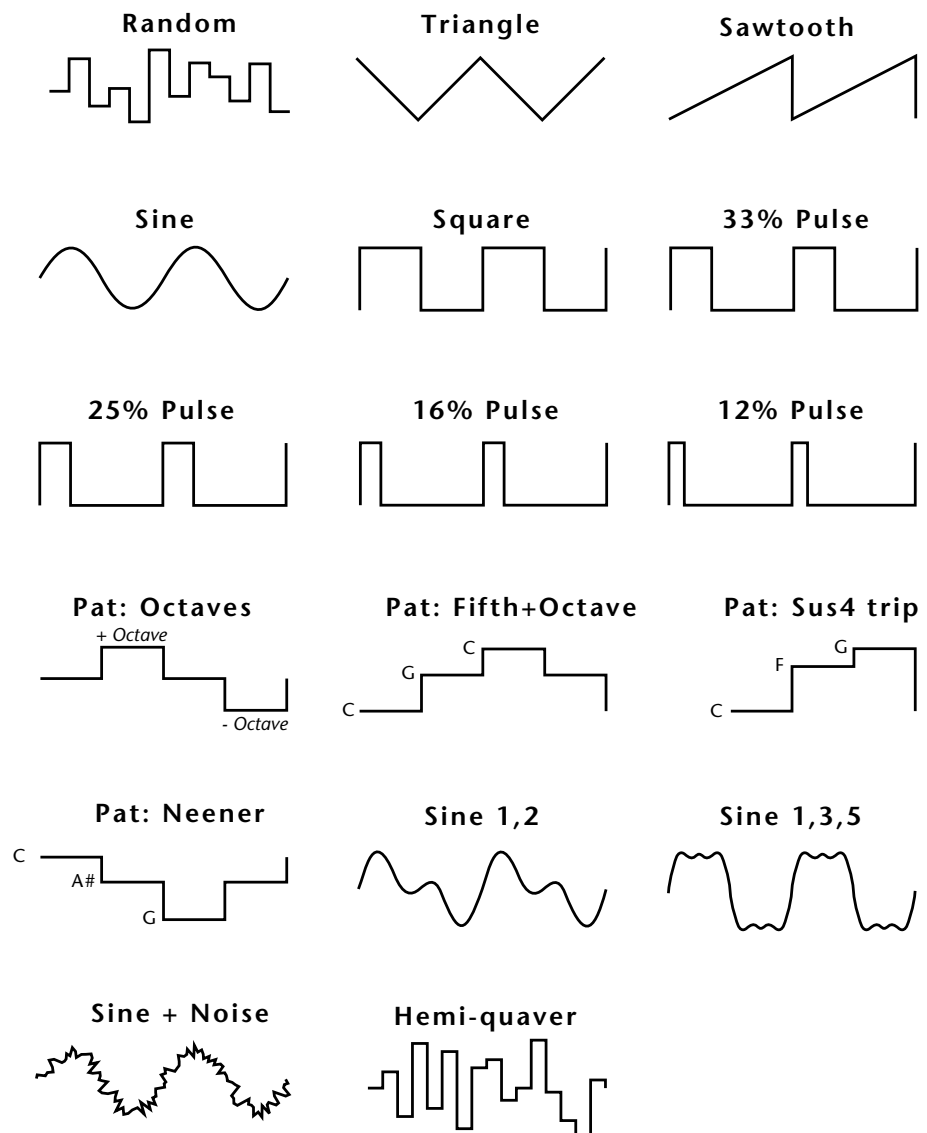



LFO Synced to 1/4 Note Clock

L1	LFO1	SHAPE	SYNC
		sawtooth	<u>key sync</u>

### Sync

The Sync field specifies whether the LFO is synchronized to a key stroke or is Free Running. Key Sync starts the LFO wave at the beginning of its cycle each time you press a key on the controller. In Free Run mode, the LFO wave begins at a random point in its cycle each time you press a key on the controller.

### Rate

The Rate field determines the LFO speed in absolute frequency rate values or tempo-based note values. All values equal to or greater than zero specify absolute frequency values from 0.08 Hz to 18.14 Hz.

Values less than zero specify tempo-based rates. If you modulate the rate of a tempo-based LFO, the rates will jump between the tempo-based note values with each PatchCord increment of "1". As an example: if the LFO rate was set to 8/1 and you patched the Mod Wheel to control rate with a PatchCord amount of +1, turning the Mod Wheel to maximum would change the LFO rate to 4/1d. Refer to the chart below.

L1	LFO1	RATE	DELAY	VAR
		<u>0.08Hz</u>	60	020


Tempo-based Rates (based on Master Tempo)	Display
octal whole note	8/1
dotted quad whole note	4/1d
octal whole note triplet	8/1t
quad whole note	4/1
dotted double whole note	2/1d
quad whole note triplet	4/1t
double whole note	2/1
dotted whole note	1/1d



<b>Tempo-based Rates (based on Master Tempo)</b>	<b>Display</b>
double note triplet	2/1t
whole note	1/1
dotted half note	1/2d
whole note triplet	1/1t
half note	1/2
dotted quarter note	1/4d
half note triplet	1/2t
quarter note	1/4
dotted 8th note	1/8d
quarter note triplet	1/4t
8th note	1/8
dotted 16th note	1/16d
8th note triplet	1/8t
16th note	1/16
dotted 32nd note	1/32d
16th note triplet	1/16t
32nd Note	1/32

### Delay

The Delay parameter defines the amount of time between hitting a key on the controller and the onset of the LFO modulation. Delay can be used to simulate an effect often used by acoustic instrument players where the vibrato is brought in only after the initial note pitch is established. The following illustration demonstrates how delay works.

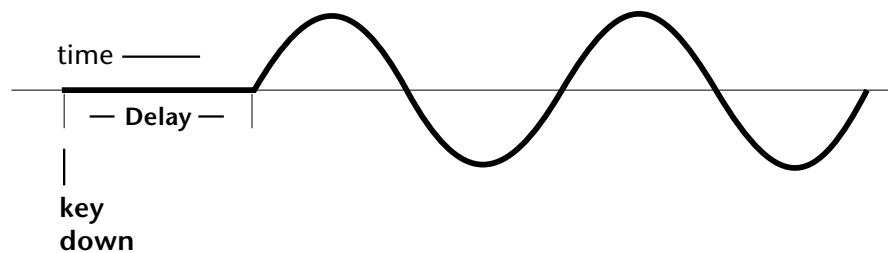

All Delay values equal to or greater than zero specify absolute time rates from 0 to 127. Values less than zero specify Tempo-based mode. Refer to the previous table for times and tempo-based rates.




*Variation is disabled  
when a Tempo-Based LFO is  
selected.*

### Variation

LFO Variation sets the amount of random variation of the LFO each time you press a key on the controller. This creates a chorus or ensemble effect since each note played has a slightly different modulation rate. The higher the value entered, the greater the note to note variation in the LFO.

The Variation value range is from 0 through 100.

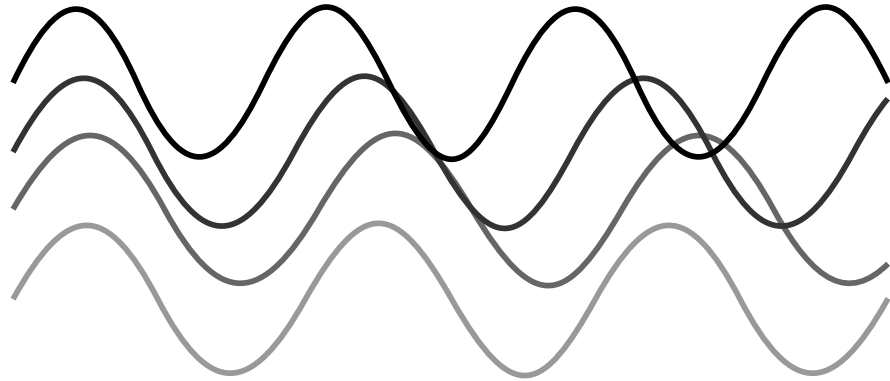


LFO variation changes the rate of each note to create an "ensemble" effect.

PatchCords

PatchCords tie everything together by connecting modulation sources to destinations. Each PatchCord has its own *Amount* control which can be positive or negative (negative amounts invert the signal). In addition, the PatchCord amounts themselves can be controlled by any modulation source. Proteus 2000 provides 24 patches for each layer.

There are three permanently connected control routings: volume envelope to amplifier, pitch wheel to pitch and key to pitch. All other connections must be made using the PatchCords.

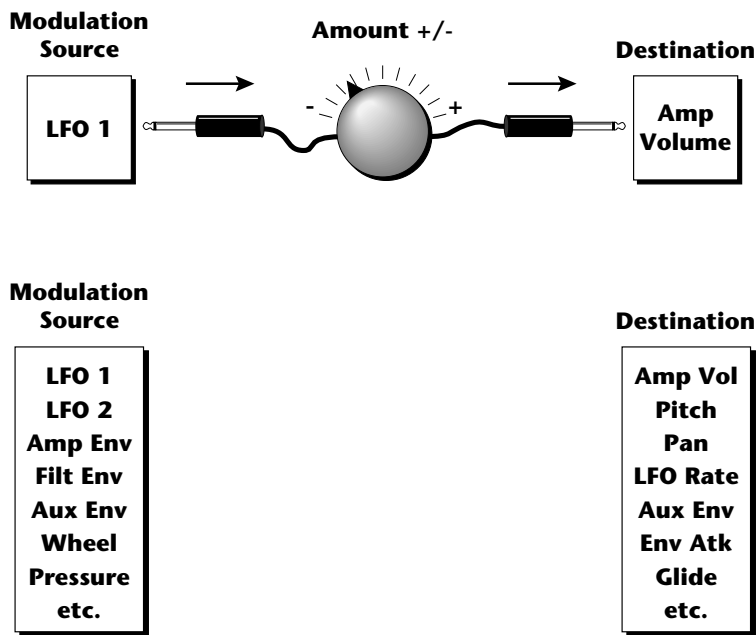


Each patch has an amount field which determines how much modulation is applied to the destination. The modulation amount can be positive or negative. Negative values invert the input. The amount value range is from -100 to +100.

L1	PATCHCORD	#01
RlsVel	->	AmpVol +100

L1	PATCHCORD	#24
Key+	->	FiltRes -27

## Modulator Polarity

You will notice that some of the modulation sources have symbols following their names. For example, there are three Velocity modulation sources, Vel +, Vel  $\pm$ , and Vel <.

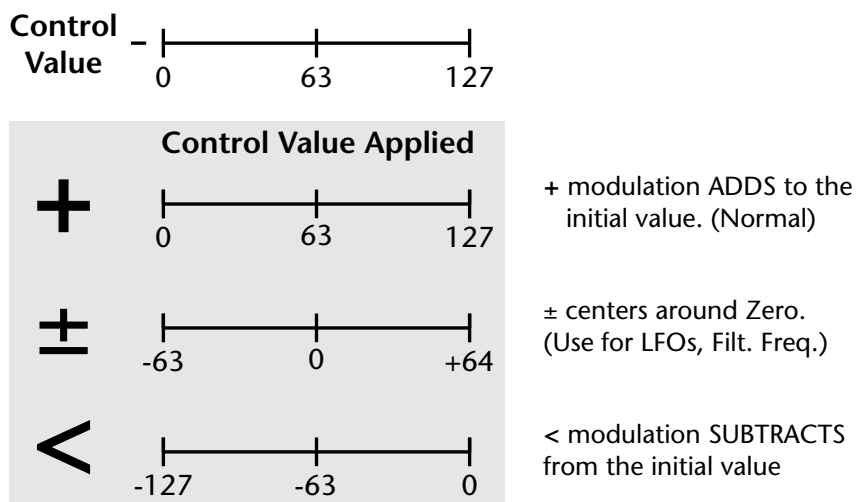

**“+” Modulation:** Uses only the positive half of the range, adding to the current value. For example, if the filter frequency were set to 100 and you patched Vel+ to the filter, the filter frequency would increase from 100 as velocity was applied.

**“ $\pm$ ” Modulation:** Uses both sides (full) range and both adding and subtracting from the current value. For example, if the filter frequency were set to 100 and you patched Vel  $\pm$  to the filter, the filter frequency would decrease from 100 with key velocities of 63 or less and increase from 100 with key velocities of 64 and above. Therefore with medium velocity, the Filter frequency is approximately where you set it at 100.

An LFO  $\pm$  works the same way; on the positive half of the cycle it increases the initial amount and on the negative half of the cycle it decreases the initial amount. With a  $\pm$  modulation source, a value of 64 equals 0.

**“<” Modulation:** Uses only the negative half of the range, subtracting from the current value. For example, if the Amplifier Volume were set to +3 dB and you patched Vel < to AmpVol, the volume would be at +3 dB only when maximum key velocity were applied. Lower key velocities would scale back the volume. In general, < modulation is the proper choice when modulating Volume.

Refer to the following table for a list of modulation sources and destinations available in the Proteus 2000.

### Modulation Sources:

Off  
Key (+,  $\pm$ )  
Velocity (+,  $\pm$ , <)  
RlsVel (Release Velocity)  
Gate  
Pressure  
PitchWhl (Pitch Wheel)  
ModWhl (Modulation Wheel)  
Pedal  
MIDI A-L  
PLagOut (Preset Lag Out)  
PRampOut (Preset Ramp Out)  
FootSw1 - 3 (Foot Switch 1-3)  
FootnFF (Flip-Flop Foot Switch 1 -3)  
MIDI Volume (Controller 7)  
MIDI Pan (Controller 10)  
KeyGlide  
VolEnv +,  $\pm$ , < (Volume Envelope)  
FilEnv +,  $\pm$ , < (Filter Envelope)  
AuxEnv +,  $\pm$ , < (Auxiliary Envelope)  
LFO 1 & 2 (+,  $\pm$ )  
White (White Noise)  
Pink (Pink Noise)  
XfdRand (Crossfade Random)  
KeyRand 1 & 2 (Key Random)  
Lag 0 sum (summing amp out)  
Lag 1 sum (summing amp out)  
Lag 0 & 1 (Lag Processor)  
Clk Divisors (Octal, Quad, Double  
Whole, Whole, Half, Qtr, 8th, 16th)  
DC (DC Offset)  
Summing Amp  
Sum  
Switch  
Absolute Value  
Diode  
Flip-Flop  
Quantizer  
4x Gain

### Modulation Destinations

Off  
KeySust (Key Sustain)  
FinePtch (Fine Pitch)  
Pitch  
Glide  
ChrsAmt (Chorus Amount)  
'SStart (Sample Start) -note-on)  
SLoop (Sample Loop)  
SRetrig (Sample Retrigger)  
FiltFreq (Filter Frequency)  
'FiltRes (Filter Resonance -note-on)  
AmpVol (Amplifier Volume)  
AmpPan (Amplifier Pan)  
RTXfade (Real-time Crossfade)  
VEnvRts (Volume Envelope Rates -all)  
VEnvAtk (Volume Envelope Attack)  
VEnvDcy (Volume Envelope Decay)  
VEnvRls (Volume Envelope Release)  
FEnvRts (Filter Envelope Rates -all)  
FEnvAtk (Filter Envelope Attack)  
FEnvDcy (Filter Envelope Decay)  
FEnvRls (Filter Envelope Release)  
FEnvTrig (Filter Envelope Trigger)  
AEnvRts (Auxiliary Envelope Rates -all)  
AEnvAtk (Auxiliary Envelope Attack)  
AEnvDcy (Auxiliary Envelope Decay)  
AEnvRls (Auxiliary Envelope Release)  
AEnvTrig (Auxiliary Envelope Trigger)  
LFO 1 & 2 Rate  
  
LFO 1 & 2 Trigger  
Lag Processor In 0 & 1  
Sum (Summing Amp)  
Switch  
Abs (Absolute Value)  
Diode  
Quantize  
Flip-Flop  
Gain 4x  
Cord 1-24 Amount

## Pitch Bend Range

Specifies the Pitch Wheel range in semitones for the current layer. Pitch Wheel is a standard synthesizer control which is transmitted as a MIDI continuous controller message used (normally) to bend the pitch up and down.

The PitchBend range is from 0 to  $\pm 12$  semitones or "Master." A setting of "0" turns the pitch wheel Off for the current layer. The Master setting uses the Pitch Bend range defined in the *Master menu*.

L1 **PITCHBEND RANGE**  
+/- 12 semitones

## Mix Output

This feature allows you to program the Effect Send as a part of the preset. Note that for this feature to work, the Mix Output setting in the Master menu MUST be set to "Preset" on the selected MIDI channel. If you want to define output routing by MIDI channel, set it up using the Mix Output page in the Master menu. See "Mix Output" on page 38 for more information.

L1 **MIX OUTPUT**  
Send2->main

FX Send  
Routing

Output  
Routing



The entire Send is disconnected from the Effects Processors even if only one plug is inserted into the Submix jack.

The Sends function as effect processor inputs (effect sends). Send 2 and Send 3 are also used to route sounds to the Sub 2 and 3 outputs on the back panel. When a plug is inserted into the associated Submix jack on the back panel, the dry portion of the Send is routed directly to the output jack, bypassing the effects processor.


The Output Routing field shows the true routing of the Sends either to Main (through the effects processor) or directly to a Submix output. If a plug was inserted into a Sub 1 jack, the screen above would change to show, "Send2 -> sub1". This indicates that the preset is routed to the Sub 1 output jacks.

## Common Preset Parameters


### Preset Effects

This section of the Edit menu chapter describes parameters that affect all layers in the preset.

Proteus 2000 has two stereo effects processors. When playing presets one at a time, the two processors can be programmed as part of the preset. The diagram below shows how the effects are integrated into the signal path using a parallel effects send/return model, similar to a mixing console.

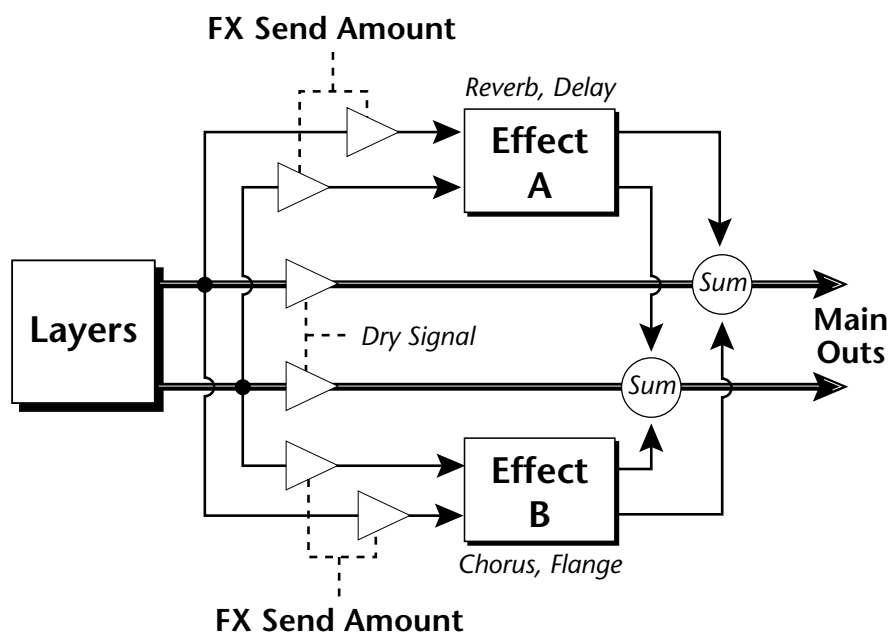

Refer to the Effects chapter for additional information and instructions for setting up both the Preset Effects and the Master Effects.

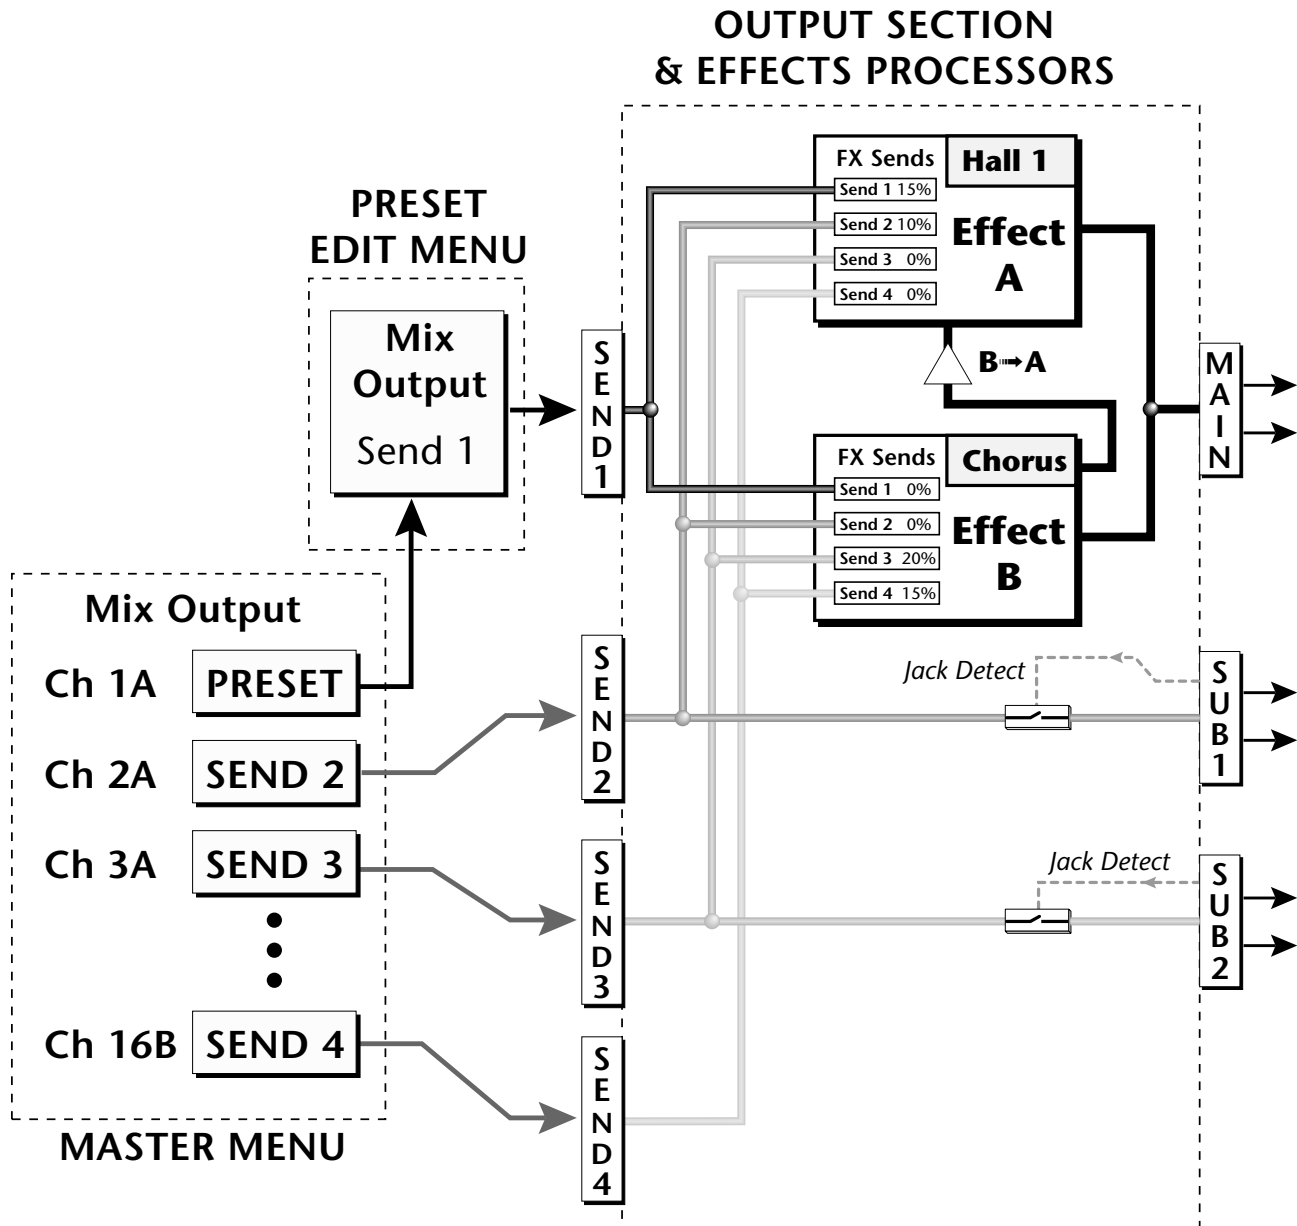

The Mix Output setting in the Master Menu determines if the Preset's Mix Output routing will be used. This allows the Sends to be programmed by either **MIDI Channel** or by **Preset**, whichever you prefer.



## FXA Algorithm

This screen selects the effect type for Effect Processor A. The “A” effects consist of different reverb types and digital delays. Move the cursor to the lower line of the display and select the effect you want.

### FXA ALGORITHM Lg Concert Pan

#### A Effect Types

- |                     |                       |
|---------------------|-----------------------|
| 1. Room 1           | 23. BBall Court       |
| 2. Room 2           | 24. Gymnasium         |
| 3. Room 3           | 25. Cavern            |
| 4. Hall 1           | 26. Concert 9         |
| 5. Hall 2           | 27. Concert 10 Pan    |
| 6. Plate            | 28. Reverse Gate      |
| 7. Delay            | 29. Gate 2            |
| 8. Panning Delay    | 30. Gate Pan          |
| 9. Multitap 1       | 31. Concert 11        |
| 10. Multitap Pan    | 32. Medium Concert    |
| 11. 3 Tap           | 33. Large Concert     |
| 12. 3 Tap Pan       | 34. Large Concert Pan |
| 13. Soft Room       | 35. Canyon            |
| 14. Warm Room       | 36. DelayVerb 1       |
| 15. Perfect Room    | 37. DelayVerb 2       |
| 16. Tiled Room      | 38. DelayVerb 3       |
| 17. Hard Plate      | 39. DelayVerb 4 Pan   |
| 18. Warm Hall       | 40. DelayVerb 5 Pan   |
| 19. Spacious Hall   | 41. DelayVerb 6       |
| 20. Bright Hall     | 42. DelayVerb 7       |
| 21. Bright Hall Pan | 43. DelayVerb 8       |
| 22. Bright Plate    | 44. DelayVerb 9       |

## FXA Parameters

The FXA parameters are Decay, High Frequency Damping, and the FxB to FxA send. **Decay** sets the length of time it takes an effect to fade out. **HF Damping** causes the high frequency energy to fade away more quickly during the reverb decay. **FxB to FxA** controls the amount of the “B” effect sent through effect “A”. This allows you to place the two effects in series and create setups such as “distortion through reverb” among others. Please refer to the Effects chapter for more information about the effects.

FXA	DECAY	HFDAMP	FxB>FxA
	048	064	000

## FXA Send Amounts

These parameters set the effects amounts for each of the four stereo effects busses.

FXA SEND AMOUNTS	1:100%
2: 50%	3: 10%      4: 0%

## FXB Algorithm

This screen selects the effect type for Effect Processor A. Move the cursor to the lower line of the display and select the effect you want.

FXB ALGORITHM
Panning Delay

### B Effect Types

- |              |                    |                       |
|--------------|--------------------|-----------------------|
| 1. Chorus 1  | 12. Flange 5       | 23. PanDelay Chorus 1 |
| 2. Chorus 2  | 13. Flange 6       | 24. PanDelay Chorus 2 |
| 3. Chorus 3  | 14. Flange 7       | 25. Dual Tap 1/3      |
| 4. Chorus 4  | 15. Big Chorus     | 26. Dual Tap 1/4      |
| 5. Chorus 5  | 16. Symphonic      | 27. Vibrato           |
| 6. Doubling  | 17. Ensemble       | 28. Distortion 1      |
| 7. Slapback  | 18. Delay          | 29. Distortion 2      |
| 8. Flange 1  | 19. Delay Stereo   | 30. Distorted Flange  |
| 9. Flange 2  | 20. Delay Stereo 2 | 31. Distorted Chorus  |
| 10. Flange 3 | 21. Panning Delay  | 32. Distorted Double  |
| 11. Flange 4 | 22. Delay Chorus   |                       |

FXB Parameters

The FXB parameters are Feedback, LFO Rate and Delay. **Feedback** sends the output of the effect back into the input. This creates multiple echoes on a delay effect and intensifies a chorus or flange effect. **LFO Rate** allows you to change the speed of the modulation oscillator for flange and chorus effects. **Delay** sets the length of the delay line. This affects the time between echoes, or the tone of flange effects.

FXB	FEEDBK	LFORATE	DELAY
	032	003	200ms


FXB Send Amounts

These parameters set the effects amounts for the four stereo effects busses.

FXB SEND AMOUNTS		1:100%
2: 50%	3: 10%	4: 0%

Preset Patchcords

Preset PatchCords give you real-time control of global parameters. The effect processors are a powerful synthesis tool and this feature lets you control and use them in exciting new ways. There are 12 effects PatchCords per preset with a source, a destination and an amount control. The amount can be set from -100 to +100. The effects PatchCord controls are *added* to the FX Send Amounts set in the Master or Edit menus.

 The FX Cords allow you to crossfade between effects.

- 1) Set FXA Send 1 to 100%.
- 2) Set FXB Send 1 to 0%.
- 3) Set FX Cord #1 to FXA Send 1 at -100.
- 4) Set FX Cord #2 to FXB Send 1 at +100.

Increasing the controller amount will crossfade from FXA to FXB.

PRESET CORDS			#
Pedal	-> FXBSend2	+100	

Modulation Sources:

- Off
- PitchWhl (Pitch Wheel)
- Channel Pressure
- ModWhl (Mod Wheel - Controller 1)
- Pedal (Controller 4)
- MIDI Volume (Controller 7)
- MIDI Pan (Controller 10)
- MIDI A-L
- Footswitch 1

Modulation Destinations

- Off
- Effect A Send 1
- Effect A Send 2
- Effect A Send 3
- Effect A Send 4
- Effect B Send 1
- Effect B Send 2
- Effect B Send 3
- Effect B Send 4

**Modulation Sources:**


Flip-Flop Footswitch 1  
Footswitch 2  
Flip-Flop Footswitch 2  
Footswitch 3  
Flip-Flop Footswitch 3  
DC

**Modulation Destinations**

Preset Lag In  
Preset Lag Amount  
Preset Lag Rate  
Preset Ramp Rate

## Initial Controller Amount

This parameter sets the initial value of MIDI controllers A-L when the preset is first selected. The front panel Control Knobs can be thought of as front panel MIDI controllers because in the Proteus 2000, they are treated just as if they originated from an external MIDI device. Refer to the following diagram. There are three Initial Controller Amount screens (A-D, E-H, I-L).

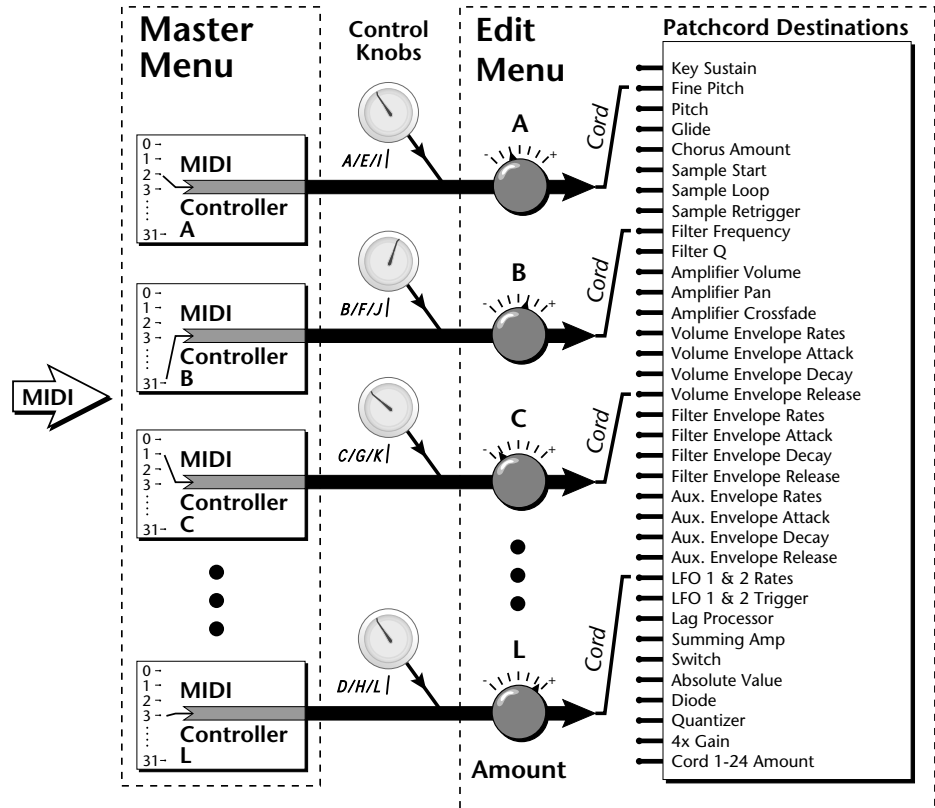

External MIDI controller numbers are assigned to the Letters A-L in the Master menu. The Initial Controller Amount value is sent to the PatchCord destination when the Preset is first selected. If you move the Control Knob, then that value replaces the initial value. If MIDI controller data is received it will similarly replace the knob or initial setting.

INITIAL CONTROLLER AMT			
A:017	B:112	C:127	D: off

The Initial controller amounts can be set from 000-127 or they can be turned Off. If set to Off, the current controller value is used when the preset is first selected. Setting the Initial Amount to "off" uses the values from the previously selected preset.

## Keyboard Tuning

In addition to the standard equally divided octave tuning, Proteus 2000 contains twelve factory programmed tunings and 12 user-definable tunings. The Keyboard Tuning parameter selects which tuning is used by the current preset. The User Tuning tables are defined in the Master menu.

The factory Keyboard Tuning tables are described in the following table.

<b>Tuning Tables</b>	<b>Description</b>
<b>Equal Temperament</b>	Standard Western tuning (12 equally spaced notes per octave)
<b>Just C</b>	Just intonation. (Based on small interval ratios. Sweet and pure, non-beating intervals.)
<b>Vallotti</b>	Valotti & Young non-equal temperament. (Similar to 12 tone equal temperament. Each key has a different character for a given scale.)
<b>19-Tone</b>	19 tone equal temperament. (19 notes per octave. Difficult to play, but works well with a sequencer.)
<b>Gamelan</b>	5 tone Slendro and 7 tone Pelog. (Javanese. Pelog are white keys, Slendro are black keys. Exotic tunings of Gamelan flavor.
<b>Just C2</b>	Allows you to play the following chords in the key of C: C, E, F, G, A, B, C#m, D#m, Em, F#m, G#m, Am, Bm
<b>Just C-minor</b>	Allows you to play the following chords in the key of C: C, E, F, G, A, B, Em, Am, Bm, C#m, D#m, G#m
<b>Just C3</b>	Allows you to play the following chords in the key of C: C, D, F, Bb, C#m, Dm, Em, F#m, G#m, Am
<b>Werkmeister III</b>	A "well" temperament developed in the 17th century. Although you can play in all keys, each key sounds slightly different.
<b>Kirnberger</b>	Another well temperament developed by Johann Philipp Kirnberger where no pitch is more than 12 cents off from equal temperament.
<b>Scarlatti</b>	A variant of Meantone tuning which was used from the 15th to 18th centuries.
<b>Repeating Octave</b>	Middle C octave is repeated up and down the keyboard. Link with a preset in equal temperament to form unusual inversion up and down the keyboard.
<b>User 1-12</b>	Define your own tuning tables ( <i>Master menu</i> ).

Refer to "User Key Tuning" on page 53 in the Master Menu chapter for instructions on how to define your own Keyboard Tunings.



*Proteus 2000 implements the MIDI Tuning Dump protocol which allows you to create tuning tables on your personal computer and download them via MIDI. There are several computer applications available on the internet which let you create and download tuning tables via MIDI.*

## The Just C Tuning Tables

Well Tempered and Just were standard keyboard tunings up until the 20th-century when the current “equal tempered” scale became prevalent. In an equal tempered scale, the octave is equally divided into 12 parts. In Just or Well Tempered scales, the 12 notes are separately tuned to produce pure chords. However, in Just tunings you are limited to playing certain chords and if you play the wrong chord it may sound very BAD!

Proteus 2000 allows you to modulate between keys by providing you 12 user tuning tables. Tuning tables can be changed as you play using a program change (create several presets with the same sound and different tuning tables), by MIDI SysEx command (using a programmable MIDI footswitch or other device), or using a continuous controller (link 2 presets and crossfade between them using a controller). The Just C2, Just C min, Just C3 Tuning Tables

These new tuning tables take the concept of just intonation a step beyond previous E-MU products. Fully explaining the mysteries of just intonation is beyond the scope of this manual, but the subject is covered exhaustively in Hermann Helmholtz's On the Sensations of Tone, available at most libraries and bookstores.

The new tables are called Just C2, Just C3, and Just C Minor. Try playing in the key of C/Cm using each table. You'll quickly discover both the wonders and the frustrations of just intonation! In Just C, for example, you'll find that the chords C, Em, F, G, and Am sound beautiful. If you hold one of these chords, you'll hear no “beating”. After playing for a few minutes, switch back to Equal Temperament for a rude awakening!

At this point you might wonder why anyone would use Equal Temperament to begin with. For the answer to that question, play a D, Dmi, or Bb chord!.The intervallic ratios that make the C & G chords sound so pure make the D chord sound horribly out of tune. That's why we had to include Just C3. In this tuning, D, Dmi and Bb sound in tune, but the G chord will sound wrong.

Each of the 4 tables allows you to play a different group of common chords in just intonation. Sadly, there is no single 12 note tuning that will allow all of the common chords to be in tune, and of course that's why they invented the equal temperament tuning system that we use today.

### Just C

Play these chords: C, E, F, G, A, Cm, C#m, Em, F#m, Gm, Am

### Just C2

Play these chords: C, E, F, G, A, B, C#m, D#m, Em, G#m, Am, Bm

### Just C2 minor

Play these chords: C, D<sup>b</sup>, D, E<sup>b</sup>, G, A<sup>b</sup>, Cm, Em, Fm, Gm

### Just C3

Play these chords: C, D, F, B<sup>b</sup>, C#m, Dm, Em, F#m, G#m, Am

## Preset Links

You can link presets to other presets to create layering or keyboard splits. The current preset can be linked with up to two other presets (Links 1 & 2). Each linked preset can be assigned to a specific range in order to create keyboard splits or can be assigned a velocity range to switch links according to key velocity. In addition, you can specify Volume, Pan, Transpose and Delay settings for each Link. The modulation parameters specified in each preset remain in effect for each preset in the link.

LINK 1 Preset	CMPSR
000 <sup>2</sup> Preset Name	

LINK 1	KEY	VEL
RANGE	C-2	G8
		000-127

LINK 1	VOLUME	PAN
	+0dB	00

LINK 1	TRANSPOSE	DELAY
	+00	0

Links provide an easy way to create new sounds by combining the existing presets. Or, you can create your own custom stacked presets with up to 12 layers! We're talking LARGE sounds here. Of course Links can also be used when you just want to stack up two sounds.

As an example, let's stack two presets to create a big sound. Start with a preset you like, then go into the Links screen and start scrolling through the preset list while you play to hear both presets together. When you find a winner, simply Save the preset and you're finished!

- You can "Split" the keyboard up to 12 ways by using combinations of the Layers and Links.
- By adjusting the Velocity for the link, you can bring in the link by playing hard.
- Transposing the Link can radically change the sound.
- The delay parameter lets you create surprise effects, echoes or cascades of sound as you continue to hold the keys.



## Preset Tempo Offset

This function allows you to double or halve the Master Tempo as it applies to this preset. When playing or sequencing several presets in Multimode, the Master Tempo may be too fast or slow for one preset. Using this feature, you can adjust the tempo for the misbehaving preset. The Tempo Offset can use the **current tempo** or be set to **half** or **twice** the current tempo.

TEMPO OFFSET  
use current tempo x 2

## Audition Riff Selection

This function allows you to assign a Riff to a Preset to be played when the front panel Audition button is pressed. A Riff is a short pre-recorded musical phrase designed to demonstrate the presets. A Riff can also be a single note. The Riffs themselves cannot be modified.

Listening to the Riffs is a quick way to learn the sounds in Proteus 2000. Riffs allow the Sound Designers to demonstrate what they had in mind when they designed the preset. If a preset has hidden tricks or controllers, these will be shown off in the Riff.

AUDITION SELECTION  
Plays:KEY-MiddleC

## Play Solo Layers

When constructing multilayer sounds it is often useful to turn off one or more of the layers so you can hear what you're doing! This feature allows you to temporarily solo individual layers or listen to them in any combination. This screen differs from the other Edit screens in that it is NOT saved with the preset. The values reset each time you exit the Edit menu.

Solo is activated by setting any layer to On (On = the layer is being Soloed). Any layers set to **On will play** and any layers set to **Off will be muted**. If all layers are set to Off, then Solo mode ends and all layers play normally. When you exit the Edit menu, all layers play normally.

PLAY SOLO LAYERS  
1: off    2: off    3: off    4: off



# Programming Tutorial

## Editing Presets

### Changing the Instrument

There is so much you can do with the Proteus 2000 it's impossible to describe it all. This chapter will give you some ideas for programming your own custom sounds and contains step-by-step instructions to help you get started. In order to get the most from this chapter, we recommend you actually try each example. Have fun!


One of the easiest ways to make a new preset is to edit an existing preset. This is also an excellent way of becoming familiar with Proteus 2000. If you don't like what you hear, simply select a new preset, then Proteus 2000 reverts to the original sound. Changes are not permanent until you Save them (see "Saving a Preset" on page 157).

Let's experiment and modify a few parameters of an existing preset. We'll start with functions that have an obvious effect on the sound: Instrument Select, Tuning, and Chorus.

Changing the instrument is the easiest and most dramatic way to modify an existing preset.

#### ► To Change the Instrument for the Current Layer

1. Choose any cool preset, then press the Edit button.
2. Scroll through the Edit menu until you come to the Instrument page.

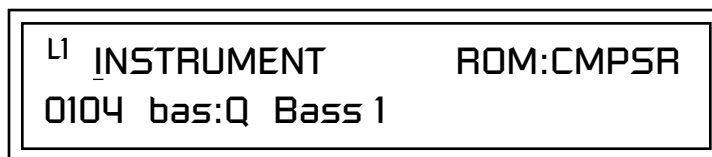

3. Move the cursor down to the bottom line (using a Cursor button).
4. Use the Data Entry Control to change the instrument. This changes the instrument for the current layer (in this case it's L1).
5. Play the keyboard as you scroll through the various instruments.

► **To Change the Instrument for any Layer in the Preset**

6. Move the cursor back up to the first field in the first line (the layer).
7. Use the Data Entry Control to select the layer you want.

<div style="display: flex; justify-content: space-between;"> <span>L2 INSTRUMENT</span> <span>ROM:CMPSR</span> </div> <div style="display: flex; justify-content: space-between;"> <span>0050</span> <span>org:Dance</span> </div>
--

8. Repeat steps 3 and 4 for each selected layer. Find an instrument that sounds good when combined with the previous instruments selected.

With all these great instruments to work with, you really can't go wrong. Now let's play with the tuning.

## Changing the Tuning of an Instrument

Tuning the selected layer of the preset changes the pitch of the key on the controller. If the numbers are "00," it means that the instruments are tuned to concert pitch (A=440 Hz). The Coarse tuning value represents whole semitone intervals. The Fine tuning value shifts the pitch in 1/64 semitones (or 1.56 cents).

► **To Tune the Instrument of the Current Layer**

1. Scroll through the Edit menu until you come to the Tuning page.

<div style="display: flex; justify-content: space-between;"> <span>L1 TUNING</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Coarse: +36</span> <span>Fine: +6</span> </div>
---

2. Move the cursor to the Coarse field (using the cursor button).
3. Set the value to +12 to shift the pitch up a whole octave. To shift the pitch in smaller units than a semitone, use the Fine field.

Try tuning one of the instruments to a perfect fifth above the other by setting the Coarse value to +7.

Tuning an instrument far out of its normal range completely changes the character of the sound. For example, if you tune a bass guitar up 2 octaves, it's going to sound rather petite. On the other hand, if you tune it down 2 octaves, you can probably rattle plaster off the walls! Experiment with radical pitch shifting. You'll be surprised at the results.

## Chorus



**WARNING:** Since it works by doubling the instruments, Chorus halves the number of notes you can play on Proteus 2000.

This is an easy one. Chorus works by doubling the instruments and detuning them slightly. The larger the chorus value, the more detuning occurs. The Width parameter controls the stereo spread. A Width value of 0% reduces the chorus to mono, a value of 100% provides the most stereo separation. Chorus is useful when you want to “fatten up” a part quickly and easily.

### ► To Chorus a Layer

1. With the cursor on the top line of the display, turn the Data Entry Control until you find the Chorus page.
2. Use the cursor buttons to advance the cursor to the Chorus field (the first field in the bottom line of the display). Use the Data Entry Control to turn on chorus.

L1	CHORUS	WIDTH
	off	100%

3. Select a Width value based on the amount of detuning you want. Smaller numbers mean less detuning, larger ones more.

You can select various amounts of chorusing for each of the instruments, just play around with the Chorus and Width parameter until you like what you hear.

## Volume Envelope

Every sound you hear, whether it's a piano note, a drum, or a bell, has a characteristic volume curve or envelope. This Volume Envelope shapes the volume of the sound which grows louder or softer in various ways during the course of the sound. The volume envelope of a sound is one of the clues our brain uses to determine what type of sound is being produced.


An envelope shapes the sound or volume of the sound over time. The envelope generators in Proteus 2000 all have six stages to the contour: Attack 1, Attack 2, Decay 1, Decay 2, Release 1 and Release 2. When you press a key on the keyboard, the envelope goes through each of the first four stages, advancing to the next stage when the defined Level for each is reached. As long as you continue to hold the key down, the envelope continues through the first four stages holding at the end of the Decay 2 level until the key is released. When you release the key, the envelope jumps to the Release stages (no matter where the envelope is when you release the key) ending at the Release 2 level.



Piano




Organ



Strings



Percussion

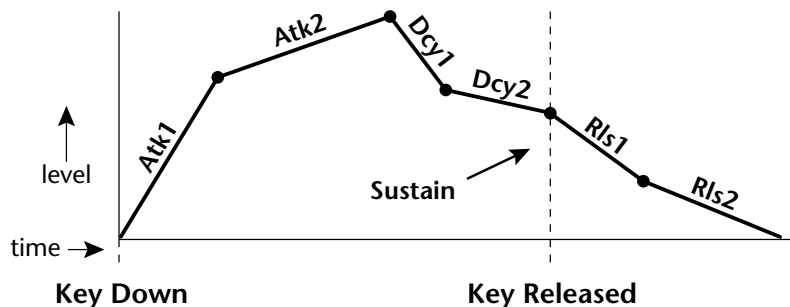


Every instrument in Proteus 2000 has its own predetermined volume envelope which is used when the Volume Envelope parameter is set to "factory." By setting the Volume Envelope to "time-based" or "tempo-based," we can reshape the instrument's natural volume envelope any way we want. By reshaping the volume envelope of an instrument, you can dramatically change the way the sound is perceived. For example, you can make "bowed" pianos or backward gongs. The diagrams to the left show the characteristic volume envelopes of a few common sounds.

In preparation for this experiment choose a fairly "normal" preset (like an organ or synth) which continues to sustain when the key is held down. Go to the Instrument page and set it to "None" on all layers except Layer 1. Now you're ready to play with the Volume Envelope.

#### ► To Setup the Volume Envelope

1. Go to the Volume Envelope mode screen and set the Volume Envelope mode to "time-based."

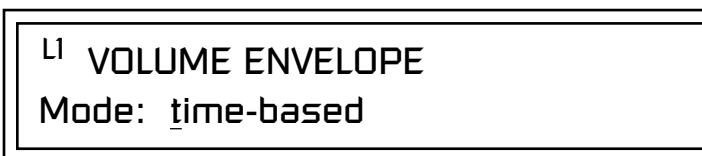

2. Now move on to the next screen to set the Volume Envelope parameters.

L1	VOL ENV	TIME	LEVEL
	Attack 1	<u>50</u>	100%

3. Increase the Attack 1 time value and play a note. The attack controls the time it takes for the sound to reach the Attack level when a key is pressed and held.

## Working with Filters

4. Move the cursor to the first field in the bottom line and use the cursor buttons to advance to the Release pages.
5. Increase the Release 1 and 2 times. Note the effect as you release the key on the controller. The Release stages controls the time it takes for the sound to die away when a note is released.

The filters make it possible to remove certain components of the sound. A low pass filter removes the high frequency components or put another way, it "lets the low frequencies pass." A high-pass filter removes the low frequency components from the sound letting only the high frequencies pass. See "Proteus 2000 Filter Types" on page 108 for a complete list of Proteus 2000's filters and their descriptions.

In preparation for the next tutorial, select preset the "Blank Preset".

1. Go to the Instrument screen and select Instrument #321 - Rast Keys. This is a really buzzy sound. Since filters work by removing or accentuating certain frequencies, we want to make sure that we have a lot of frequencies to start with.
1. Advance to the Filter Type screen using the Data Entry Control. Select the VCF Classic filter.


<b>L1 FILTER</b>	<b>Ord</b>	<b>Type</b>
VCF Classic	4	LPF

2. Go to the Filter Frequency and Q screen. Position the cursor in the Freq: field as shown in the following illustration.

<b>L1 FILTER</b>
Freq: <u>255</u> Q: 000

The Frequency parameter determines the filter cutoff frequency or the frequency the filter uses as the highest frequency allowed to pass.

If you play the keyboard now, you should hear the raw Looped Perc 1 sound. Slowly decrease the filter cutoff frequency value as you play the keyboard. The sound gets more and more dull as you remove more and more high frequencies from the sound. At some point, the sound completely disappears. (You have filtered out everything.) The chart on the following page illustrates what you just did.

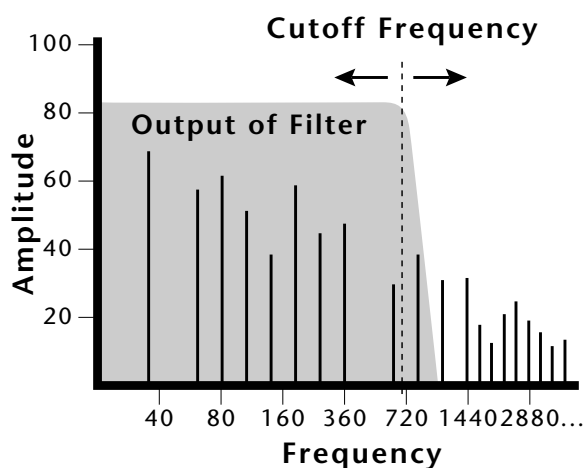

3. Open the filter back up to 255, then move the cursor to the Q field.
4. Set the Q to 10, then move the cursor back under the Freq value. As you change the frequency, notice that the sound now has a sharp, nasal quality. A high Q boosts or amplifies the frequencies at the cutoff frequency (Fc).
5. Reset the cutoff frequency to the lowest setting (0.08Hz) and the Q to 00.

### Adding the Filter Envelope

Now let's modulate the Filter Frequency with the Filter Envelope. The Filter Envelope is a device that can automatically change the filter frequency during the course of the note. Before we define the Filter Envelope, we need to patch the Filter Envelope to the Filter Frequency.

#### ► To Setup the Filter Envelope

1. Go to the PatchCord screen.

L1	PATCHCORD	#01
RlsVel	-> AmpVol	+100


2. Move the cursor below the first field in the bottom line of the display. This is the Source field. Use the Data Entry Control to change the Source to "FiltEnv" as shown in the following illustration.
3. Advance the cursor to the next field. This is the Destination field. Use the Data Entry Control to change the destination to "FiltFreq."



4. Move the cursor to the last field in the line. This is the Amount field. The Amount field determines the amount of modulation applied. Set this value to "+100."

L1	PATCHCORD	#01
	FiltEnv+ -> FiltFreq	+100

This setup connects the Filter Envelope Generator to the Filter Cutoff as shown in the following diagram.

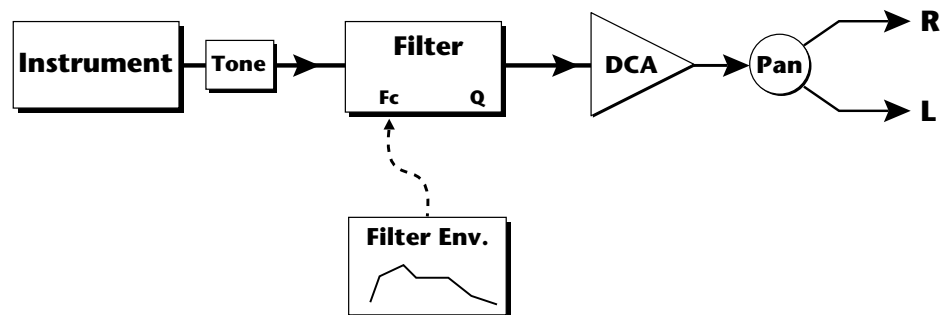

5. Now, return to the Filter Envelope Mode screen. Set the Mode to "time-based."

L1	FILTER ENVELOPE
	Mode: time-based

6. Advance to the Filter Envelope parameter page.

L1	FILT ENV	RATE	LEVEL
	Attack1	50	100%

7. Move the cursor underneath the time field and change the value to about +50. Now when you press a key the filter slowly sweeps up.

<b>L1 FILT ENV</b>	<b>RATE</b>	<b>LEVEL</b>
<b>Attack1</b>	<b>50</b>	<b>+88%</b>

8. Change the attack rate and note the change in the sound.
9. Set the envelope parameters as shown in the following table.

<b>Envelope Phase</b>	<b>Time</b>	<b>Level %</b>
Attack 1	40	65
Attack 2	65	100
Decay 1	80	85
Decay 2	25	50
Release 1	97	20
Release 2	73	0

With the above setup, the filter sweeps up, then Decays back down to the Decay 2 Level until you release the key. Then it sweeps down at the Release rates. Play with the envelope parameters for awhile to get a feel for their function. (If you're having trouble understanding the Envelope Generators, please refer to the Programming Basics section in this manual.)

### Changing Filter Types

Go back to the Filter Type screen shown below and move the cursor down the lower line of the display. Change the filter type while playing the keyboard. There are 50 different filter types!

<b>L1 FILTER</b>	<b>Ord</b>	<b>Type</b>
<b>Aah-Ay-Eeh</b>	<b>6</b>	<b>VOW</b>

These filters are extremely powerful and have been carefully crafted to offer maximum flexibility and musical control. You may want to change the Envelope (PatchCord) Amount, Q and/or the Filter Frequency to get the right sound for each filter and instrument. These three controls, coupled with the Filter Envelope, are perhaps the most important controls on Proteus 2000. Take the time to learn how they interact with each other and you will be able to create sounds beyond imagination.

## Envelope Repeat

The Envelope Generator can also be made to repeat. When the envelope repeat function is On, the Attack (1&2) and Decay (1&2) stages will continue to repeat as long as the key is held.

### ► To Make the Filter Envelope Repeat:

1. Go to the Filter Envelope **Mode** screen shown below.
2. Move the cursor to the Mode field.



3. Turn the data entry control clockwise. The Mode field will change to Repeat as shown below.



4. Move the cursor to the on/off field and turn Envelope Repeat On.
5. Play a key on the keyboard. You should now hear the envelope repeating.
6. Go back to the envelope parameter page and adjust the Attack 1&2, and Decay 1&2 parameters. The repeating envelope cycles through these four stages as long as the key is held.


## Practice Modulating

- Try modulating the pitch with the Filter Envelope generator
- Use Velocity to modulate the Filter Envelope PatchCord or the Filter Frequency. This brightens the sound as you play harder.
- Program the LFO to modulate Filter Frequency and Volume (Patch-Cord screen).
- Modulate the LFO with the other LFO, with Velocity, and with the Modulation Wheel.
- Think of ten different modulation routings, then try them out. The key to learning Proteus 2000 is to experiment.

## Troubleshooting

A common source of confusion when working with the filter envelope is that the Attack or Release parameters might not seem to be working correctly. If you are not getting the expected result, try to analyze the situation. There will be many times when you will have to stop for a minute and think, "What am I trying to do and why isn't it working?" When this happens (and it will), don't panic. Troubleshooting is a normal part of the synthesis process. Simply examine the various parameters and try to be as analytical as possible as you solve the problem. The solution is usually simple (the filter is already wide open and can't open any more). Learning to play any instrument takes a little patience and practice.

Referring to the diagram below which shows the Proteus 2000 signal flow, notice that the DCA comes after the Filter. The DCA controls the final volume of the sound, so if the filter's release is longer than the release for the DCA, you won't hear it, because the DCA has already shut off the sound.

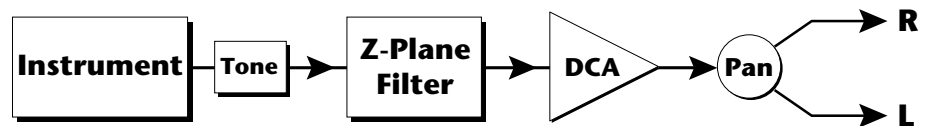

You're getting the general idea by now. Remember not to select a new preset before saving the current one or all your changes will be lost (the preset reverts to the last saved version). If you want to save your creation, select the Save/Copy menu and select a destination preset location for your masterpiece, then press Enter.

Because you can save your work, it's worth spending time to get the sound just right. When designing sounds you become an instrument builder as well as a musician and with Proteus 2000 you can design virtually any instrument you want!

## Linking Presets



See "Preset Links" on page 128 for more information.

Using the Link pages in the Edit menu is a quick and easy way to create new sounds. Use the Links to "layer" presets and to "split" a keyboard into sections containing different sounds.

### ► To Layer Two Presets

1. Select the first preset you want to layer.
2. Press the Edit button. Use the Data Entry Control to move through the screens until you find either the "LINK 1" or "LINK 2" screen shown below.

LINK 1	PRESET	CMP5R
off		

3. Move the cursor to the second line of the display. Select the preset you want to link with the preset you selected in step 1. Play the keyboard as you scroll through the various presets to hear the results.
4. If you want the link to be a permanent part of the preset, be sure to save the preset. Otherwise, simply change the preset to erase your work.

### ► To Create a Split Keyboard Using Links

1. Follow steps 1 through 4 above.
2. Press Enter and use the Data Entry Control to advance to the next page.

LINK 1		KEY	VEL
RANGE	C-2	B4	000 127

3. Set the keyboard range of the linked preset as desired.
4. Press Enter and use the Data Entry Control to go to the Key Range page (It's one of the first Edit menu pages).


L1	KEY:LO	FADE	HIGH	FADE
	C5	000	G8	000

5. Set the range of the original preset so it fills the remaining keyboard area. Save the preset.

## Using External Processing

Don't be afraid to use external processing on specific sounds. The submix sends and returns on Proteus 2000 are there for just that reason. In many instances, a bit of reverb or EQ will be just the thing an instrument needs to give it a distinct identity. Incidentally, an external fuzz box can work wonders on otherwise harmless sounds. By dedicating one of your old fuzz boxes to a submix out/in, you can have programmable distortion for use on basses, organs, whatever!

Try running a submix out into a guitar amp (Hint: reduce the volume). If you think about it, this makes perfect sense if you're looking for an authentic electric guitar or bass sound. You'll be amazed!

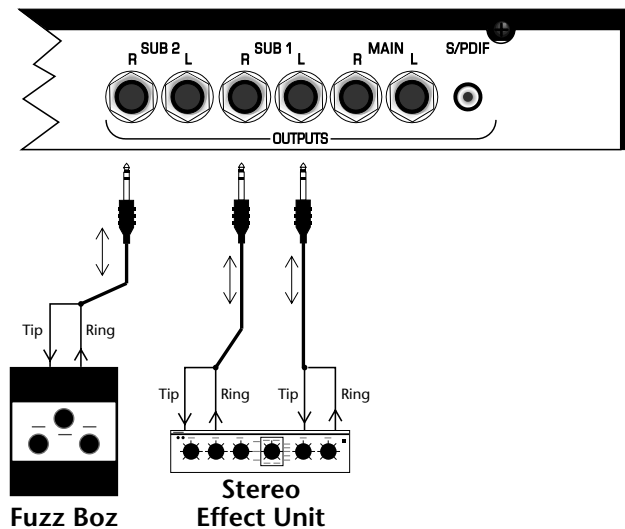


Using the submix outputs and returns, specific presets can be routed through your favorite effects without using up precious mixer channels.

# Effects

## Effects Overview

Proteus 2000 has two stereo effects processors. When playing presets one at a time, the two processors can be programmed as part of the preset. When the MIDI Mode is set to “multi,” the Proteus uses a global effects assignment (Master Effects). The diagram below shows how the effects are integrated into the signal path using a parallel effects send/return model, similar to a mixing console.

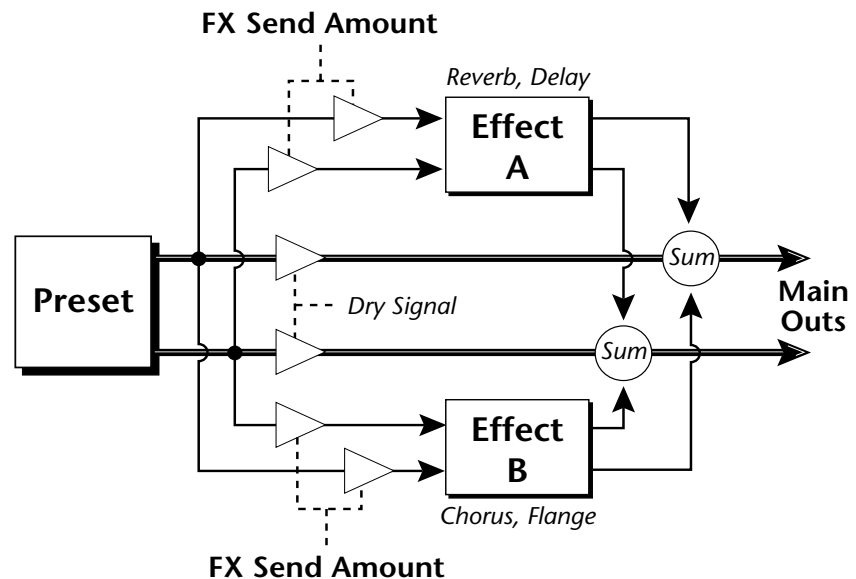


## The Effects Sends

On a mixing console you can control the amount of signal each channel sends to the effect bus. This allows each channel to be placed in a slightly different “sonic space” which creates an airy, open sound.

Proteus 2000 uses this basic concept, but works in a slightly different manner. There are four effects busses: Send1-Send4. Each preset or each MIDI channel (you determine which), can be directed to one of the four busses. Each effect processor has four Send Amounts which allow you to set the wet/dry mix on each of the four busses going into the effect. A setting of 0% is completely dry (no effect). A setting of 50% contains an equal mix of affected and normal (dry) signal.

Send 2 and Send 3 are also used to route sounds to the Sub 1 and 2 outputs on the back panel. When a plug is inserted into the associated Submix jack on the back panel, the Dry portion of the Send is disconnected from the effects processor and the Dry signal is routed directly to the output jack. The actual output routing is shown in parenthesis in the display. *The Dry Send is disconnected from the Effects Processors even if only one plug is inserted into a Submix pair.*

The Effects Send is programmed for each layer in the Edit menu. These routings can be overruled in the Master menu *Mix Output* screen by changing the submix setting from “preset”, which uses the preset routing, to Send1-Send4. In the diagram below, MIDI channel 1A is programmed to obey the preset routing which in this case is Send 1.

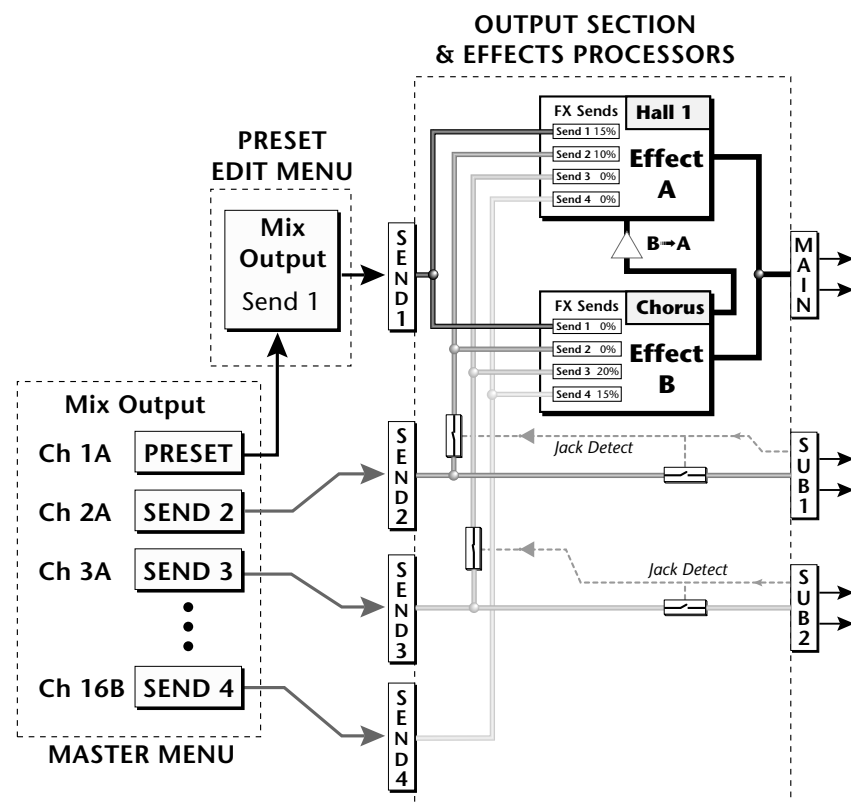

Individual layers or entire MIDI channels can be routed to any of the four busses.

The four Effect Sends allow you to get the most out of the two effect processors. For example, with Effect B set to an echo algorithm, you could route one MIDI channel to Send 3 and set the effect amount to 80%. Another MIDI channel could be routed to Send 4 with an effect amount of only 5%. This is almost like having two different effects!

The Mix Output function is also useful when sequencing since it lets you route specific MIDI channels (and thus sequencer tracks) to specific Sub outputs (on the back panel) where there they can be processed with EQ or other outboard effects.



## Effect Types

### A Effect Types

Room 1-3  
Hall 1 & 2  
Plate  
Delay  
Panning Delay  
Multitap 1  
Multitap Pan  
3 Tap  
3 Tap Pan  
Soft Room  
Warm Room  
Perfect Room  
Tiled Room  
Hard Plate  
Warm Hall  
Spacious Hall  
Bright Hall  
Bright Hall Pan  
Bright Plate  
BBall Court  
Gymnasium  
Cavern  
Concert 9  
Concert 10 Pan  
Reverse Gate  
Gate 2  
Gate Pan  
Concert 11

Medium Concert  
Large Concert  
Large Concert Pan  
Canyon  
DelayVerb 1-3  
DelayVerb 4-5 Pan  
DelayVerb 6-9

### B Effect Types

Chorus 1-5  
Doubling  
Slapback  
Flange 1-7  
Big Chorus  
Symphonic  
Ensemble  
Delay  
Delay Stereo  
Delay Stereo 2  
Panning Delay  
Delay Chorus  
Pan Delay Chorus 1 & 2  
Dual Tap 1/3  
Dual Tap 1/4  
Vibrato  
Distortion 1 & 2  
Distorted Flange  
Distorted Chorus  
Distorted Double

## Effect Parameters

“A” Effect types contain Reverb and Delay effects. “B” Effect types contain Chorus, Flange and Distortion effects. There are 44 “A” effects and 32 “B” effects. In addition to the effect type, there are user adjustable parameters for each effect. The “A” effects have programmable Decay and High Frequency Damping. The “B” effects have user programmable Feedback, LFO Rate, and Delay Time.

### **Decay**

The Decay parameter is used when setting “A” type effects. Decay sets the length of time it takes an effect to fade out. When setting up reverb effects, Decay controls the room size and the reflectivity of the room. For larger room sizes and greater reflectivity, set the Decay value higher. When setting up delay effects, the Decay parameter controls how many echoes are produced or how long the echoes last. The greater the value, the more echoes and longer lengths of time. The Decay value range is from 0 through 90.

### **High Frequency Damping**

The HF Damping parameter is used when setting “A” type effects. High Frequency energy tends to fade away first as a sound is dissipated in a room. the HF Damping parameter adjusts the amount of damping applied to the signal’s high frequency elements which, in turn, changes the characteristics of the room. Rooms with smooth, hard surfaces are more reflective and have less high frequency damping. Rooms filled with sound absorbing materials, such as curtains or people, have more high frequency damping. The value range for High Frequency Damping is from 0 through 127.

### **Feedback**

The Feedback parameter is used when setting “B” type effects. The Chorus and Flange effects have a controllable feedback loop after the delay element. Feeding back a small amount of the signal intensifies the effect by creating multiple cancellations or images. Higher feedback values increase the amount of the Feedback loop. The Feedback value range is from 0 to 127.

### **LFO Rate**

The LFO Rate parameter is used when setting “B” type effects. Both Chorus and Flange effects use a Low Frequency Oscillator (LFO) to animate the effect. LFO applied to a chorus effect creates the slight changes necessary for a realistic choral effect. Applied to a flanger effect, the LFO moves the comb filter notches and adds animation to the sound. The LFO Rate value range is from 0 to 127.

### **Delay**

Flanging, chorus and echoes are all based on a delay line where the signal is delayed by some time period and then mixed back with the unaltered signal. This parameter specifies the how much time passes before you hear the delayed signal. On some effects, this value cannot be changed. In this case, the field contains a dash. The Delay value range is from 0ms to 635ms.

**Synchronize the delay time to the master clock** by setting the delay time below zero. The delay time can be set to any of the standard clock divisors in order to lock the echos to the beat of the song.

## Effects Programmed in the Preset

Effects are normally programmed as part of the preset allowing you to have a different effect for each. This section describes how to program and modify Proteus 2000's preset effects.

### ► To Program the Effects as Part of the Preset:

1. Press the Edit button. The LED illuminates and the Edit screen appears.
2. Use the Data Entry Control to select the FXA Algorithm screen.

**FXA ALGORITHM**  
**Lg Concert Pan**

3. Select an Effect. Do not select the "Master Effect" setting or the global effects set up in the Master menu will be used instead of the Preset Effect settings.
4. Use the Data Entry Control to select the FXA parameter screen.

<b>FXA</b>	<b>DECAY</b>	<b>HFDAMP</b>	<b>FxB&gt;FxA</b>
	<b>90</b>	<b>127</b>	<b>127</b>

The FxB -> FxA parameter lets you route the B effect through the A effect. See "Effect B Into Effect A" on page 152.

5. Set the other effect parameters to your preference. Refer to the information in the last section for detailed descriptions of these parameters.
6. Use the Data Entry Control to select the FXB Algorithm screen.

**FXB ALGORITHM**  
**Distorted Flange**

7. Select an Effect. Do not select the "Master Effect" setting or the global effects set up in the Master menu will be used instead of the Preset Effect settings.
8. Use the Data Entry Control to select the FXB parameter screen.

FXB	FEEDBK	LFORATE	DELAY
	127	127	635ms

9. Set the other effect parameters to your preference. Refer to the information in the last section for detailed descriptions of these parameters.
10. Save the preset. The programmed effects setting will be saved along with the preset.

## Master Effects

You might want the effects to be programmed on a global basis when in Omni or Poly modes. You could choose your favorite reverb, for example, and have it applied to any preset you select.

When playing single presets, the effects are normally programmed as part of the preset. In Multimode, the Master effects are used, since there are only two effect processors to serve 32 MIDI channels.

### ► To Program the Master Effects

1. Press the Master menu button. The LED illuminates and the Master screen appears.
2. Use the Data Entry Control to select the FXA Algorithm screen.

FXA ALGORITHM
Lg Concert Pan

3. Select an Effect.
4. Use the Data Entry Control to select the FXA parameter screen.

FXA	DECAY	HFDAMP	FxB>FxA
	90	127	127

The FxB -> FxA parameter lets you route the B effect through the A effect. See "Effect B Into Effect A" on page 152.

5. Set the other effect parameters to your preference. Refer to the information in the last section for detailed descriptions of these parameters.
6. Use the Data Entry Control to select the FXB Algorithm screen.

**FXB ALGORITHM**  
**Distorted Flange**

7. Select an Effect.
8. Use the Data Entry Control to select the FXB parameter screen.

<b>FXB</b>	<b>FEEDBK</b>	<b>LFORATE</b>	<b>DELAY</b>
	127	127	145ms

9. Set the other effect parameters to your preference. Refer to the information in the last section for detailed descriptions of these parameters.
10. Press the Edit menu button. The LED illuminates and the Edit menu displays the last screen used.
11. Use the Data Entry Control to access the FXA Algorithm page and select "Master Effect A."



*The MIDI mode (Master Menu) must be set to Omni or Poly mode in order to select the effects in the preset.*

**FXA ALGORITHM**  
**Master Effect A**

12. Repeat step 11 for the FXB Algorithm
13. Save the preset. The Master effects routing will be saved along with the preset.

## Effects Mode

This control provides a true bypass of the effects engine. Bypass is a useful feature if you are using external effects at the mixing console and want to turn the effects off for all presets.

### ► To Bypass the Effects:

1. Press the Master menu button. The LED lights and the last Master parameter screen used is displayed.
2. Use the Data Entry Control to select the Effects Mode screen.

**FX MODE**  
**enabled**

3. Use the cursor button to advance the cursor to the bottom line in the screen.
4. Use the Data Entry Control to change the value.
5. Press the Enter key to save the settings.

The Effects Mode values are “enabled” and “bypassed.” Enabling the Effects Mode turns on effects. Selecting “bypassed” turns off the effects.

## Flexible Effects Control

The effects processor controls are very flexible. The effects can be controlled in three different ways to suit your personal preference and to adapt to different situations.


When in Omni or Poly mode, effects are normally programmed as part of the preset. In Multi mode, the two effects processors can be controlled using the Master settings or by using the effects settings of a preset on a specific MIDI channel. Effects can be programmed in the following ways:



*You can create special “Effects Presets” which are assigned to the FX Multi mode Control channel, then use standard MIDI Program Change commands to switch effects during sequence playback.*


1. **Programmed as part of the preset when playing single presets (Omni or Poly Modes).**
2. **Programmed from the Master Effects Section when playing either single presets (preset Effect Type set to “Master”) or when in Multi Mode.**
3. **Programmed from the designated control preset when in Multi Mode.**

Refer to the following diagram for a look at how effects are programmed.

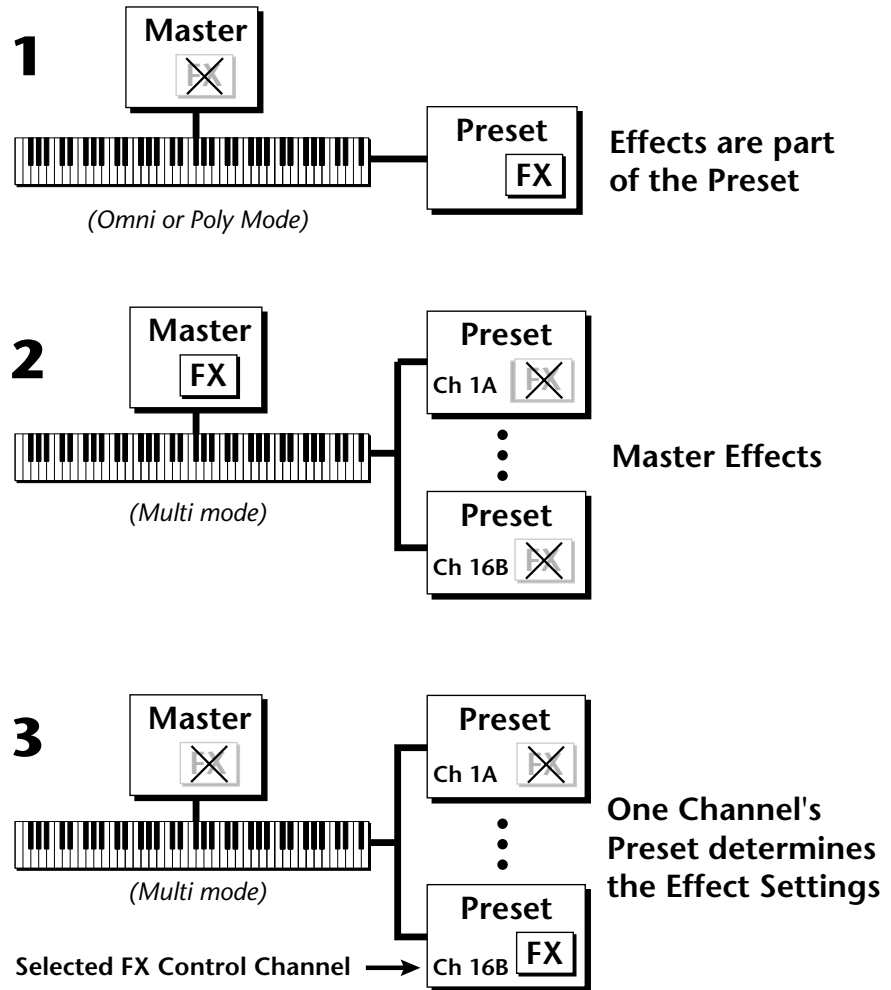

► **To Program the Effects Globally for all Presets in Multi Mode:**

1. Press the Master menu button. The LED illuminates and the Master menu screen appears.
2. Use the Data Entry Control to select the MIDI mode page. Choose "multi" for the mode.

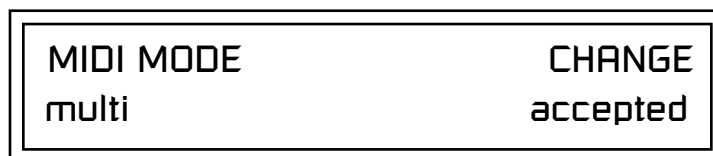

3. Move the cursor to the Multi mode Effects Control page using the Data Entry Control.

**FX MULTIMODE CONTROL**  
**use master settings**

4. Set the Effect Control channel to *use master settings* using the Data Entry Control.
5. Press the Enter key to save the settings and return to the main screen.

### Using the Effects Channel Settings in Multi Mode

In Multi mode, the two effects processors can be controlled from the Master Effects settings or they can follow the effects settings of the preset on a special MIDI channel. The effect settings on this special channel will be applied to all the other MIDI channels. This allows the effects to be changed during a sequence simply by changing the preset on a specified MIDI channel.

#### ► To Program the Effects by Channel Number in Multi Mode

1. Press the Master menu button. The LED illuminates and the Master menu screen appears.
2. Use the Data Entry Control to select the MIDI mode page. Choose “multi” for the mode.
3. Move the cursor to the Multi mode Effects Control field using the Data Entry Control
4. Set the Effect Control to “preset on Channel #” (where # is replaced by the actual channel number from 1A through 16B) using the Data Entry Control.
5. Press Enter to save the settings and return to the main screen.

### Effect B Into Effect A

The output of effects processor B can be routed into effects processor A. This connects the effects in series instead of their normal parallel configuration. Two effects connected in series sound very different than the same two effects in parallel. For example, a chorus patched through reverb can turn a bland string section into a lush wall of sound. The B →A amount can also be controlled for even more flexibility.

#### ► To Send the Output of Effect B through Effect A:

In this example, 100% of Effect B will be sent into Effect A.

1. Access the FXA parameter screen (in either the Master or Edit menus) that contains the FXB →FXA parameter.




FXA	DECAY	HFDAMP	FxB>FxA
	127	127	127

- Set this amount to 127. Press the cursor button to return the cursor to the top line in the display.
- Use the Data Entry Control to select the FXA submix routing parameter screen.

FXA	SEND AMOUNTS	1: 10%
2: 20%	3: 30%	4: 40%

- Press the cursor buttons to advance the cursor to the Main field.
- Set the Main send amount to any amount other than zero.
- Press the cursor button again to return the cursor to the FXA title. Use the Data Entry Control to advance to the FXB Algorithm page.
- Select an effect.
- Advance to the FXB submix routing page and set the Main FXB send percentage to zero.
- Play the keyboard and you should hear the B Effect running through Effect A. This patch is shown below.

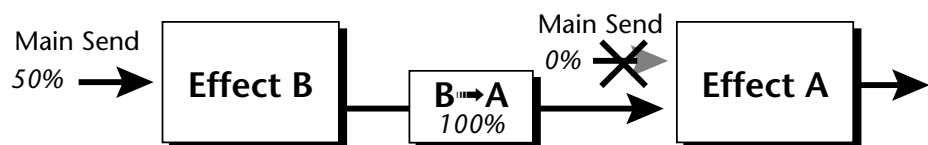


# General Effect Descriptions

## Reverb

Reverberation is a simulation of a natural space such as a room or hall. The reverb algorithms in Proteus 2000 simulate various halls, rooms and reverberation plates. In addition, there are several other reverb effects such as Gated Reverbs, Multi Tap (early reflections), Delay and Panning effects. There are two adjustable parameters on the reverb effects - Decay Time and High Frequency Damping.

Decay time defines the time it takes for the reflected sound from the room to decay or die away. The diagram below shows a generalized reverberation envelope.

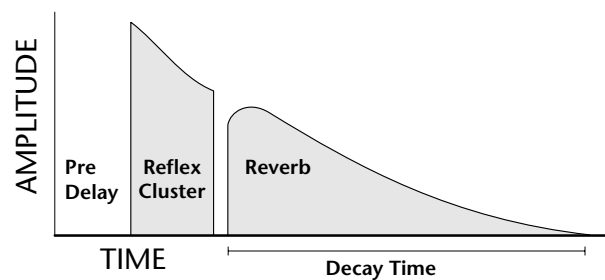

After an initial pre-delay period, the echoes from the closest walls or ceiling are heard. These first echoes, or the early reflection cluster, vary greatly depending on the type of room. Roughly 20 milliseconds after the early reflection cluster, the actual reverberation begins and decays according to the time set by the Decay Time parameter.

High frequency energy tends to fade away first as a sound is dissipated in a room. The High Frequency Damping parameter allows you adjust the amount of high frequency damping and thus change the characteristics of the room. Rooms with smooth, hard surfaces are more reflective and have less high frequency damping. Rooms filled with sound absorbing materials such as curtains or people have more high frequency damping.

### General Descriptions of the Reverb Types

**Room:** Programs simulate small rooms with high frequency absorption caused by drapes and furniture.

**Plates:** Simulates plate type reverbs with their tight, dense, early reflections and sharp reverb buildup.

**Hall:** Presets recreate the open, spacious ambience of large concert halls.

**Gated Reverbs:** Add ambience only while the original signal is still sounding. As soon as the signal falls below a threshold, reverb is cut off.

**Delay:** Programs can be used to create echo and doubling effects.

**Multi Tap:** Programs consist of the reflection cluster only without the reverb decay.

## *Chorus*

The function of a chorus device is to thicken the sound or to make one voice sound like many. This effect is usually created by mixing one or more delayed versions of the signal with the original. The delay times used are too short to be perceived as an echo, but long enough so that comb filtering does not occur. In addition, the delay time is varied via a low frequency oscillator to simulate the random differences which occur when multiple instruments are playing together. A slight amount of feedback improves the effect by creating multiple images of the sound as it recirculates again and again.

All the choruses are true stereo using two separate delay lines controlled by a single set of controls. The delay times are slightly different for each channel and the LFO phase is inverted on one channel to help contribute to the overall chorus effect. The LFO Rate and Depth settings are critical to achieving a realistic effect, with faster LFO rates generally requiring less LFO amount and vice-versa.

## *Doubling*


When a copy of a sound delayed by about 26 milliseconds is added back to the original, two audio images are perceived by your brain. When the delayed image is slightly varied or modulated, the illusion of two voices is created.

## *Slapback*

Slapback is a single short echo in the range of 50-60 milliseconds. A sound delayed by this length of time is perceived as a discrete and separate image which is useful for a thickening effect or as a pre-delay for reverb simulating a hard, reflective surface such a gymnasium wall.

## *Stereo Flanger*

A flanger consists of a short audio delay line whose output is mixed together with the original signal. Mixing the delayed and original signals results in multiple frequency cancellations called a comb filter. Since the flanger is a type of filter, it works best with harmonically rich sounds.

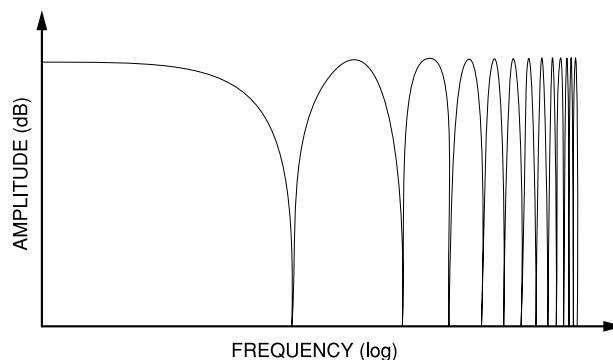

This is the frequency response of a Comb Filter.

Flanging was originally created using two tape recorders playing identical recordings. By exactly synchronizing the two decks and then slowing the speed of one by grasping the tape reel flanges, the flanging effect was born.

The Proteus 2000 flanger is a stereo device consisting of two separate delay lines controlled by a single set of controls. A Low Frequency Oscillator (LFO) varies this initial delay setting, changing the frequency of the notches and adding animation to the sound. LFO Rate controls the rate of change and LFO Depth controls how much the LFO changes the delay.

The Feedback control sends some of the delayed signal through the delay line again. When feedback is used the comb filter notches are deepened.

### *Delay*

Delay is an effect which can be used for doubling, reverb pre-delay, or echoes.

Delay Time is variable from 0-635 mS and controls the time between echoes. Feedback and determines how long the echoes continue sounding. "Infinite" delay effects are also possible without the risk of runaway.

### *Stereo Delay*

Similar to delay except that the delay line outputs a stereo signal from the mono input. The two output signals are a few milliseconds apart to create a stereo image. The delay times are variable from 0-635 mS.

### *Panning Delay*

A panning delay is similar to the normal delay lines except that the echoes bounce back and forth between the two stereo speakers.

### *Dual Tap*

These are delay lines where the signal is "tapped off" at two unevenly spaced locations. When feedback is used, multiple complex echoes are produced. The fraction in some of the algorithm names (i.e. 1/3, 1/4) refers to the time ratio between the taps.

### *Vibrato*

Basically, this a delay line modulated by an LFO, but with none of the original signal added in. The LFO modulation creates a Doppler shift and a resultant cyclical pitch shift. The vibrato created in this manner sounds very different than vibrato created by frequency modulating the sample.

### *Distortion*

Distortion uses a technique called "soft-clipping" to create additional harmonics in the signal. As the level increases, the top of the waveform becomes somewhat squared. As the level increases further, it transforms into a true square wave.



Soft clipping gradually squares the edges of the waveform as the amplitude is increased.

# Save/Copy Menu

## Saving a Preset



*Each time you change a preset parameter, the Save/Copy button LED illuminates reminding you to save your work.*

The Save/Copy menu is used to save changes to a preset and to copy data between presets. When in “Quick Edit” mode, this menu always defaults to the “Save to Preset” page of this menu with the cursor on the second line. You can use the Data Entry Control to navigate to other pages that support copying information.

Any time you make a change to a preset, either using the Edit menu or by changing the Controller Knobs in Quick Edit mode, you must save the preset in order for the change to become permanent. When you save a preset it erases any existing preset information in that location. Make sure that the destination location does not contain preset information you want to keep.

SAVE PRESET to	User
020 <sup>1</sup>	Destination Preset

### ► To Save a Preset

1. Press the Save/Copy menu button.
2. Move the cursor to the bottom line on the display.
3. Select the new preset location using the Data Entry Control.
4. Press the Enter/Home button.

## Copying Information

### Copy Preset

The Copy operations let you copy information from any preset or layer to any other preset or layer. To use the copy command, first select the preset or layer to which you want to copy (the destination location). Then, from the copy screen, select the preset or layer you want to copy to the currently selected location (the source location). Using the copy commands you can copy preset, layer, PatchCord and arpeggiator information.

The Copy Preset command lets you copy all of the preset information from one location into the preset of the current location. The preset information in the source location (the preset location from which you want to copy) is not deleted from the original location, just copied to the destination location.

COPY PRESET from CMPSR  
009<sup>3</sup> pad: Dreamer



*All the Sound Navigator features work when using the Copy functions.*

#### ► To Copy a Preset

1. Select the Preset you want to copy information *into*.
2. Press the Save/Copy menu button.
3. Select "Copy Preset from" using the Data Entry Control.
4. Select the preset you want to copy using the Data Entry Control. The ROM Bank, Preset Number, Bank Number, Category and Preset Name fields are all selectable.
5. Press the Enter/Home button.
6. A warning screen appears asking you to confirm once more. Press the Enter/Home button to copy the selected preset into the current location.

### Copy Layer

The Copy Layer command lets you copy any layer information from one preset into any layer of the current preset location. The layer information in the source location (the layer location from which you want to copy) is not deleted from the original location, just copied to the destination location.

COPY LAYER User L1 -> L4  
020<sup>1</sup> Source Preset

## Copy PatchCords

### ► To Copy a Layer

1. Select the Preset and Layer you want to copy information into.
2. Press the Save/Copy menu button.
3. Move the cursor to the bottom line on the display.
4. Select the preset location using the Data Entry Control, of the preset containing the information you want to copy into the current preset.
5. Move the cursor to the top line in the display.
6. Select the layer of the source preset in the first field on the right.
7. Select the destination layer in the second field.
8. Press the Enter/Home button.

The Copy PatchCord command lets you copy the patchcord settings from one layer of the preset location into the current layer of the current preset location. The preset information in the source location (the preset location from which you want to copy) is not deleted from the original location, just copied to the destination location.



```
COPY CORDS    CMP5R    L1 -> L4
020¹ Source Preset
```

### ► To Copy a PatchCord

1. Select the Preset and Layer you want to copy information into.
2. Press the Save/Copy menu button.
3. Move the cursor to the bottom line on the display.
4. Select the preset location using the Data Entry Control, of the preset containing the information you want to copy into the current preset.
5. Move the cursor to the top line in the display.
6. Select the layer of the source preset in the first field on the right.
7. Select the destination layer in the second field.
8. Press the Enter/Home button.

## Copy Preset PatchCords

The Copy Preset PatchCord command lets you copy the preset patchcord settings from one preset location into the current preset location. The preset information in the source location (the preset location from which you want to copy) is not deleted from the original location, just copied to the destination location.




### ► To Copy a Preset PatchCord

1. Select the Preset you want to copy information into.
2. Press the Save/Copy menu button.
3. Move the cursor to the bottom line on the display.
4. Select the preset containing the information you want to copy.
5. Press the Enter/Home button.

## Copy Preset Bank

The Copy Preset Bank command lets you copy an entire bank from any ROM or RAM bank location to any RAM (user) bank. This function can be especially useful after installing a new sound SIMM.

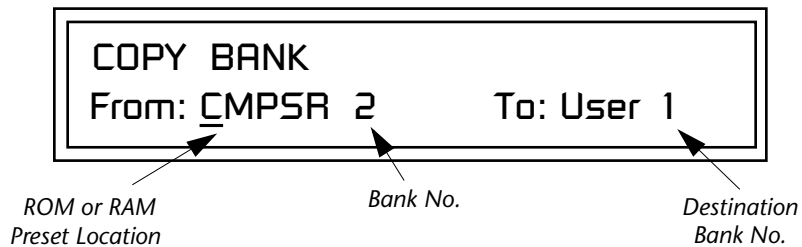

### ► To Copy a Preset Bank

1. Press the Save/Copy menu button.
2. Move the cursor to the "From" field on the bottom line on the display.
3. Use the Data Entry Control to select the preset bank you want to copy *from*.
4. Move the cursor to the "To" field on the bottom line on the display.
5. Use the Data Entry Control to select the User preset bank you want to copy *into*.
6. Press the Enter/Home button to overwrite the bank.



## Create Random Preset

This is a great feature which creates a new preset using portions of the ROM presets as source material. By merging random presets, really great sounding presets can be generated with ease. Use this feature to generate wild new sounds, get new programming ideas or just for fun.

<b>RANDOMIZE PRESET</b>	<b>User</b>
000 <sup>0</sup> Any User Preset	



*Examine interesting  
presets to learn how they work  
using the Edit menu.*

### ► To Create a Random Preset

1. Press the Save/Copy menu button.
2. Move the cursor to the bottom line on the display and press Enter.
3. A new random preset will be created.
4. Don't like the sound? Press Enter again and a new random sound will be generated.

## Copy User Bank to Flash

This is a special purpose function to be used with the Flash sound authoring feature. Flash Sound SIMMs created on an EOS Ultra sampler can be used as a custom Proteus 2000 bank. Presets are then created in a User bank. When the bank of presets is finished, it can be copied, using this function, to the Flash SIMM. Flash SIMMs contain two separate memory locations. One of these memories contains the sound samples and the other memory can hold four banks of 128 presets.

**WARNING: dangerous voltages are exposed inside Proteus 2000!** Make sure power is completely disconnected from Proteus 2000 before removing the top panel. Replace the top panel before restoring power to the unit. The four sound SIMM sockets in Proteus 2000, marked 0 through 3, are located behind the controller knobs on the circuit board. **The destination Flash SIMM must be placed in SIMM socket 1.**

COPY USER BANK TO FLASH  
From: User<sup>0</sup> To: Flash<sup>2</sup>

### ► To Copy a User Bank to Flash

1. Make sure a Flash SIMM is inserted into the extra Proteus 2000 SIMM socket.
2. Press the Save/Copy menu button.
3. Rotate the Data Entry Control to select the "Copy User Bank" function shown above.
4. Move the cursor to the "From" field and select the User bank that you want to copy to the Flash SIMM.
5. Move the cursor to the "To" field and select the Flash bank that you want to contain the User bank.
6. Press Enter. The Enter LED will flash and the screen below appears.

Press ENTER to Overwrite  
Flash SIMM Presets

7. Press Enter again to confirm. The following screen appears:

COPYING USER BANK TO FLASH  
Done. Please Reboot Now.

8. The Flash presets cannot be used until Proteus 2000 is rebooted (power off then on). Reboot the Proteus 2000 and verify that the new Flash bank has been properly copied.



*If there is no Flash SIMM in the unit, the error message, "Requires Flash SIMM" will be displayed.*

## Rename Flash SIMM



The Flash ID is the MSB of the MIDI Bank Select command used to select the Sound Bank.



If there is no Flash SIMM in the unit, the error message, "Requires Flash SIMM" will be displayed.

This utility allows you to rename the Flash SIMM and change its ID number. Flash SIMMs can have any five letter name you choose. Each Flash SIMM in a Proteus 2000 unit must have a unique ID number (106-119).

The field in the upper right corner selects between multiple Flash SIMMs. If only one Flash SIMM is installed, the field cannot be modified.

<b>RENAME FLASH SIMM</b> New Name: Drums	Flash ID: 110
---	------------------

1. Make sure a Flash SIMM is inserted in a Proteus 2000 SIMM socket.
2. Press the Save/Copy menu button.
3. Rotate the Data Entry Control to select the "Rename Flash SIMM" function shown above.
4. Move the cursor to the "New Name" field and rename the SIMM using the Data Entry Control to select the letter and the cursor keys to select the position.
5. Set the Sound ID number for the SIMM. It doesn't matter which number you choose as long as the same number isn't used in another SIMM.
6. Press Enter. The following screen appears and the Enter LED will be flashing.

Press ENTER to Update Flash SIMM data
--

7. Press Enter again to confirm or any other button to abort. The following screen appears:

<b>CHANGING SIMM NAME &amp; ID</b> (takes about 2 minutes)
---

8. The Flash presets cannot be used until Proteus 2000 is rebooted (power off then on). Reboot the Proteus 2000 and verify that the new Flash bank has been properly renamed.

## Duplicate Flash

This utility allows you to duplicate Flash SIMMs using Proteus 2000. Both Sound and Preset data is copied when a Flash SIMM is duplicated. A factory sound SIMM cannot be copied using this utility.

**WARNING: dangerous voltages are exposed inside Proteus 2000!** Make sure power is completely disconnected from Proteus 2000 before removing the top panel. **Replace the top panel before restoring power to the unit.**

The four sound SIMM sockets in Proteus 2000 are marked 0 through 3 and are located behind the controller knobs on the circuit board.

**The Flash SIMM you want to copy MUST be placed into SIMM Socket 0. The destination Flash SIMM must be placed in SIMM socket 1.**



*If there are no Flash SIMMs in the unit, or if the SIMMs are in the wrong slots, an error message will be displayed.*

DUPLICATE SLOT 0 FLASH  
Start

1. Make sure the two Flash SIMM are located in the required Proteus 2000 SIMM sockets.
2. Press the Save/Copy menu button.
3. Rotate the Data Entry Control to select the "Duplicate Flash SIMM" screen shown above.
4. Move the cursor to the bottom line and press Enter. The following screen appears and the Enter LED will be flashing.

Press ENTER to overwrite  
the Flash SIMM in Slot 1

5. Press Enter again to confirm or any other button to abort. The following screen appears and the SIMM is copied.

DUPLICATING SLOT 0 -> SLOT 1  
(Takes about 5 minutes)


6. When Proteus 2000 has finished duplicating the SIMM, turn power off, remove the copied SIMM, then reboot. That's it!

# Appendix

## Front Panel Knob Functions

This section provides some of the more technical information about the Proteus 2000. In this appendix, you will find information about velocity curves, MIDI commands and PatchCord charts.

The front panel knob functions are standardized for most of the factory presets. The typical functions of the controller knobs are described below.

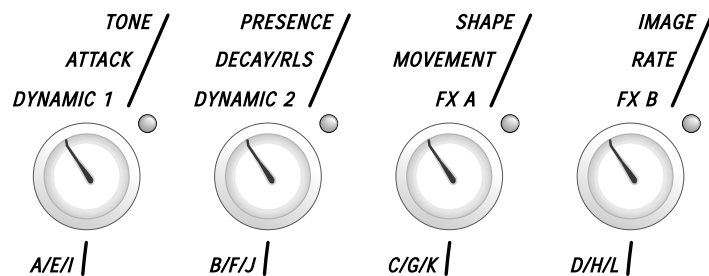

<b>Tone</b> .....	Filter Frequency
<b>Presence</b> .....	Filter Resonance
<b>Shape</b> .....	Filter Envelope Amount
<b>Image</b> .....	Typically brings in additional layers
<b>Attack</b> .....	Volume or Filter Envelope Attack
<b>Decay/Release</b> .....	Vol/Filt. Envelope Release and/or Decay
<b>Movement</b> .....	LFO->Dynamic Movement (i.e.panning)
<b>Rate</b> .....	LFO Rate
<b>Dynamic 1</b> .....	Typically Velocity -> Amplifier Volume
<b>Dynamic 2</b> .....	Typically Velocity -> Filter Frequency
<b>FX A</b> .....	Effects Processor A Amount
<b>FX B</b> .....	Effects Processor B Amount

## Presets

### *Proteus 2000 Preset Categories*

Proteus 2000 comes standard with 1024 ROM presets and 512 editable User preset locations. Presets are organized into banks of 128 presets each. User banks 0-3 are duplicates of CMPSR banks 4-7.

The Proteus 2000 presets are organized in categories according to the types of sound. Listed below are the categories and their three letter prefixes:

<b>bpm:</b> Tempo-based, LFO/Envs	<b>kit:</b> Drum Kit
<b>brs:</b> Brass Instruments	<b>led:</b> Leads
<b>bs1:</b> Acoustic Bass	<b>nse:</b> Noises
<b>bs2:</b> Electric Bass	<b>orc:</b> Orchestral sounds
<b>bs3:</b> Sub Bass	<b>pad:</b> Sustained, pad-like
<b>bs4:</b> Dance Bass	<b>prc:</b> Percussive
<b>bs5:</b> Miscellaneous	<b>scr:</b> Scratches
<b>gtr:</b> Guitar	<b>sfx:</b> Sound Effects
<b>hit:</b> Orchestra Hit / Short Blast	<b>str:</b> Strings (violins, cellos, etc.)
<b>kb1:</b> Piano	<b>syn:</b> Synthesizers
<b>kb2:</b> Electric Piano	<b>vox:</b> Vocals
<b>kb3:</b> Organs	<b>wav:</b> Simple Waveforms
<b>kb4:</b> Hybrid / Mixed Keyboards	<b>wnd:</b> Wind Instruments

## Preset Listing

### User Bank 0, CMPSR Bank 4

0. kb1:DynamicGrand	43. kb1:Dance Pno	86. kb3:Bally Yard
1. kb4:Yo My Dynos	44. kb1:Elecro7CP	87. kb3:Clean X-Whl
2. orc:Orchestral	45. kb1:Grande	88. kb3:Clicky B
3. gtr:Grusty	46. kb1:HonkTonkeyz	89. kb3:Day
4. bs1:A Ku Stq	47. kb1:Klassical	90. kb3:DirT baG
5. kb3:Rock'in B	48. kb1:Layer Piano	91. kb3:DirtyHertz
6. kb2:WideSuitcase	49. kb1:Miami Grand	92. kb3:Disco
7. led:Zimppler	50. kb1:Piano Mio	93. kb3:Drawbar
8. bs4:AnalogPlanet	51. kb1:Piano&Strng1	94. kb3:Drawbars
9. kit:Kit 1	52. kb1:Piano&Strng2	95. kb3:DX
10. kb1:And Voice	53. kb1:StereoGrand1	96. kb3:DX Organ
11. sfx:MetalScience	54. kb1:StereoGrand2	97. kb3:Full Organ
12. syn:Silk OBXsaws	55. kb1:StereoGrand3	98. kb3:Gospel Soul
13. gtr:Stolen7Away	56. kb1:StereoGrand4	99. kb3:GreenEyed
14. brs:Movie Brass	57. kb1:Sung Piano	100. kb3:Gritty B Wav
15. str:Dyna-heim	58. kb1:Techno Piano	101. kb3:Grundge XXX
16. bpm:Jumping	59. kb2:Ballad Tine	102. kb3:jX Organ
17. vox:New Age Oohs	60. kb2:Classic EP 1	103. kb3:Kool N Mello
18. bs4:Sugar Freak	61. kb2:Classic EP 2	104. kb3:Mellow Man
19. kb4:Clavinetti	62. kb2:Classic EP 3	105. kb3:Nod
20. kit:Acoustic 1	63. kb2:Classic EP 4	106. kb3:Oddd Organ
21. brs:BreathyTBone	64. kb2:DooGie	107. kb3:Org Lite
22. wnd:Real Flute	65. kb2:Dynofunk EP	108. kb3:Organomics X
23. str:Allin a Pizz	66. kb2:FM El Piano	109. kb3:Perc Organ
24. bs4:Walky Talk	67. kb2:FM EP 1	110. kb3:Pipe Organ
25. str:Filmscore	68. kb2:FM EP 2	111. kb3:Simple Organ
26. led:L.V.'s Worm	69. kb2:FM2Classic	112. kb3:Testify
27. kit:Bag O Tricks	70. kb2:Hard Dyno	113. kb3:Tone Organ
28. kb2:Melosoul EP	71. kb2:Hard EP	114. kb3:Upper B
29. wnd:Breather	72. kb2:Hard Tine	115. kb3:Vox 1
30. vox:Frozen Time	73. kb2:Med Dyno	116. kb3:Vox 2
31. hit:MasterBlast	74. kb2:Med EP	117. kb3:WheelSpeed B
32. gtr:NyloSteel	75. kb2:Pretty EP	118. kb4:Breathy
33. kb3:JimmyJazzy B	76. kb2:PrettyLushEP	119. kb4:Clavinet 1
34. kit:Kit	77. kb2:Rezzroadz	120. kb4:Clavinet 2
35. bs2:Fing&Harms 2	78. kb2:Suitcase EP	121. kb4:Clavinet 3
36. kb2:Lovers Fm EP	79. kb2:Supatramp EP	122. kb4:Clavin' It
37. syn:JunoPlseComp	80. kb2:Wurlitzer Hd	123. kb4:Clavity
38. gtr:WaaKeeGa	81. kb2:WurlitzerSft	124. kb4:Comp Keyz 1
39. led:inBottles	82. kb2:WurlyD'Layer	125. kb4:Comp Keyz 2
40. kb1:Ballad Grand	83. kb3:B3 X-Wheel 1	126. kb4:Comp Keyz 3
41. kb1:Chime Grand	84. kb3:B3OrganWave1	127. kb4:Crystal
42. kb1:Concert Pno	85. kb3:B3OrganWave2	

## Preset Listing

### User Bank 1, CMPSR Bank 5

0. kb4:Dance	43. bs1:Upright 2	86. bs2:Sloppiest
1. kb4:Dyno Piano	44. bs1:Upright Days	87. bs2:Spankin
2. kb4:DynoWahClav	45. bs1:WalkinUprite	88. bs2:ThickFretles
3. kb4:E Grand	46. bs2:BADtube	89. bs2:VeloFretless
4. kb4:Elecre 1	47. bs2:Big Basic	90. bs3:26
5. kb4:Elecre 2	48. bs2:EP 1	91. bs3:Analow
6. kb4:Elecre 3	49. bs2:EP 2	92. bs3:ATC 1
7. kb4:Electrified	50. bs2:EP 3	93. bs3:ATC 2
8. kb4:EP Fog	51. bs2:EP Bass	94. bs3:ATC 3
9. kb4:EP Roll 1	52. bs2:Fing&Harms 1	95. bs3:ATC 4
10. kb4:EP Roll 2	53. bs2:Finger Out	96. bs3:Beauty
11. kb4:EP Roll 3	54. bs2:Finger&Harmz	97. bs3:Below Sub
12. kb4:Farfisa 1	55. bs2:Finger1	98. bs3:Big Basic
13. kb4:Farfisa 2	56. bs2:Finger2	99. bs3:DB Sub
14. kb4:Farfisa 3	57. bs2:Fingered In	100. bs3:Easy
15. kb4:Grand FM	58. bs2:Fretless 1	101. bs3:Face Bass
16. kb4:Hard Comp 1	59. bs2:Fretless 2	102. bs3:Fat Sunbass
17. kb4:Hard Comp 2	60. bs2:Fretless 3	103. bs3:Four U
18. kb4:Hard Comp 3	61. bs2:Fretless 4	104. bs3:HipPocket
19. kb4:Hard Comp 4	62. bs2:Fretless 5	105. bs3:Homeboy E
20. kb4:Hard Comp 5	63. bs2:Fretless'd	106. bs3:Ice
21. kb4:Hard Tined	64. bs2:FretterNot	107. bs3:JP-Moog 4
22. kb4:Knockkerz	65. bs2:Full Finger	108. bs3:Line
23. kb4:M12Tines	66. bs2:Gruzzzy Pop	109. bs3:Lowness
24. kb4:Mystery Roll	67. bs2:Harmonics	110. bs3:MassiveMini
25. kb4:Nu Tynez 1	68. bs2:MelloRounder	111. bs3:MooG DropS
26. kb4:Nu Tynez 2	69. bs2:Picked	112. bs3:Moogy Mudd
27. kb4:PerkyRhodes	70. bs2:Picked Off	113. bs3:Planet Bass
28. kb4:Pharpheeza	71. bs2:Pop	114. bs3:Plex
29. kb4:PnoWndStrg 1	72. bs2:Pop Slide 1	115. bs3:Poly Style
30. kb4:PnoWndStrg 2	73. bs2:Pop Slide 2	116. bs3:Real Low
31. kb4:Roll	74. bs2:Pop Slide 3	117. bs3:Roundabout
32. kb4:RollinDreams	75. bs2:Pop Slide 4	118. bs3:SE Micro
33. kb4:Syn Ballad	76. bs2:Signfeld Pop	119. bs3:SE Sub 1
34. kb4:Synth Cheese	77. bs2:Slap 1	120. bs3:SE Sub 2
35. kb4:Synth Organ	78. bs2:Slap 2	121. bs3:Spanker
36. kb4:Tine EP	79. bs2:Slap 3	122. bs3:Spkr Damage
37. kb4:Vox-A-Phaze	80. bs2:Slap 4	123. bs3:Sub Core
38. kb4:Whistle Keys	81. bs2:Slap 5	124. bs3:Sub Drop
39. bs1:Acoustic	82. bs2:Slap Me!	125. bs3:Sub Plunk
40. bs1:DynoStandUp	83. bs2:SlapBack	126. bs3:Sub Poke
41. bs1:Up ~	84. bs2:Slappity	127. bs3:Sub Pummeled
42. bs1:Upright 1	85. bs2:Slop Bass	



## Preset Listing

### User Bank 2, CMPSR Bank 6

0. bs3:Sub-Basement	43. bs4:Mini 3	86. bs4:Synth 9
1. bs3:Subtle Bass	44. bs4:Mini 4	87. bs4:Synth
2. bs3:Super Sub	45. bs4:Mini More	88. bs4:TB 1
3. bs3:The Tunnel	46. bs4:Mod da Wheel	89. bs4:TB 2
4. bs3:Thickley Dub	47. bs4:Moog 1	90. bs4:TB 3
5. bs3:Thip Kong	48. bs4:Moog 2	91. bs4:TB 4
6. bs3:Way Low Down	49. bs4:Moog Tri	92. bs4:Thunk
7. bs3:Wide Chorus	50. bs4:Mr. Clean	93. bs4:Tight Mo MW
8. bs3:ZuB CoMpLeX	51. bs4:Not So Mini	94. bs4:Tres o Tres
9. bs4:3 O WorM	52. bs4:Occitan Root	95. bs4:Walky Talk2
10. bs4:Acid	53. bs4:Octave	96. bs5:All Purpose
11. bs4:Acid 4 Ever	54. bs4:Org Gruz	97. bs5:Buzzed
12. bs4:Analogic	55. bs4:Osc-Kars	98. bs5:DX 1
13. bs4:Asidic Bass	56. bs4:PercoOrgana	99. bs5:DX 2
14. bs4:Bass Hit	57. bs4:Plexy	100. bs5:DX 3
15. bs4:Bass ic	58. bs4:Power Q	101. bs5:Feeder
16. bs4:Bernie Funk	59. bs4:PuLs A'ting	102. bs5:Funkalicious
17. bs4:Big Sync	60. bs4:Q Attack	103. bs5:Home 1
18. bs4:Bondomatic	61. bs4:Q Bass 1	104. bs5:Home 2
19. bs4:Brite Beauty	62. bs4:Q Bass 2	105. bs5:Hybrid
20. bs4:Brolin's 1st	63. bs4:Q Bass 3	106. bs5:Knocker
21. bs4:Buzza	64. bs4:Q Bass 4	107. bs5:Mozambique
22. bs4:Crystal Meth	65. bs4:Q Snap	108. bs5:Mozamdrip
23. bs4:CZ1	66. bs4:Reverend JB	109. bs5:Oh Yea
24. bs4:DB	67. bs4:Ripped3	110. bs5:Organ Bass 1
25. bs4:DB9 1	68. bs4:Saw Sync	111. bs5:Organ Bass 2
26. bs4:DB9 2	69. bs4:Sawz	112. bs5:Perco
27. bs4:Deep Pocket	70. bs4:SE 1	113. bs5:Phlappy
28. bs4:Digi-Punch	71. bs4:SE 2	114. bs5:Pocket
29. bs4:Distorto-TB	72. bs4:SE One	115. bs5:Pure
30. bs4:Examination	73. bs4:Shift	116. bs5:Say What
31. bs4:FM	74. bs4:Simple 3	117. bs5:Slider
32. bs4:FM Sonic	75. bs4:Sobered Up	118. bs5:Smoothy
33. bs4:FP Powerbass	76. bs4:StraytUPjunO	119. bs5:Soft & Hard
34. bs4:HaLLoW !	77. bs4:Sync Echo	120. bs5:Sonics
35. bs4:In the Money	78. bs4:Synth 1	121. bs5:Spitt
36. bs4:JP4 Bass	79. bs4:Synth 2	122. bs5:Spread
37. bs4:Juno	80. bs4:Synth 3	123. bs5:Standard
38. bs4:Luke's Best	81. bs4:Synth 4	124. bs5:Street
39. bs4:Memory Moog	82. bs4:Synth 5	125. bs5:Tapp
40. bs4:Micro	83. bs4:Synth 6	126. bs5:Thickener
41. bs4:Mini 1	84. bs4:Synth 7	127. bs5:Ultimate 1
42. bs4:Mini 2	85. bs4:Synth 8	

## Preset Listing

### User Bank 3, CMPSR Bank 7

- |                      |                      |                       |
|----------------------|----------------------|-----------------------|
| 0. bs5:Ultimate 2    | 43. gtr:Power 2      | 86. str:Sham Wave     |
| 1. bs5:Ultimate 3    | 44. gtr:Rezatronics  | 87. str:SitarTalk     |
| 2. bs5:VP1 1         | 45. gtr:Slippery Joe | 88. str:Sneajy        |
| 3. bs5:VP1 2         | 46. gtr:SlipSly      | 89. str:Solo Quartet  |
| 4. bs5:WetMonica     | 47. gtr:Spy          | 90. str:So Long       |
| 5. gtr:Carlos        | 48. gtr:Steel        | 91. str:SoloOutFront  |
| 6. gtr:Cast Teller   | 49. gtr:Steel Real   | 92. str:Swoon         |
| 7. gtr:Chuckin       | 50. gtr:Strat Wow    | 93. str:Texture       |
| 8. gtr:Cry Babies    | 51. gtr:The 12String | 94. str:The Lonely 1  |
| 9. gtr:Dark Gut      | 52. gtr:ThickPick    | 95. str:Tron          |
| 10. gtr:Distorter-X  | 53. gtr:TwangyNylon  | 96. str:TronStrings   |
| 11. gtr:Dolobroso    | 54. gtr:Waaaa Waaaa  | 97. str:Velo Marcato  |
| 12. gtr:El Mute 1    | 55. gtr:Wah Minor    | 98. str:Victrola      |
| 13. gtr:El Mute 2    | 56. gtr:WahWah Spice | 99. brs:5th Wave      |
| 14. gtr:Electric 1   | 57. str:Abbey'Strngs | 100. brs:Airy Trumpet |
| 15. gtr:Electric 2   | 58. str:Analog       | 101. brs:B4PCM Brass  |
| 16. gtr:ElectricDis  | 59. str:Analogic     | 102. brs:Barry Bones  |
| 17. gtr:EmmTV Crunch | 60. str:ArcotremPizz | 103. brs:Bigga        |
| 18. gtr:FlangnVioWah | 61. str:Big Strings  | 104. brs:Bone         |
| 19. gtr:FullNylon    | 62. str:ChamberGrp   | 105. brs:Brass&Bari   |
| 20. gtr:FunkChunk    | 63. str:DarkMoods    | 106. brs:BrassControl |
| 21. gtr:Heavy Mon    | 64. str:Digital 1    | 107. brs:Brassy       |
| 22. gtr:JangleWah    | 65. str:Digital 2    | 108. brs:Breathy Mute |
| 23. gtr:Jazz         | 66. str:Drews Harp   | 109. brs:ClassicBrass |
| 24. gtr:Jazzed       | 67. str:ExtremeStrng | 110. brs:Da Brasses   |
| 25. gtr:LA Strata    | 68. str:Fortuna      | 111. brs:Dizzy        |
| 26. gtr:Looz 12s     | 69. str:GlissiPizzi  | 112. brs:Don'sTrumpet |
| 27. gtr:MellowElect  | 70. str:Helium       | 113. brs:Ensemble     |
| 28. gtr:Metal Head   | 71. str:Hindookurdoo | 114. brs:Han's E4s    |
| 29. gtr:MutableJazz  | 72. str:Japanman     | 115. brs:Horny        |
| 30. gtr:Mutant Pick  | 73. str:Koto         | 116. brs:Huge Brass   |
| 31. gtr:Mute Gtr vsw | 74. str:Kult E Vatn' | 117. brs:Louis        |
| 32. gtr:Mute-Ted     | 75. str:Many Quarts  | 118. brs:MellowD'Trmp |
| 33. gtr:Mutes        | 76. str:Matrix Synth | 119. brs:Miles        |
| 34. gtr:Nrysty       | 77. str:MeltroniKnbd | 120. brs:Profit 5     |
| 35. gtr:Nrysty       | 78. str:Morocco Feel | 121. brs:RadioHorns   |
| 36. gtr:Nye Lonny    | 79. str:Obie'anna    | 122. brs:Reed & Brass |
| 37. gtr:Nylon        | 80. str:Pizzicati    | 123. brs:S'miles      |
| 38. gtr:Nylon Silk   | 81. str:Pizzicato    | 124. brs:Schwyn 1     |
| 39. gtr:Nylon Vox    | 82. str:Real Matrix  | 125. brs:Section      |
| 40. gtr:Nylonistic   | 83. str:Rich Analogs | 126. brs:SforzadoEnsb |
| 41. gtr:Pantastic    | 84. str:Section      | 127. :default         |
| 42. gtr:Power 1      | 85. str:Sectioned    |                       |

## Preset Listing

### CMPSR Bank 0

- |                      |                      |                       |
|----------------------|----------------------|-----------------------|
| 0. brs:SforzatoSect  | 43. wnd:Harmonica    | 86. vox:Tarzanalien   |
| 1. brs:Soft Trumpet  | 44. wnd:Harmonika    | 87. vox:ThroatRattle  |
| 2. brs:Solo 'Bone    | 45. wnd:Harmony      | 88. vox:Tokenring     |
| 3. brs:Synth Brass   | 46. wnd:Monica Blow  | 89. vox:Trapped       |
| 4. brs:The Ensemble  | 47. wnd:Nuages       | 90. led:Apple Eater   |
| 5. brs:Too Bahhd     | 48. wnd:Oboe 1       | 91. led:Blue Danube   |
| 6. brs:Trmpt+Sect    | 49. wnd:Oboe 2       | 92. led:Cat's Nip     |
| 7. brs:Tromboned     | 50. wnd:Ocarina 1    | 93. led:Dancerama     |
| 8. brs:Trombrass     | 51. wnd:Ocarina 2    | 94. led:Dwiddle       |
| 9. brs:Trump FX etc  | 52. wnd:Pan Flute 1  | 95. led:Ethereosity   |
| 10. brs:Trumpet FX 1 | 53. wnd:Pan Flute 2  | 96. led:Flutter       |
| 11. brs:Trumpet FX 2 | 54. wnd:Pastoral     | 97. led:Freakus       |
| 12. brs:Trumpet FX 3 | 55. wnd:Polka Cheat  | 98. led:Intervalis    |
| 13. brs:Trumpet FX 4 | 56. wnd:S-Sax        | 99. led:JabbaStabba   |
| 14. brs:Trumpet FX 5 | 57. wnd:Sax FX 1 2 3 | 100. led:Laser Larry  |
| 15. brs:Trumpet FX 6 | 58. wnd:Sax Session  | 101. led:Nice Lead    |
| 16. brs:Trumpet FX 7 | 59. wnd:Shenai       | 102. led:Post 90's DM |
| 17. brs:Trumpet Hard | 60. wnd:Synth Flute  | 103. led:Q Snapper    |
| 18. brs:TrumpetMute1 | 61. wnd:T-Sax        | 104. led:Quacker      |
| 19. brs:TrumpetMute2 | 62. wnd:Tenor Phone  | 105. led:RememberWhen |
| 20. wnd:A-SAX        | 63. wnd:Virtuaccord  | 106. led:Sci-Fi B     |
| 21. wnd:AiryClarinet | 64. wnd:WindTrio     | 107. led:Shimmy       |
| 22. wnd:Akkordione   | 65. vox:Ahhs         | 108. led:Shiner       |
| 23. wnd:Alto Saxo    | 66. vox:Arco Breath  | 109. led:SineSurprise |
| 24. wnd:B-Sax        | 67. vox:Common Vox   | 110. led:Smack Bender |
| 25. wnd:B2-Sax       | 68. vox:Dark Angels  | 111. led:Speedronic   |
| 26. wnd:Bari         | 69. vox:Gossamer     | 112. led:Syrian Nod   |
| 27. wnd:Big Top      | 70. vox:Gothic Dream | 113. led:Wandering    |
| 28. wnd:Bottle Blow  | 71. vox:Lo FakeChoir | 114. led:Weezy Lead   |
| 29. wnd:Breathy Flt1 | 72. vox:Lo-Fi Ether  | 115. led:Worm 1       |
| 30. wnd:Breathy Flt2 | 73. vox:Majestic     | 116. led:Worm 2       |
| 31. wnd:Chamber Orch | 74. vox:MauzeWowz    | 117. led:Wormwood     |
| 32. wnd:Chi-Town     | 75. vox:Mist         | 118. led:Wormy Janis  |
| 33. wnd:Clar/Oboe    | 76. vox:Odd Boys     | 119. led:Zaw Za Zah   |
| 34. wnd:Clarinet     | 77. vox:Odd Vox      | 120. wav:Arp          |
| 35. wnd:Clarinette   | 78. vox:Oohs Souls   | 121. wav:Bass Synth   |
| 36. wnd:English Horn | 79. vox:PhasePhlips  | 122. wav:Bell Synth   |
| 37. wnd:Fieldberries | 80. vox:Pop Aahs     | 123. wav:Blipper      |
| 38. wnd:Flt/Obe/Bone | 81. vox:Pop Oohs     | 124. wav:Buzz Saw Syn |
| 39. wnd:Flute        | 82. vox:Slo Lunarvox | 125. wav:Chime        |
| 40. wnd:Full Bari    | 83. vox:Soul Oohs    | 126. wav:CZ Echo      |
| 41. wnd:G's Soprano  | 84. vox:SpiritWorld  | 127. wav:CZ Lead      |
| 42. wnd:Grouch       | 85. vox:SynthSing    |                       |

## Preset Listing

### CMPSR Bank 1

- |                      |                      |                       |
|----------------------|----------------------|-----------------------|
| 0. wav:CZ101 Digi    | 43. wav:VS48         | 86. syn:Razor Edge    |
| 1. wav:Dig Buzz Syn  | 44. wav:Whine        | 87. syn:Rez Synth     |
| 2. wav:Eraser        | 45. wav:Wild Synth   | 88. syn:Rezzy Wave    |
| 3. wav:ES Rag        | 46. syn:5th Brass    | 89. syn:Saw Blip      |
| 4. wav:Fat Attack    | 47. syn:808 Synthax  | 90. syn:Saw Stack     |
| 5. wav:Glass Perc    | 48. syn:Arpitty      | 91. syn:Saw Sweep     |
| 6. wav:Hollow Deep   | 49. syn:BenderPlanet | 92. syn:SawsweepComp  |
| 7. wav:Juno Pulse    | 50. syn:Big Planet   | 93. syn:Skreach Arp   |
| 8. wav:Juno Square   | 51. syn:Blippoid     | 94. syn:Soft Synth    |
| 9. wav:Log Hit       | 52. syn:Brazz        | 95. syn:Synbrasso     |
| 10. wav:M12 Lead     | 53. syn:Buzz Synth   | 96. syn:Synsyn Clav   |
| 11. wav:M12 Sync     | 54. syn:Conglomo     | 97. syn:Syncty        |
| 12. wav:Magic        | 55. syn:CZ Synstring | 98. syn:SynEnsemble   |
| 13. wav:Metal 1      | 56. syn:DigiBuzphaze | 99. syn:Syntax On2    |
| 14. wav:Metal 2      | 57. syn:Digiglass    | 100. syn:Synthall AT  |
| 15. wav:MetalAttack  | 58. syn:DinkedSquare | 101. syn:Synth Brass  |
| 16. wav:Mini Lead    | 59. syn:Ensemblist   | 102. syn:ThinHi Worm  |
| 17. wav:Moog Lead    | 60. syn:Ethnosplint  | 103. syn:ThinTecPulse |
| 18. wav:Narrow Synth | 61. syn:Euro Wave    | 104. syn:Transpander  |
| 19. wav:Overtone Syn | 62. syn:Fat Slide    | 105. syn:VoxNonsense  |
| 20. wav:Perc Axe Syn | 63. syn:Festival     | 106. syn:Wheezy Worm  |
| 21. wav:Pluck Tone   | 64. syn:Gritstrings  | 107. syn:Wildsync     |
| 22. wav:Pop Square   | 65. syn:Heavy        | 108. syn:Z&C Leeder   |
| 23. wav:PPG          | 66. syn:Hi Oct Synth | 109. pad:AirBorn      |
| 24. wav:Pure H       | 67. syn:Hi String    | 110. pad:Classic      |
| 25. wav:PWM          | 68. syn:Hydraine     | 111. pad:Cloud 9      |
| 26. wav:Rast Keys    | 69. syn:Little Tins  | 112. pad:Crystal Beam |
| 27. wav:Rezzy        | 70. syn:LOCoCution   | 113. pad:Dance Chord  |
| 28. wav:Spacey Keys  | 71. syn:Messy        | 114. pad:Dances Well  |
| 29. wav:Square Lead  | 72. syn:Mood Strings | 115. pad:Deep Spacy   |
| 30. wav:SquareAttack | 73. syn:Moog         | 116. pad:Dream Pad    |
| 31. wav:SquareChorus | 74. syn:NarrowEscape | 117. pad:Dreamer      |
| 32. wav:Syn Tone     | 75. syn:Nervous      | 118. pad:Dreamy       |
| 33. wav:Sync 1       | 76. syn:No NerveNet  | 119. pad:Floatatious  |
| 34. wav:Sync 2       | 77. syn:OBX Saws     | 120. pad:GreaT        |
| 35. wav:Sync 3       | 78. syn:OohAhh Vox   | 121. pad:Highway      |
| 36. wav:Sync 4       | 79. syn:P5 Brass     | 122. pad:Infants      |
| 37. wav:Sync 5       | 80. syn:ProfitMargin | 123. pad:JP6 Pad      |
| 38. wav:Sync 6       | 81. syn:Promoseus    | 124. pad:Keyngdom     |
| 39. wav:Synth Wave   | 82. syn:Pulse Pulse  | 125. pad:Kingdom High |
| 40. wav:Synthetic    | 83. syn:Pulsey!      | 126. pad:LOCoMotion   |
| 41. wav:VS Voxwav    | 84. syn:Pweet Square | 127. pad:Meloden      |
| 42. wav:VS37         | 85. syn:Razor        |                       |

## Preset Listing

### CMPSR Bank 2

- |                      |                      |                       |
|----------------------|----------------------|-----------------------|
| 0. pad:MetalBeats    | 43. hit:Brass Hits 3 | 86. sfx:DawnFollows   |
| 1. pad:MovingBells   | 44. hit:Brass Hits 4 | 87. sfx:Full Circle   |
| 2. pad:Pad Life      | 45. hit:Brass Hittas | 88. sfx:Gtr Scrape 1  |
| 3. pad:Paddy         | 46. hit:Brass Hitz   | 89. sfx:Gtr Scrape 2  |
| 4. pad:Paddy Flange  | 47. hit:Da Danzits   | 90. sfx:GtrBodyKnock  |
| 5. pad:Phat Pad      | 48. hit:Dance Hits 1 | 91. sfx:Guitar Pick   |
| 6. pad:Phat Pan      | 49. hit:Dance Hits 2 | 92. sfx>Hello!!!      |
| 7. pad:Pulsation     | 50. hit:Deep Brass   | 93. sfx:Hill          |
| 8. pad:PWM Melopadd  | 51. hit:Dirt Strings | 94. sfx:It's Coming   |
| 9. pad:PWM Rezslide  | 52. hit:Fashion      | 95. sfx:Loop 3        |
| 10. pad:RiffTrippin' | 53. hit:Garagiste    | 96. sfx:NightCrawler  |
| 11. pad:Spinwip Octa | 54. hit:Guitars      | 97. sfx:Oh No its...  |
| 12. pad:SweptAway    | 55. hit:Guitarzits   | 98. sfx:Ohh           |
| 13. pad:Synth Pad    | 56. hit:Orch Fatlow  | 99. sfx:PnoSndBoard   |
| 14. pad:Tunguska     | 57. hit:Organ Hits 1 | 100. sfx:PoppysOnMars |
| 15. pad:Under Pad FM | 58. hit:Organ Hits 2 | 101. sfx:Ritual       |
| 16. pad:Urban Pipe   | 59. hit:Poker        | 102. sfx:StringScrape |
| 17. pad:Whisp        | 60. hit:Punch Prak   | 103. sfx:TarzansDance |
| 18. pad:Xylo Pad     | 61. hit:Sax Scandals | 104. sfx:We Ha        |
| 19. pad:Zoom         | 62. hit:Skweeler     | 105. sfx:WhoaWhoa     |
| 20. pad:Zoom 2000!   | 63. hit:String Hits  | 106. sfx:Woooo!       |
| 21. pad:Zyzzle       | 64. hit:Synth Basses | 107. sfx:Ya Who       |
| 22. bpm:Build Up     | 65. hit:Vox Grunts   | 108. nse:Carrion      |
| 23. bpm:Choice 1     | 66. hit:Vox Hits 1   | 109. nse:Dust Bunny   |
| 24. bpm:Deep Blue    | 67. hit:Vox Hits 2   | 110. nse:Jungle Pump  |
| 25. bpm:DXBeat       | 68. hit:Vox Hitties  | 111. nse:Lift Off     |
| 26. bpm:Electronica  | 69. orc:Brasso       | 112. nse:Pink         |
| 27. bpm:Free Love    | 70. orc:Combo        | 113. nse:StopThat!    |
| 28. bpm:Freeze       | 71. orc:Fanfare      | 114. nse:Vinyl        |
| 29. bpm:Industry Vox | 72. orc:Orch w/Perc  | 115. nse:White        |
| 30. bpm:Move Clock ! | 73. orc:Orchestra    | 116. scr:Cuts & Hats  |
| 31. bpm:Something    | 74. orc:PnoBrsStrg   | 117. scr:DissedSkrach |
| 32. bpm:The Man      | 75. orc:Str/Brs/Wd1  | 118. scr:Dogs'nHeat   |
| 33. bpm:Waver        | 76. orc:Str/Brs/Wd2  | 119. scr:From Vinyl   |
| 34. hit:Alta Trumplt | 77. orc:Str/Brs/Wd3  | 120. scr:Monsta Slips |
| 35. hit:Bass Slips   | 78. sfx:30           | 121. scr:Outa Sqaced  |
| 36. hit:Basses       | 79. sfx:7O's Phazzy  | 122. scr:Play It      |
| 37. hit:Big Band     | 80. sfx:AKS Vinyl    | 123. scr:PuppyAlarm   |
| 38. hit:Biggy Brass  | 81. sfx:Bad Bells    | 124. scr:Scratches 1  |
| 39. hit:Brass Batz   | 82. sfx:Bass Scrape  | 125. scr:Scratches 2  |
| 40. hit:Brass Bite   | 83. sfx:Bass Thud    | 126. scr:Skrach Dis   |
| 41. hit:Brass Hits 1 | 84. sfx:Crickets     | 127. scr:Vinyl Set    |
| 42. hit:Brass Hits 2 | 85. sfx:Crowd        |                       |

## Preset Listing

### CMPSR Bank 3

- |                      |                      |                       |
|----------------------|----------------------|-----------------------|
| 0. prc:Acidphone     | 43. prc:Soft Vibes   | 86. kit:ClubVinyl     |
| 1. prc:Agogos        | 44. prc:Stuff 1      | 87. kit:CookUsAHit    |
| 2. prc:Bell Tree 1   | 45. prc:Stuff 2      | 88. kit:Dance 1       |
| 3. prc:Bell Tree 2   | 46. prc:Tams 1       | 89. kit:Dance 2       |
| 4. prc:Bells1        | 47. prc:Tams 2       | 90. kit:DearLyBeEmuD  |
| 5. prc:Bells2        | 48. prc:Timbs 1      | 91. kit:Dee and Be 1  |
| 6. prc:Blocks1       | 49. prc:Timbs 2      | 92. kit:Dee and Be 2  |
| 7. prc:Blocks2       | 50. prc:Timpani      | 93. kit:DeepBooty     |
| 8. prc:Borneo        | 51. prc:Toms 1       | 94. kit:Disenegrate   |
| 9. prc:C Bells       | 52. prc:Toms 2       | 95. kit:Drum 3        |
| 10. prc:Cargo        | 53. prc:TV Spy Vibes | 96. kit:Drum/Bass 1   |
| 11. prc:Claps 1      | 54. prc:Velo Vibes   | 97. kit:Drum/Bass 2   |
| 12. prc:Claps 2      | 55. prc:Vibraslap    | 98. kit:Drum/Bass 3   |
| 13. prc:Claves       | 56. prc:Village      | 99. kit:Drum/Bass 4   |
| 14. prc:Congas1      | 57. prc:WoodHitsBell | 100. kit:Drum/Bass 5  |
| 15. prc:Congas2      | 58. prc:Xylophone    | 101. kit:Drum/Bass 6  |
| 16. prc:Cyms 1       | 59. kit:424          | 102. kit:DrumBuzza    |
| 17. prc:Cyms 2       | 60. kit:Kit 02       | 103. kit:For Real     |
| 18. prc:Electro      | 61. kit:Kit 03       | 104. kit:Gate Dances  |
| 19. prc:Flexi        | 62. kit:Kit 04       | 105. kit:Gett..OutPt2 |
| 20. prc:Guiros       | 63. kit:Kit 05       | 106. kit:GritKitt     |
| 21. prc:Hard Vibes   | 64. kit:Kit 06       | 107. kit:HatAttack    |
| 22. prc:Hats 1       | 65. kit:Kit 07       | 108. kit:Hot Swing    |
| 23. prc:Hats 2       | 66. kit:Kit 08       | 109. kit:Jams         |
| 24. prc:Hi Bell      | 67. kit:Kit 09       | 110. kit:Jazz Quartet |
| 25. prc:Kalimba      | 68. kit:Kit 10       | 111. kit:Jazz Trio    |
| 26. prc:Kix 1        | 69. kit:Kit 11       | 112. kit:OnTheTip     |
| 27. prc:Kix 2        | 70. kit:Kit 12       | 113. kit:Phased DrumR |
| 28. prc:Log On       | 71. kit:Kit 13       | 114. kit:Phattasassin |
| 29. prc:Maracca      | 72. kit:Kit 14       | 115. kit:R&B Flava    |
| 30. prc:Marimba      | 73. kit:Kit 15       | 116. kit:Shag         |
| 31. prc:Miscellany   | 74. kit:Kit 16       | 117. kit:Skin Drums   |
| 32. prc:Orchestral   | 75. kit:Kit 17       | 118. kit:Smackers     |
| 33. prc:Perky Dance  | 76. kit:Kit 18       | 119. kit:SounDfacTory |
| 34. prc:PerkyThings1 | 77. kit:Kit 19       | 120. kit:Speed Garage |
| 35. prc:PerkyThings2 | 78. kit:Kit 20       | 121. kit:Subversive   |
| 36. prc:Plexitone    | 79. kit:Acoustic 2   | 122. kit:Swing Hop 1  |
| 37. prc:Progress     | 80. kit:All Niter    | 123. kit:Swing Hop 2  |
| 38. prc:Shakers      | 81. kit:Berzerker    | 124. kit:Swing Hop 3  |
| 39. prc:SiameseCats  | 82. kit:BMF          | 125. kit:This & That  |
| 40. prc:Snaps        | 83. kit:Booster      | 126. kit:Tribal House |
| 41. prc:Snares 1     | 84. kit:ClassicHouse | 127. kit:Werzerker    |
| 42. prc:Snares 2     | 85. kit:Clean R&B    |                       |

# Instrument Listing

This section lists the raw instruments in the Composer ROM set. Instruments can be either multisamples or single samples.

0. None	42. org:JX Organ	84. bas:Bass ic
1. pno:Stereo Grand	43. org:Tone Organ	85. bas:Stereo VP1 1
2. pno:Grand Piano2	44. org:Simple Organ	86. bas:VP1 2
3. pno:Techno Piano	45. org:Org Lite	87. bas:FM
4. epo:Med Rhodes	46. org:Nod	88. bas:DB
5. epo:Hard Rhodes	47. org:Full Organ	89. bas:Memory Moog
6. epo:DynoRhodesMd	48. org:Synth Organ	90. bas:Moog Tri
7. epo:DynoRhodesHd	49. org:Breathy	91. bas:Moog Basic
8. epo:Hard Tine	50. org:Dance	92. bas:Mini 1
9. epo:WurlitzerSft	51. org:Synth Cheeze	93. bas:Mini 2
10. epo:Wurlitzer Hd	52. org:Oddd Organ	94. bas:Mini 3
11. epo:FM El Piano	53. sub:Bass Hum	95. bas:Mini 4
12. epo:Tine EP	54. sub:Below Sub	96. bas:Micro Moog
13. epo:Pretty EP	55. sub:Super Sub	97. bas:Not So Mini
14. epo:Classic EP	56. sub:SE Sub 1	98. bas:Sawz
15. epo:FM EP 1	57. sub:SE Sub 2	99. bas:Lowness
16. epo:FM EP 2	58. sub:SE Sub 3	100. bas:Ice
17. epo:Clavinet 1	59. sub:SE Sub 4	101. bas:Analow
18. epo:Clavinet 2	60. sub:SE Sub 5	102. bas:Fat Sunbass
19. epo:EP Roll 1	61. sub:SE Sub 6	103. bas:Analogic
20. epo:EP Roll 2	62. sub:SE Sub 7	104. bas:Q Bass 1
21. epo:EP Roll 3	63. sub:Subtle Bass	105. bas:Q Bass 2
22. epo:EP Fog	64. sub:Moog 1	106. bas:Q Bass 3
23. org:B3DistLowSlo	65. sub:Moog 2	107. bas:Planet Bass
24. org:B3 Dist Fast	66. sub:Q Attack	108. bas:2600
25. org:B3 Hi Slow	67. sub:Juno	109. bas:Synth 1
26. org:B3 Hi Fast	68. sub:Complex	110. bas:Synth 2
27. org:B3 Perc 3rd	69. sub:Full Octave	111. bas:Synth 3
28. org:B3OrganWave1	70. sub:Deep Pocket	112. bas:Synth 4
29. org:B3OrganWave2	71. sub:JP4 Bass	113. bas:Synth 5
30. org:Gritty B Wav	72. sub:Bass Hit	114. bas:Synth 6
31. org:Farfisa 1	73. bas:Acid	115. bas:Synth 7
32. org:Farfisa 2	74. bas:TB 1	116. bas:Synth 8
33. org:Farfisa 3	75. bas:TB 2	117. bas:Synth 9
34. org:Vox 1	76. bas:TB 3	118. bas:Synth 10
35. org:Vox 2	77. bas:TB 4	119. bas:CZ101
36. org:Pipe Organ	78. bas:Saw Sync	120. bas:PPG Hybrid
37. org:Drawbar	79. bas:Big Sync	121. bas:Ultimate 1
38. org:Perc Organ	80. bas:Power Q	122. bas:Ultimate 2
39. org:Day	81. bas:Buzzed	123. bas:DB9 1
40. org:Disco	82. bas:SE 1	124. bas:DB9 2
41. org:DX Organ	83. bas:SE 2	125. bas:Phlappy

## Instrument Listing

126.	bas:Pocket	170.	bas:Upright 2	214.	str:Pizzicato
127.	bas:Sonics	171.	gtr:Nylon	215.	str:Tron
128.	bas:Perco	172.	gtr:Steel	216.	str:Analog
129.	bas:Spitt	173.	gtr:Jazz	217.	str:Matrix Synth
130.	bas:Tapp	174.	gtr:Electric 1	218.	str:Digital
131.	bas:DX 1	175.	gtr:Electric 2	219.	str:Sham Wave
132.	bas:DX 2	176.	gtr:El Mute 1	220.	str:Koto
133.	bas:DX 3	177.	gtr:El Mute 2	221.	str:Sitar
134.	bas:Finger 1	178.	gtr:Mutes	222.	brs:Soft Trumpet
135.	bas:Finger 2	179.	gtr:ElectricDis	223.	brs:Hard Trumpet
136.	bas:Picked	180.	gtr:Power 1	224.	brs:MuteTrumpet1
137.	bas:Slap 1	181.	gtr:Power 2	225.	brs:MuteTrumpet2
138.	bas:Slap 2	182.	gtr:Power Hit	226.	brs:Trombone
139.	bas:Slap 3	183.	gtr:Synth Axe	227.	brs:Tuba
140.	bas:Slap 4	184.	gtr:Gtr Hi Chuck	228.	brs:Trumpet FX 1
141.	bas:Slap 5	185.	gtr:Gtr Up Strk	229.	brs:Trumpet FX 2
142.	bas:Pop	186.	gtr:Gtr Scratch	230.	brs:Trumpet FX 3
143.	bas:Fretless 1	187.	gtr:Muted String	231.	brs:Trumpet FX 4
144.	bas:Fretless 2	188.	gtr:Klean Chuck	232.	brs:Trumpet FX 5
145.	bas:Fretless 3	189.	gtr:Jangle	233.	brs:Trumpet FX 6
146.	bas:Fretless 4	190.	gtr:Riff 1	234.	brs:Trumpet FX 7
147.	bas:Fretless 5	191.	gtr:Riff 2	235.	brs:Alt TptLoops
148.	bas:Fretless 6	192.	gtr:Riff 3	236.	brs:Ensemble
149.	bas:EP 1	193.	gtr:Funky Hit	237.	brs:Section
150.	bas:EP 2	194.	gtr:Another Hit	238.	brs:Brass Hits 1
151.	bas:EP 3	195.	gtr:Jazz Riff 1	239.	brs:Brass Hits 2
152.	bas:Home 1	196.	gtr:Jazz Riff 2	240.	brs:ClassicBrass
153.	bas:Home 2	197.	gtr:Jazz Riff 3	241.	brs:Moog
154.	bas:Street	198.	gtr:Slide Riff	242.	brs:Prophet 5
155.	bas:Pure	199.	gtr:Pop Slide	243.	brs:5th Wave
156.	bas:Fing&Harms 1	200.	gtr:Pop	244.	wnd:Ocarina
157.	bas:Fing&Harms 2	201.	gtr:Chord Chuck	245.	wnd:Pan Flute
158.	bas:All Purpose	202.	gtr:Slide	246.	wnd:Flute
159.	bas:Standard	203.	gtr:Sad Guitar	247.	wnd:Synth Flute
160.	bas:Gruzzly Pop	204.	gtr:Wawa 1	248.	wnd:Clarinet
161.	bas:Pop Slide 1	205.	gtr:Wawa 2	249.	wnd:Oboe
162.	bas:Pop Slide 2	206.	gtr:Wawa 3	250.	wnd:English Horn
163.	bas:Pop Slide 3	207.	gtr:Wawa 4	251.	wnd:Soprano Sax
164.	bas:Pop Slide 4	208.	gtr:Wawa 5	252.	wnd:Alto Sax
165.	bas:Organ Bass 1	209.	gtr:Wawa 6	253.	wnd:Tenor Sax
166.	bas:Organ Bass 2	210.	gtr:Heavy Hit	254.	wnd:Sax Wave
167.	bas:Acoustic	211.	gtr:Heavy Dive	255.	wnd:Bari Sax 1
168.	bas:Harmonics	212.	str:Solo Quartet	256.	wnd:Bari Sax 2
169.	bas:Upright 1	213.	str:Section	257.	wnd:Sax Riff



## Instrument Listing

258.	wnd:Sax FX 1	302.	wav:Moog Lead	346.	wav:Worm Lead 3
259.	wnd:Sax FX 2	303.	wav:Fretless	347.	wav:Worm Lead 4
260.	wnd:Sax FX 3	304.	wav:Magic	348.	wav:Worm Lead 5
261.	wnd:Bottle Blow	305.	wav:ES Rag	349.	wav:Worm Lead 6
262.	wnd:Shenai	306.	wav:Chime	350.	wav:Sinusoid
263.	wnd:Harmonica	307.	wav:Pure H2O	351.	wav:Sine Wave 2
264.	vox:Pop Oohs	308.	wav:Log Hit	352.	wav:Sine Squared
265.	vox:Pop Aahs	309.	wav:Pluck Tone	353.	wav:Sine Inv Sqr
266.	vox:Soul Oohs	310.	wav:Hollow Deep	354.	wav:Sine Cubed
267.	vox:Breathy 1	311.	wav:Bell Synth	355.	wav:SineInvCubed
268.	vox:Breathy 2	312.	wav:Syn Tone	356.	wav:Triangle
269.	vox:Very Breathy	313.	wav:Perc Axe Syn	357.	wav:Square
270.	vox:VS Wave	314.	wav:Whine	358.	wav:Sawtooth 1
271.	vox:Choir Wave	315.	wav:CZ101 Digi	359.	wav:Sawtooth 2
272.	vox:Jax Breath	316.	wav:CZ Lead	360.	wav:Pulse Plus
273.	vox:Vox Synth	317.	wav:CZ Echo Lead	361.	wav:Pulse 75%
274.	vox:Orch Vox	318.	wav:Wild Synth	362.	wav:Pulse 90%
275.	vox:CMI Breath	319.	wav:Spacey Keys	363.	wav:Pulse 94%
276.	vox:Tarzana	320.	wav:Dig Buzz Syn	364.	wav:Pulse 96%
277.	vox:Gothic	321.	wav:Rast Keys	365.	wav:Pulse 98%
278.	vox:Oow	322.	wav:Narrow Synth	366.	wav:FourOctaves
279.	vox:Comon Vox	323.	wav:Fat Attack	367.	wav:Low Odds
280.	vox:Odd Vox	324.	wav:Synthetic	368.	wav:Low Evens
281.	vox:Mmm Hmm	325.	wav:Overtone Syn	369.	syn:Saw Stack
282.	vox:Ah Hah	326.	wav:Buzz Saw Syn	370.	syn:Moog 55
283.	wav:PWM	327.	wav:Blipper	371.	syn:Buzz Synth
284.	wav:Eraser	328.	wav:Full Synth	372.	syn:Bender
285.	wav:M12 Sync	329.	wav:Bass Synth	373.	syn:Soft Synth
286.	wav:Stereo Synth	330.	wav:Mini Lead	374.	syn:Hi String
287.	wav:FeedbackWave	331.	wav:M12 Lead	375.	syn:OBX Saws
288.	wav:MetalAttack	332.	wav:Sync 1	376.	syn:Big Planet
289.	wav:Arp 1	333.	wav:Sync 2	377.	syn:Saw Sweep
290.	wav:Arp 2	334.	wav:Sync 3	378.	wav:Juno Pulse
291.	wav:Arp 3	335.	wav:Sync 4	379.	syn:CZ Synstring
292.	wav:ARP Lead	336.	wav:Sync 5	380.	syn:SynEnsemble
293.	wav:Metal 1	337.	wav:Sync 6	381.	syn:Rezyzy Wave
294.	wav:Metal 2	338.	wav:Pop Square	382.	syn:Heavy
295.	wav:Metal 3	339.	wav:Juno Square	383.	syn:Rez Synth
296.	wav:PPG	340.	wav:SquareAttack	384.	syn:Hi Oct Synth
297.	wav:VS Vox	341.	wav:Square Lead	385.	syn:Mood Strings
298.	wav:VS37	342.	wav:SquareChorus	386.	syn:Brazz
299.	wav:VS48	343.	wav:Juno Pulse	387.	syn:Synth Brass
300.	wav:Rezyzy	344.	wav:Worm Lead 1	388.	syn:P5 Brass
301.	wav:Glass Perc	345.	wav:Worm Lead 2	389.	pad:JP6 Pad

## Instrument Listing

390.	pad:Dreamy	434.	hit:Brass Hit 9	478.	hit:Dance Hit 11
391.	pad:Phat Pad	435.	hit:Brass Hit 10	479.	hit:Dance Hit 12
392.	pad:Synth Pad	436.	hit:Brass Hit 11	480.	hit:Dance Hit 13
393.	pad:Pad Life	437.	hit:Brass Hit 12	481.	hit:Dance Hit 14
394.	pad:Classic	438.	hit:Brass Hit 13	482.	hit:Dance Hit 15
395.	pad:Dream Pad	439.	hit:Brass Hit 14	483.	hit:Dance Hit 16
396.	pad:Paddy	440.	hit:Brass Hit 15	484.	hit:Dance Hit 17
397.	pad:Dance Chord	441.	hit:Brass Hit 16	485.	hit:Dance Hit 18
398.	pad:Zoom	442.	hit:Brass Hit 17	486.	hit:Dance Hit 19
399.	pad:Keyngdom	443.	hit:Brass Hit 18	487.	hit:Dance Hit 20
400.	pad:Under Pad FM	444.	hit:Brass Hit 19	488.	hit:Dance Hit 21
401.	pad:Xylo Pad	445.	hit:Brass Hit 20	489.	hit:Dance Hit 22
402.	hit:Organ Hits 1	446.	hit:Boink	490.	hit:Dance Hit 23
403.	hit:Organ Hits 2	447.	hit:Fat Low Syn	491.	hit:Dance Hit 24
404.	hit:Basses	448.	hit:Hit On It	492.	hit:Dance Hit 25
405.	hit:Synth Basses	449.	hit:Jazz Short	493.	hit:Dance Hit 26
406.	hit:Guitars	450.	hit:Blamp Hit	494.	hit:Dance Hit 27
407.	hit:String Hits	451.	hit:Blipp	495.	sfx:Q Snap
408.	hit:Brass Hits 1	452.	hit:Buzz Blip	496.	sfx:Bass Scrape
409.	hit:Brass Hits 2	453.	hit:Game Hit	497.	sfx:Bass Thud
410.	hit:Vox Hits 1	454.	hit:Diss Hit	498.	sfx:Gtr Scrape 1
411.	hit:Vox Hits 2	455.	hit:Bell Hit	499.	sfx:Gtr Scrape 2
412.	hit:Dance Hits 1	456.	hit:Klang Hit	500.	sfx:Guitar Pick
413.	hit:Dance Hits 2	457.	hit:Metal Hit	501.	sfx:GtrBodyKnock
414.	hit:Organ Hit 1	458.	hit:Slinky Q Hit	502.	sfx:StringScrape
415.	hit:Organ Hit 2	459.	hit:Space Whip	503.	sfx:Tpt Breath
416.	hit:Organ Hit 3	460.	hit:Short Quack	504.	sfx:Alto Breath
417.	hit:Organ Hit 4	461.	hit:Quack Ahhh	505.	sfx:PnoSndBoard
418.	hit:Organ Hit 5	462.	hit:Bowser Bark	506.	sfx:Loop 1
419.	hit:Organ Hit 6	463.	hit:Chiffin	507.	sfx:Loop 2
420.	hit:Bass Stab 1	464.	hit:Ripped	508.	sfx:Loop 3
421.	hit:Bass Stab 2	465.	hit:Drum Stab	509.	sfx:Loop 4
422.	hit:Bass Slide	466.	hit:Hip Hop Hit	510.	sfx:Loop 5
423.	hit:Orch C3	467.	hit:Drum Stall	511.	sfx:Loop 6
424.	hit:UnisonString	468.	hit:Dance Hit 1	512.	sfx:Loop 7
425.	hit:Unison Brass	469.	hit:Dance Hit 2	513.	sfx:Loop 8
426.	hit:Brass Hit 1	470.	hit:Dance Hit 3	514.	sfx:Crickets
427.	hit:Brass Hit 2	471.	hit:Dance Hit 4	515.	sfx:Crowd
428.	hit:Brass Hit 3	472.	hit:Dance Hit 5	516.	sfx:Music Crowd
429.	hit:Brass Hit 4	473.	hit:Dance Hit 6	517.	sfx:Lawn Mower
430.	hit:Brass Hit 5	474.	hit:Dance Hit 7	518.	sfx:Riff Trip
431.	hit:Brass Hit 6	475.	hit:Dance Hit 8	519.	sfx:Cyber Pan
432.	hit:Brass Hit 7	476.	hit:Dance Hit 9	520.	sfx:Groove Thing
433.	hit:Brass Hit 8	477.	hit:Dance Hit 10	521.	sfx:Science

## Instrument Listing



*The Percussion  
Instruments on this page are  
single sample instruments  
stretched across the entire  
keyboard.*

522.	sfx:Sci Fi	566.	scr:Classic Tape	610.	prc:Cymbals 2
523.	sfx:Synth Siren	567.	scr:Scratch Out!	611.	prc:Shakers
524.	sfx:Space Wiggle	568.	scr:Punch It	612.	prc:Maracas
525.	sfx:Sqweal Rev	569.	scr:Ork Scratch	613.	prc:Bells 1
526.	nse:White 1	570.	scr:Tape Stop	614.	prc:Bells 2
527.	nse:No Pitch	571.	scr:Zip Scratch	615.	prc:Blocks 1
528.	nse:Pink 1	572.	scr:Tape Pull	616.	prc:Blocks 2
529.	nse:Pink 2	573.	scr:Wild Scratch	617.	prc:Tams 1
530.	nse:Spectrum 1	574.	scr:Up Scratch	618.	prc:Tams 2
531.	nse:Spectrum 2	575.	scr:Scratch Away	619.	prc:Claps 1
532.	nse:Spectrum 3	576.	scr:Frenzy	620.	prc:Claps 2
533.	nse:Spectrum 4	577.	scr:KickScratch1	621.	prc:Snaps
534.	nse:Air	578.	scr:KickScratch2	622.	prc:Claves
535.	nse:High Pass	579.	scr:SnareScratch	623.	prc:Vibraslap
536.	nse:Excited HP	580.	scr:Tite Scratch	624.	prc:Guero Roll
537.	nse:IP Wave	581.	scr:Scratch Up	625.	prc:Cowbells
538.	nse:Metal Noise	582.	scr:Barker	626.	prc:Agogos
539.	nse:Vinyl 1	583.	scr:Plunger	627.	prc:Carillon
540.	nse:Vinyl 2	584.	scr:Skipper	628.	prc:Misc Perc 1
541.	nse:Vinyl 3	585.	scr:Fast Scratch	629.	prc:Misc Perc 2
542.	nse:Vinyl 4	586.	prc:Soft Vibes	630.	kit:Acoustic 1&2
543.	nse:Vinyl 1 NTF	587.	prc:Hard Vibes	631.	kit:Acoustic 3&4
544.	nse:Vinyl 2 NTF	588.	prc:Xylophone	632.	kit:Dance Set
545.	nse:Vinyl 3 NTF	589.	prc:Marimba	633.	kit:Dance Perc
546.	nse:Vinyl 4 NTF	590.	prc:Kalimba	634.	kit:Kit 1
547.	nse:CMI Hot Air	591.	prc:Plexitone	635.	kit:Kit 2
548.	nse:L9000 Noise	592.	prc:Orchestral	636.	kit:Kit 3
549.	scr:Scratches 1	593.	prc:Miscellany	637.	kit:Kit 4
550.	scr:Scratches 2	594.	prc:FM Log Drum	638.	kit:Kit 5
551.	scr:Vinyl Set	595.	prc:SynDrum Wave	639.	kit:Kit 6
552.	scr:Stalled	596.	prc:X-ite Tick	640.	kit:Kit 7
553.	scr:Wind Down 1	597.	prc:Kicks 1	641.	kit:Kit 8
554.	scr:Wind Down 2	598.	prc:Kicks 2	642.	kit:Kit 9
555.	scr:Draggit	599.	prc:Snare 1	643.	kit:Kit 10
556.	scr:MC Scratch	600.	prc:Snare 2	644.	kit:Kit 11
557.	scr:Fun Scratch	601.	prc:Toms 1	645.	kit:Kit 12
558.	scr:SSSSystem 1	602.	prc:Toms 2	646.	kit:Kit 13
559.	scr:SSSSystem 2	603.	prc:Timbales 1	647.	kit:Kit 14
560.	scr:Scratch Here	604.	prc:Timbales 2	648.	kit:Kit 15
561.	scr:Scratch On I	605.	prc:Congas etc 1	649.	kit:Kit 16
562.	scr:Scratch Diss	606.	prc:Congas etc 2	650.	kit:GM Dance
563.	scr:Bow Wow	607.	prc:Hats 1	651.	kit:Swing Hop
564.	scr:Diva Scratch	608.	prc:Hats 2	652.	kit:Swing Hop 2
565.	scr:OrganBlipper	609.	prc:Cymbals 1	653.	kit:Swing Hop 3

## Instrument Listing



### The Percussion

Instruments on this page are  
single sample instruments  
stretched across the entire  
keyboard.

654.	prc:Kick 1	698.	prc:Kick 45	742.	prc:Snare 18
655.	prc:Kick 2	699.	prc:Kick 46	743.	prc:Snare 19
656.	prc:Kick 3	700.	prc:Kick 47	744.	prc:Snare 20
657.	prc:Kick 4	701.	prc:Kick 48	745.	prc:Snare 21
658.	prc:Kick 5	702.	prc:Kick 49	746.	prc:Snare 22
659.	prc:Kick 6	703.	prc:Kick 50	747.	prc:Snare 23
660.	prc:Kick 7	704.	prc:Kick 51	748.	prc:Snare 24
661.	prc:Kick 8	705.	prc:Kick 52	749.	prc:Snare 25
662.	prc:Kick 9	706.	prc:Kick 53	750.	prc:Snare 26
663.	prc:Kick 10	707.	prc:Kick 54	751.	prc:Snare 27
664.	prc:Kick 11	708.	prc:Kick 55	752.	prc:Snare 28
665.	prc:Kick 12	709.	prc:Kick 56	753.	prc:Snare 29
666.	prc:Kick 13	710.	prc:Kick 57	754.	prc:Snare 30
667.	prc:Kick 14	711.	prc:Kick 58	755.	prc:Snare 31
668.	prc:Kick 15	712.	prc:Kick 59	756.	prc:Snare 32
669.	prc:Kick 16	713.	prc:Kick 60	757.	prc:Snare 33
670.	prc:Kick 17	714.	prc:Kick 61	758.	prc:Snare 34
671.	prc:Kick 18	715.	prc:Kick 62	759.	prc:Snare 35
672.	prc:Kick 19	716.	prc:Kick 63	760.	prc:Snare 36
673.	prc:Kick 20	717.	prc:Kick 64	761.	prc:Snare 37
674.	prc:Kick 21	718.	prc:Kick 65	762.	prc:Snare 38
675.	prc:Kick 22	719.	prc:Kick 66	763.	prc:Snare 39
676.	prc:Kick 23	720.	prc:Kick 67	764.	prc:Snare 40
677.	prc:Kick 24	721.	prc:Kick 68	765.	prc:Snare 41
678.	prc:Kick 25	722.	prc:Kick 69	766.	prc:Snare 42
679.	prc:Kick 26	723.	prc:Kick 70	767.	prc:Snare 43
680.	prc:Kick 27	724.	prc:Kick 71	768.	prc:Snare 44
681.	prc:Kick 28	725.	prc:Snare 1	769.	prc:Snare 45
682.	prc:Kick 29	726.	prc:Snare 2	770.	prc:Snare 46
683.	prc:Kick 30	727.	prc:Snare 3	771.	prc:Snare 47
684.	prc:Kick 31	728.	prc:Snare 4	772.	prc:Snare 48
685.	prc:Kick 32	729.	prc:Snare 5	773.	prc:Snare 49
686.	prc:Kick 33	730.	prc:Snare 6	774.	prc:Snare 50
687.	prc:Kick 34	731.	prc:Snare 7	775.	prc:Snare 51
688.	prc:Kick 35	732.	prc:Snare 8	776.	prc:Snare 52
689.	prc:Kick 36	733.	prc:Snare 9	777.	prc:Snare 53
690.	prc:Kick 37	734.	prc:Snare 10	778.	prc:Snare 54
691.	prc:Kick 38	735.	prc:Snare 11	779.	prc:Snare 55
692.	prc:Kick 39	736.	prc:Snare 12	780.	prc:Snare 56
693.	prc:Kick 40	737.	prc:Snare 13	781.	prc:Snare 57
694.	prc:Kick 41	738.	prc:Snare 14	782.	prc:Snare 58
695.	prc:Kick 42	739.	prc:Snare 15	783.	prc:Snare 59
696.	prc:Kick 43	740.	prc:Snare 16	784.	prc:Snare 60
697.	prc:Kick 44	741.	prc:Snare 17	785.	prc:Snare 61

## Instrument Listing



*The Percussion  
Instruments on this page are  
single sample instruments  
stretched across the entire  
keyboard.*

786.	prc:Snare 62	830.	prc:Snare 106	874.	prc:Tom 13
787.	prc:Snare 63	831.	prc:Snare 107	875.	prc:Tom 14
788.	prc:Snare 64	832.	prc:Snare 108	876.	prc:Tom 15
789.	prc:Snare 65	833.	prc:Snare 109	877.	prc:Tom 16
790.	prc:Snare 66	834.	prc:Snare 110	878.	prc:Tom 17
791.	prc:Snare 67	835.	prc:Snare 111	879.	prc:Tom 18
792.	prc:Snare 68	836.	prc:Snare 112	880.	prc:Tom 19
793.	prc:Snare 69	837.	prc:Snare 113	881.	prc:Tom 20
794.	prc:Snare 70	838.	prc:Snare 114	882.	prc:Tom 21
795.	prc:Snare 71	839.	prc:Snare 115	883.	prc:Tom 22
796.	prc:Snare 72	840.	prc:Snare 116	884.	prc:Tom 23
797.	prc:Snare 73	841.	prc:Snare 117	885.	prc:Tom 24
798.	prc:Snare 74	842.	prc:Snare 118	886.	prc:Tom 25
799.	prc:Snare 75	843.	prc:Snare 119	887.	prc:Tom 26
800.	prc:Snare 76	844.	prc:Snare 120	888.	prc:Tom 27
801.	prc:Snare 77	845.	prc:Snare 121	889.	prc:Tom 28
802.	prc:Snare 78	846.	prc:Snare 122	890.	prc:Tom 29
803.	prc:Snare 79	847.	prc:Snare 123	891.	prc:Tom 30
804.	prc:Snare 80	848.	prc:Snare 124	892.	prc:Tom 31
805.	prc:Snare 81	849.	prc:Snare 125	893.	prc:Conga 1
806.	prc:Snare 82	850.	prc:Snare 126	894.	prc:Conga 2
807.	prc:Snare 83	851.	prc:Snare 127	895.	prc:Conga 3
808.	prc:Snare 84	852.	prc:Snare 128	896.	prc:Conga 4
809.	prc:Snare 85	853.	prc:Snare 129	897.	prc:Conga 5
810.	prc:Snare 86	854.	prc:Snare 130	898.	prc:Conga 6
811.	prc:Snare 87	855.	prc:Snare 131	899.	prc:Conga 7
812.	prc:Snare 88	856.	prc:Timbale 1	900.	prc:Conga 8
813.	prc:Snare 89	857.	prc:Timbale 2	901.	prc:Conga 9
814.	prc:Snare 90	858.	prc:Timbale 3	902.	prc:Conga 10
815.	prc:Snare 91	859.	prc:Timbale 4	903.	prc:Conga 11
816.	prc:Snare 92	860.	prc:Timbale 5	904.	prc:Conga 12
817.	prc:Snare 93	861.	prc:Timbale 6	905.	prc:Conga 13
818.	prc:Snare 94	862.	prc:Tom 1	906.	prc:Conga 14
819.	prc:Snare 95	863.	prc:Tom 2	907.	prc:Conga 15
820.	prc:Snare 96	864.	prc:Tom 3	908.	prc:Conga 16
821.	prc:Snare 97	865.	prc:Tom 4	909.	prc:Conga 17
822.	prc:Snare 98	866.	prc:Tom 5	910.	prc:Conga 18
823.	prc:Snare 99	867.	prc:Tom 6	911.	prc:Conga 19
824.	prc:Snare 100	868.	prc:Tom 7	912.	prc:Conga 20
825.	prc:Snare 101	869.	prc:Tom 8	913.	prc:Conga 21
826.	prc:Snare 102	870.	prc:Tom 9	914.	prc:Hat 1
827.	prc:Snare 103	871.	prc:Tom 10	915.	prc:Hat 2
828.	prc:Snare 104	872.	prc:Tom 11	916.	prc:Hat 3
829.	prc:Snare 105	873.	prc:Tom 12	917.	prc:Hat 4

## Instrument Listing



### The Percussion

Instruments on this page are  
single sample instruments  
stretched across the entire  
keyboard.

918.	prc:Hat 5	962.	prc:Hat 49	1006.	prc:Hat 93
919.	prc:Hat 6	963.	prc:Hat 50	1007.	prc:Hat 94
920.	prc:Hat 7	964.	prc:Hat 51	1008.	prc:Hat 95
921.	prc:Hat 8	965.	prc:Hat 52	1009.	prc:Cymbal 1
922.	prc:Hat 9	966.	prc:Hat 53	1010.	prc:Cymbal 2
923.	prc:Hat 10	967.	prc:Hat 54	1011.	prc:Cymbal 3
924.	prc:Hat 11	968.	prc:Hat 55	1012.	prc:Cymbal 4
925.	prc:Hat 12	969.	prc:Hat 56	1013.	prc:Cymbal 5
926.	prc:Hat 13	970.	prc:Hat 57	1014.	prc:Cymbal 6
927.	prc:Hat 14	971.	prc:Hat 58	1015.	prc:Cymbal 7
928.	prc:Hat 15	972.	prc:Hat 59	1016.	prc:Cymbal 8
929.	prc:Hat 16	973.	prc:Hat 60	1017.	prc:Cymbal 9
930.	prc:Hat 17	974.	prc:Hat 61	1018.	prc:Cymbal 10
931.	prc:Hat 18	975.	prc:Hat 62	1019.	prc:Cymbal 11
932.	prc:Hat 19	976.	prc:Hat 63	1020.	prc:Cymbal 12
933.	prc:Hat 20	977.	prc:Hat 64	1021.	prc:Cymbal 13
934.	prc:Hat 21	978.	prc:Hat 65	1022.	prc:Cymbal 14
935.	prc:Hat 22	979.	prc:Hat 66	1023.	prc:Cymbal 15
936.	prc:Hat 23	980.	prc:Hat 67	1024.	prc:Cymbal 16
937.	prc:Hat 24	981.	prc:Hat 68	1025.	prc:Cymbal 17
938.	prc:Hat 25	982.	prc:Hat 69	1026.	prc:Cymbal 19
939.	prc:Hat 26	983.	prc:Hat 70	1027.	prc:Cymbal 20
940.	prc:Hat 27	984.	prc:Hat 71	1028.	prc:Cymbal 21
941.	prc:Hat 28	985.	prc:Hat 72	1029.	prc:Cymbal 22
942.	prc:Hat 29	986.	prc:Hat 73	1030.	prc:Cymbal 23
943.	prc:Hat 30	987.	prc:Hat 74	1031.	prc:Cymbal 24
944.	prc:Hat 31	988.	prc:Hat 75	1032.	prc:Cymbal 25
945.	prc:Hat 32	989.	prc:Hat 76	1033.	prc:Cymbal 26
946.	prc:Hat 33	990.	prc:Hat 77	1034.	prc:Cymbal 27
947.	prc:Hat 34	991.	prc:Hat 78	1035.	prc:Cymbal 28
948.	prc:Hat 35	992.	prc:Hat 79	1036.	prc:Cymbal 29
949.	prc:Hat 36	993.	prc:Hat 80	1037.	prc:Shaker 1
950.	prc:Hat 37	994.	prc:Hat 81	1038.	prc:Shaker 2
951.	prc:Hat 38	995.	prc:Hat 82	1039.	prc:Shaker 3
952.	prc:Hat 39	996.	prc:Hat 83	1040.	prc:Shaker 4
953.	prc:Hat 40	997.	prc:Hat 84	1041.	prc:Shaker 5
954.	prc:Hat 41	998.	prc:Hat 85	1042.	prc:Shaker 6
955.	prc:Hat 42	999.	prc:Hat 86	1043.	prc:Shaker 7
956.	prc:Hat 43	1000.	prc:Hat 87	1044.	prc:Shaker 8
957.	prc:Hat 44	1001.	prc:Hat 88	1045.	prc:Shaker 9
958.	prc:Hat 45	1002.	prc:Hat 89	1046.	prc:Shaker 10
959.	prc:Hat 46	1003.	prc:Hat 90	1047.	prc:Shaker 11
960.	prc:Hat 47	1004.	prc:Hat 91	1048.	prc:Shaker 12
961.	prc:Hat 48	1005.	prc:Hat 92	1049.	prc:Shaker 13

## Instrument Listing



*The Percussion  
Instruments on this page are  
single sample instruments  
stretched across the entire  
keyboard.*

1050.	prc:Shaker 14	1092.	prc:Block 26	1134.	prc:Clap 17
1051.	prc:Shaker 15	1093.	prc:Block 27	1135.	prc:Clap 18
1052.	prc:Shaker 16	1094.	prc:Block 28	1136.	prc:Snap 1
1053.	prc:Shaker 17	1095.	prc:Block 1	1137.	prc:Snap 2
1054.	prc:Shaker 18	1096.	prc:Block 2	1138.	prc:Snap 3
1055.	prc:Shaker 19	1097.	prc:Block 3	1139.	prc:Snap 4
1056.	prc:Shaker 20	1098.	prc:Block 4	1140.	prc:Snap 5
1057.	prc:Shaker 21	1099.	prc:Block 5	1141.	prc:Snap 6
1058.	prc:Shaker 22	1100.	prc:Block 6	1142.	prc:Misc 1
1059.	prc:Shaker 23	1101.	prc:Block 7	1143.	prc:Misc 2
1060.	prc:Shaker 24	1102.	prc:Block 8	1144.	prc:Misc 3
1061.	prc:Shaker 25	1103.	prc:Block 9	1145.	prc:Misc 4
1062.	prc:Shaker 26	1104.	prc:Block 10	1146.	prc:Misc 5
1063.	prc:Shaker 27	1105.	prc:Block 11	1147.	prc:Misc 6
1064.	prc:Shaker 28	1106.	prc:Block 12	1148.	prc:Misc 7
1065.	prc:Flexitone	1107.	prc:Block 13	1149.	prc:Misc 8
1066.	prc:Block 1	1108.	prc:Block 14	1150.	prc:Misc 9
1067.	prc:Block 2	1109.	prc:Tam 1	1151.	prc:Misc 10
1068.	prc:Block 3	1110.	prc:Tam 2	1152.	prc:Misc 11
1069.	prc:Block 4	1111.	prc:Tam 3	1153.	prc:Misc 12
1070.	prc:Block 5	1112.	prc:Tam 4	1154.	prc:Misc 13
1071.	prc:Block 6	1113.	prc:Tam 5	1155.	prc:Misc 14
1072.	prc:Block 7	1114.	prc:Tam 6	1156.	prc:Misc 15
1073.	prc:Block 8	1115.	prc:Tam 7	1157.	prc:Misc 16
1074.	prc:Block 9	1116.	prc:Tam 8	1158.	prc:Misc 17
1075.	prc:Block 10	1117.	prc:Tam 9	1159.	prc:Misc 18
1076.	prc:Block 11	1118.	prc:Clap 1	1160.	prc:Misc 19
1077.	prc:Block Tree	1119.	prc:Clap 2	1161.	prc:Misc 20
1078.	prc:Block 12	1120.	prc:Clap 3	1162.	prc:Misc 21
1079.	prc:Block 13	1121.	prc:Clap 4	1163.	prc:Misc 22
1080.	prc:Block 14	1122.	prc:Clap 5	1164.	prc:Misc 23
1081.	prc:Block 15	1123.	prc:Clap 6	1165.	prc:Misc 24
1082.	prc:Block 16	1124.	prc:Clap 7	1166.	prc:Misc 25
1083.	prc:Block 17	1125.	prc:Clap 8	1167.	prc:Misc 26
1084.	prc:Block 18	1126.	prc:Clap 9	1168.	prc:Misc 27
1085.	prc:Block 19	1127.	prc:Clap 10	1169.	prc:Misc 28
1086.	prc:Block 20	1128.	prc:Clap 11	1170.	prc:Misc 29
1087.	prc:Block 21	1129.	prc:Clap 12	1171.	prc:Misc 30
1088.	prc:Block 22	1130.	prc:Clap 13	1172.	prc:Misc 31
1089.	prc:Block 23	1131.	prc:Clap 14	1173.	prc:Misc 32
1090.	prc:Block 24	1132.	prc:Clap 15		
1091.	prc:Block 25	1133.	prc:Clap 16		

# Riff Listing

1. KEY-C3
2. KEY-C3 (2 Bars)
3. KEY-C3 (4 Bars)
4. KEY-C4
5. KEY-Cs Up
6. KEY-Cs Up-Down
7. KEY-C Triad
8. KEY-Cm7
9. KEY-Cm9
10. KEY-Cmaj7
11. BAS-2600
12. BAS-3 O Worm
13. BAS-A Ku Stq
14. BAS-ATC 3
15. BAS-BadTube
16. BAS-Brolin's 1st
17. BAS-Distorto-TB
18. BAS-Easy
19. BAS-Finger1
20. BAS-Fingered In
21. BAS-FingerHarms2
22. BAS-Finger Out
23. BAS-Finger&Harms
24. BAS-Four U
25. BAS-Fretless 2
26. BAS-Froggy
27. BAS-Homeboy E
28. BAS-In the Money
29. BAS-Lead Bottom
30. BAS-Metal Heart
31. BAS-Mini More
32. BAS-Mod da Wheel
33. BAS-Mr. Clean
34. BAS-Mutation
35. BAS-Plexy
36. BAS-PuLs A'ting
37. BAS-Q Bass 2
38. BAS-Reverend JB
39. BAS-Roundabout
40. BAS-SE Micro
41. BAS-Say What
42. BAS-Shift
43. BAS-SignFeld Pop
44. BAS-Simple 3
45. BAS-Slap Me
46. BAS-Slappity
47. BAS-Soft&Hard
48. BAS-Stomper
49. BAS-Sub Core
50. BAS-Sub Pummeled
51. BAS-Sub-Basement
52. BAS-Sugar Freak
53. BAS-The Reason
54. BAS-ThickFretles
55. BAS-Thickley Dub
56. BAS-VeloFretless
57. BAS-WalkinUprite
58. BAS-WalknUprite2
59. BAS-Walky Talk
60. BAS-WalkyTalk2
61. BRS-Alt TptLoops
62. BRS-Barry Bones
63. BRS-Brass&Bari
64. BRS-BreathTBone
65. BRS-Centurions
66. BRS-Don'sTrumpet
67. BRS-Horny
68. BRS-Huge Brass
69. BRS-MelloD'Trmp
70. BRS-Milez
71. BRS-Movie Brass
72. BRS-MutedTrumpet
73. BRS-Soft Trumpet
74. BRS-The Ensemble
75. BRS-Trmpt&Sect
76. GTR-Carlos
77. GTR-Cast Teller
78. GTR-Cast Teller2
79. GTR-Chuckin
80. GTR-Dark Gut
81. GTR-Distorter-X
82. GTR-Distorter-X2
83. GTR-Distorter-X3
84. GTR-Distorter-X4
85. GTR-Dolobroso
86. GTR-Electric 1
87. GTR-Electric 2
88. GTR-ElectricDis
89. GTR-EmmTV Crunch
90. GTR-FallingNylon
91. GTR-FlangnVioWah
92. GTR-FullNylon
93. GTR-GenericClean
94. GTR-Grusty
95. GTR-JangleWah
96. GTR-Jazzed
97. GTR-LA Strata
98. GTR-Looz 12s
99. GTR-MellowElect
100. GTR-Metal Head
101. GTR-Mutant Pick
102. GTR-Mutant Pick2
103. GTR-Mutes
104. GTR-Nrysty12
105. GTR-Nylon
106. GTR-NyloSteel
107. GTR-Nylon Silk
108. GTR-Nylonistic
109. GTR-Spy
110. GTR-Steel
111. GTR-SteelReal
112. GTR-Stolen7
113. GTR-Stolen7Away
114. GTR-WaaKeeGa
115. HIT-Brass Hits 2
116. HIT-Fashion
117. HIT-MasterBlast
118. HIT-Organ Hits 2
119. KBD-And Voice
120. KBD-And Voice2
121. KBD-B3 X-Wheel
122. KBD-B3 X-Wheel 1
123. KBD-Ballad Tine
124. KBD-Bally Yard
125. KBD-Classic EP
126. KBD-Clav 1
127. KBD-Clavinetti 1
128. KBD-Clavinetti 2
129. KBD-Comp Keyz 2
130. KBD-Crystal
131. KBD-DynofunkEP



## Riff Listing


- |                       |                       |                       |
|-----------------------|-----------------------|-----------------------|
| 132. KBD-DynamcGrand  | 176. KBD-Yo My Dynos  | 220. KIT-Kit 03 d     |
| 133. KBD-DynoPiano    | 177. KIT-424          | 221. KIT-Kit 03 e     |
| 134. KBD-E Grand      | 178. KIT-Acoustic 1   | 222. KIT-Kit 03 f     |
| 135. KBD-EP Roll 2    | 179. KIT-Acoustic 2   | 223. KIT-Kit 04 a     |
| 136. KBD-Elecre 2     | 180. KIT-BMF          | 224. KIT-Kit 04 b     |
| 137. KBD-Elecro7CP80  | 181. KIT-Bag O Tricks | 225. KIT-Kit 05 a     |
| 138. KBD-FM2Classc    | 182. KIT-Berzerker    | 226. KIT-Kit 05 b     |
| 139. KBD-Filmscore    | 183. KIT-Booster      | 227. KIT-Kit 06       |
| 140. KBD-GenBalladEP  | 184. KIT-ClassicHouse | 228. KIT-Kit 07 a     |
| 141. KBD-Gospel Soul  | 185. KIT-Clean R&B    | 229. KIT-Kit 07 b     |
| 142. KBD-Grand FM     | 186. KIT-ClubVinyl    | 230. KIT-Kit 07 c     |
| 143. KBD-Grand Piano2 | 187. KIT-CookUsAHit   | 231. KIT-Kit 08       |
| 144. KBD-Grande 4     | 188. KIT-CookUsAHit 2 | 232. KIT-Kit 09 a     |
| 145. KBD-GreenEyed    | 189. KIT-DerLyBeEmuD  | 233. KIT-Kit 09 b     |
| 146. KBD-Hard Comp 1  | 190. KIT-DeepBooty    | 234. KIT-Kit 09 c     |
| 147. KBD-Hard Comp 5  | 191. KIT-DeepBooty2   | 235. KIT-Kit 10       |
| 148. KBD-Hard Dyno    | 192. KIT-DeepBooty3   | 236. KIT-Kit 11 a     |
| 149. KBD-HonTonkeyz   | 193. KIT-Disengrate   | 237. KIT-Kit 11 b     |
| 150. KBD-JimmyJazzyB  | 194. KIT-Drum 303     | 238. KIT-Kit 11 c     |
| 151. KBD-Klassical    | 195. KIT-Drum Buzza   | 239. KIT-Kit 11 d     |
| 152. KBD-Knockkerz    | 196. KIT-Drum-Bass 1a | 240. KIT-Kit 12 a     |
| 153. KBD-KoolNMelo    | 197. KIT-Drum-Bass 1b | 241. KIT-Kit 12 b     |
| 154. KBD-Lovers FM EP | 198. KIT-Drum-Bass 2  | 242. KIT-Kit 12 c     |
| 155. KBD-Med Dyno     | 199. KIT-Drum-Bass 3a | 243. KIT-Kit 13 a     |
| 156. KBD-Med EP       | 200. KIT-Drum-Bass 3b | 244. KIT-Kit 13 b     |
| 157. KBD-Mellow man   | 201. KIT-Drum-Bass 4a | 245. KIT-Kit 14       |
| 158. KBD-Melosoul EP  | 202. KIT-Drum-Bass 4b | 246. KIT-Kit 15 a     |
| 159. KBD-Miami Grand  | 203. KIT-Drum-Bass 5  | 247. KIT-Kit 15 b     |
| 160. KBD-Organomics X | 204. KIT-Drum-Bass 6  | 248. KIT-Kit 15 c     |
| 161. KBD-PerkyRhodes  | 205. KIT-Electro      | 249. KIT-Kit 16 a     |
| 162. KBD-Piano&Strng1 | 206. KIT-For Real     | 250. KIT-Kit 16 b     |
| 163. KBD-Pure Fog     | 207. KIT-For Real 2   | 251. KIT-Kit 17       |
| 164. KBD-Pure Roll 2  | 208. KIT-Gett..OutPt2 | 252. KIT-Kit 18       |
| 165. KBD-Pure Roll 3  | 209. KIT-GritKitt     | 253. KIT-Kit 19       |
| 166. KBD-Rock'in B    | 210. KIT-Hot Swing    | 254. KIT-Kit 20       |
| 167. KBD-RollinDreams | 211. KIT-Jams         | 255. KIT-OnTheTip     |
| 168. KBD-Stereo Grand | 212. KIT-Kit 01 a     | 256. KIT-Shag         |
| 169. KBD-StereoGrand2 | 213. KIT-Kit 01 b     | 257. KIT-Smackers     |
| 170. KBD-StereoGrand3 | 214. KIT-Kit 02 a     | 258. KIT-SounDfacTory |
| 171. KBD-Suitcase EP  | 215. KIT-Kit 02 b     | 259. KIT-Swing Hop 3  |
| 172. KBD-Supatramp EP | 216. KIT-Kit 02 c     | 260. KIT-Swing Hop a  |
| 173. KBD-TechnoUprite | 217. KIT-Kit 03 a     | 261. KIT-Swing Hop b  |
| 174. KBD-WheelSpeed B | 218. KIT-Kit 03 b     | 262. KIT-This & That  |
| 175. KBD-WideSuitcase | 219. KIT-Kit 03 c     | 263. KIT-Tribal House |

## Riff Listing


- |                       |                       |                       |
|-----------------------|-----------------------|-----------------------|
| 264. KIT-Werzerker    | 308. PRC-Shakers      | 352. VOX-Lo-Fi Ether  |
| 265. LED-Apple Eater  | 309. PRC-SiameseCats  | 353. VOX-MauzeWowz    |
| 266. LED-Blue Danube  | 310. PRC-TV Spy Vibes | 354. VOX-Mist         |
| 267. LED-Ethereosity  | 311. PRC-Velo Vibes   | 355. VOX-New Age Oohs |
| 268. LED-Freakus      | 312. PRC-Velo Vibes 2 | 356. VOX-Odd Boys     |
| 269. LED-inBottles    | 313. PRC-Village      | 357. VOX-Pop Oohs     |
| 270. LED-Post 90's DM | 314. PRC-Xylophone    | 358. VOX-Slo Lunarvox |
| 271. LED-Q Snapper    | 315. SFX-MetalScience | 359. VOX-Spiritworld  |
| 272. LED-Quacker      | 316. SFX-Oh No Its    | 360. VOX-SynthSing    |
| 273. LED-Sci-Fi B     | 317. STR-AbbeyStrngs  | 361. VOX-Voxicord     |
| 274. LED-Shiner       | 318. STR-AbbeyStrngs2 | 362. WAV-Lowtronics   |
| 275. LED-Soft Slip    | 319. STR-Allin a Pizz | 363. WAV-M12          |
| 276. LED-Weezy Lead   | 320. STR-AllinaPizz 2 | 364. WAV-Metal 2      |
| 277. LED-Worm         | 321. STR-ArcotremPizz | 365. WAV-VS37         |
| 278. LED-Worm 2       | 322. STR-Dyna-heim    | 366. WND-A-Sax        |
| 279. LED-Worm Up      | 323. STR-ExtremeStrng | 367. WND-Alto Saxo    |
| 280. LED-Wormwood     | 324. STR-Filmscore    | 368. WND-Bottle Blow  |
| 281. LED-Zimppler     | 325. STR-HindooKurdoo | 369. WND-Breather     |
| 282. ORC-Combo        | 326. STR-Japanman     | 370. WND-Chambr Orch  |
| 283. ORC-Orchestra    | 327. STR-Kult E Vatn  | 371. WND-Clarinet     |
| 284. PAD-Airborn      | 328. STR-Pizzicati    | 372. WND-Ethnic Reed  |
| 285. PAD-Ganic        | 329. STR-SitarTalk    | 373. WND-Fieldberries |
| 286. PAD-Highway      | 330. STR-Solo Quartet | 374. WND-Flute        |
| 287. PAD-Infants      | 331. STR-Strg + Choir | 375. WND-Harmonica    |
| 288. PAD-Infants2     | 332. STR-Swoon        | 376. WND-Nuages       |
| 289. PAD-MetalBeats   | 333. STR-Texture      | 377. WND-Oboe         |
| 290. PAD-My Hero      | 334. STR-TronStrings  | 378. WND-Ocarina a    |
| 291. PAD-Pad Life     | 335. STR-Velo Marcato | 379. WND-Ocarina b    |
| 292. PAD-Paddy        | 336. STR-Victrola     | 380. WND-Pan Flute    |
| 293. PAD-Phat         | 337. SYN-Bender       | 381. WND-Pastoral     |
| 294. PAD-Sophia       | 338. SYN-Brazz        | 382. WND-Real Flute   |
| 295. PRC-Acidphone    | 339. SYN-Ensemblist   | 383. WND-Real Flute 2 |
| 296. PRC-Claves       | 340. SYN-Euro Wave    | 384. WND-Synth Flute  |
| 297. PRC-Congas       | 341. SYN-Festival     | 385. WND-T-Sax        |
| 298. PRC-Congas 2     | 342. SYN-Hydraine     | 386. WND-Virtuaccord  |
| 299. PRC-Cymbals      | 343. SYN-ProfitMargin |                       |
| 300. PRC-Hats 1       | 344. SYN-Silk OBXsaws |                       |
| 301. PRC-Kalimba      | 345. SYN-Sync Trance  |                       |
| 302. PRC-Kalimba 2    | 346. SYN-Syntax On2   |                       |
| 303. PRC-Log On       | 347. SYN-Synthall AT  |                       |
| 304. PRC-Marimba      | 348. SYN-ThinTecPulse |                       |
| 305. PRC-Plexitone    | 349. SYN-Z&C Leeder   |                       |
| 306. PRC-Progress a   | 350. VOX-Ahhs         |                       |
| 307. PRC-Progress b   | 351. VOX-Frozen Time  |                       |

## Velocity Curves


This section provides diagrams and descriptions of the Proteus 2000 velocity curves.

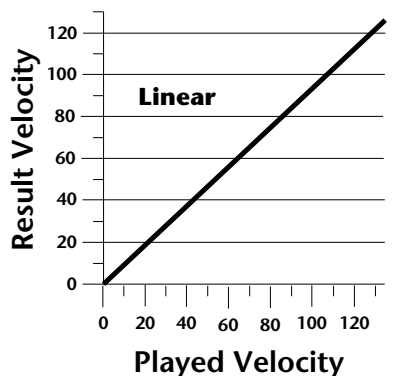


Linear, no change to velocity.

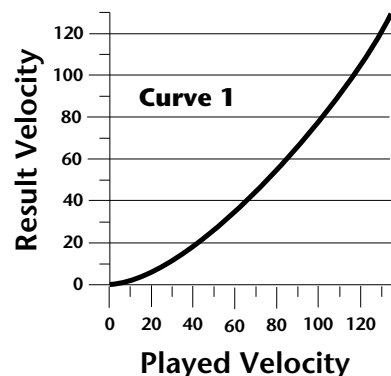


Compresses velocity range.

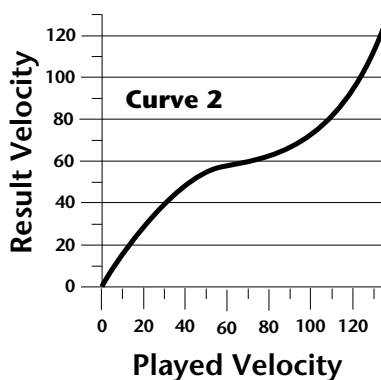


Expands dynamics in low range, emphasizing medium velocity values and compressing high velocity values.

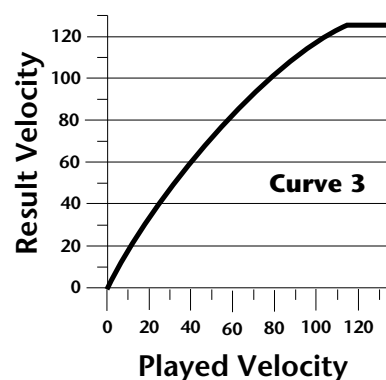


Expands velocity range.  
Soft -> Loud

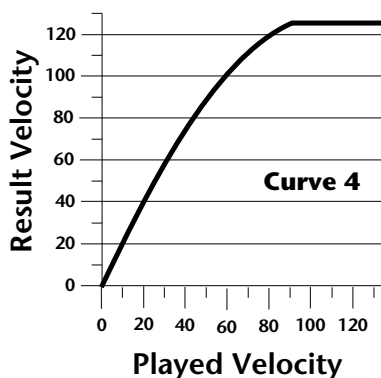

Expands velocity range.  
Outputs high values.

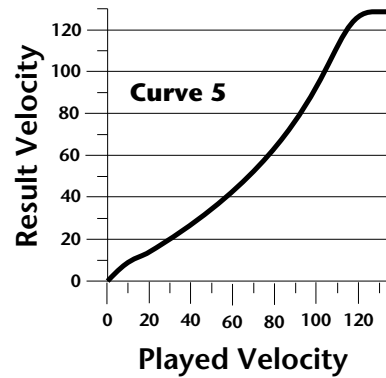


Shifts velocity values upward.  
Good dynamic range.

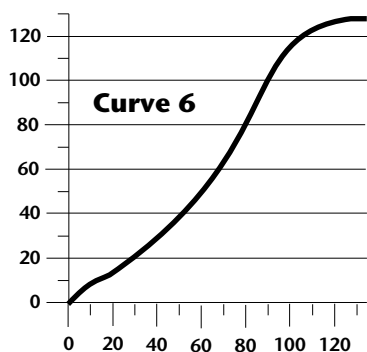


**Curve 6**

Shifts velocity values up while compressing the middle range.

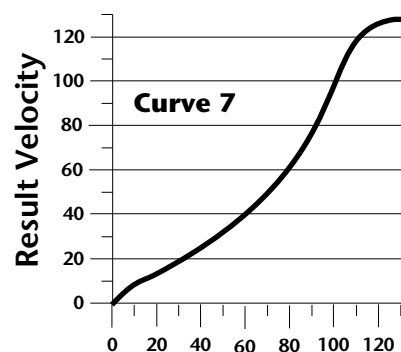


**Curve 7**

Similar to Curve 6.

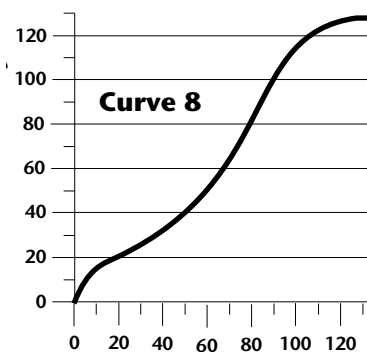


**Curve 8**

Similar to Curve 6 with more emphasis on the middle range.

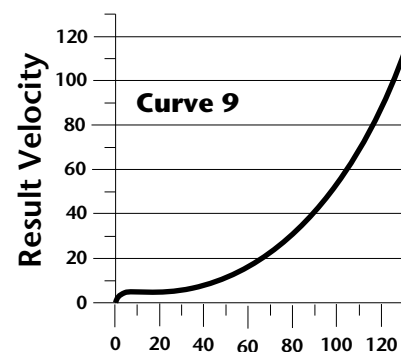


**Curve 9**

Extreme dynamic range compression.

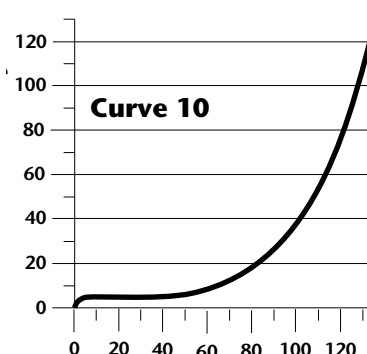

**Curve 10**


Extreme dynamic range compression. Outputs low values.

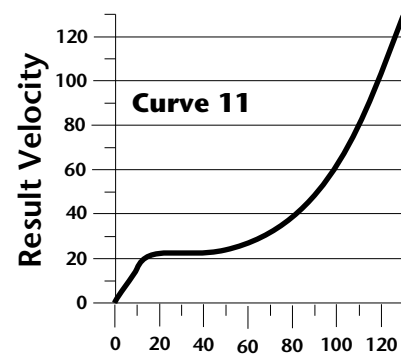


**Curve 11**

Extreme dynamic range compression but doesn't output low values

## PatchCord Amount Chart

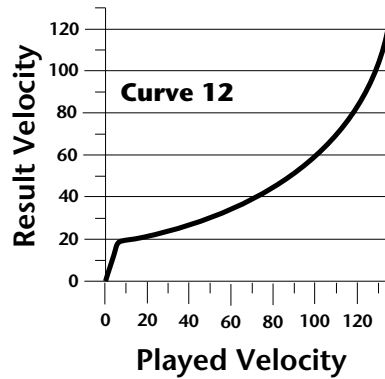

Less severe version of Curve 11.

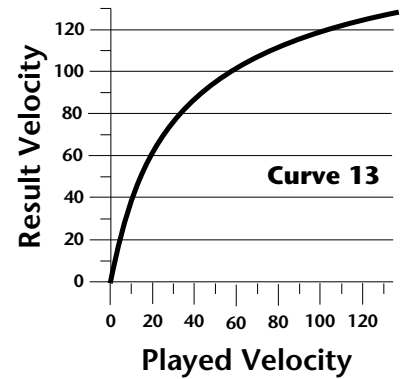

Extreme expansion of  
velocity range.

The following chart shows the PatchCord “Amount” settings in order to get semitone intervals when modulation sources are connected to pitch.

Semitone	PatchCord Amount	Semitone	PatchCord Amount
1	3	21	66
2	6	22	69
3	approx. 9	23	approx. 72.5
4	approx. 12	24	approx. 76
5	16	25	79
6	19	26	82
7	22	27	88
8	25	28	91
9	28	29	approx. 95
10	approx. 31	30	98
11	35	31	
12	38	32	
13	41	33	
14	44	34	
15	47	35	
16	50	36	
17	approx. 53	37	
18	57	38	
19	60	39	
20	63	40	

# MIDI

## MIDI Implementation Chart

Function	Transmitted	Recognized	Remarks
Basic Default Channel Changed	No No	1 1-16	Memorized
Mode Default Messages	No	Mode 1, 3, 4 Mono, Poly, Omni, On/Off	Memorized
Note Number True Voice	No No	0-127 0-127	
Velocity Note ON Note OFF	No No	Yes v=1-127 Yes	
After Keys Touch Channels	No No	No Yes	
Pitch Bender	No	Yes	
Control Change	Yes	Yes	0-31 64-119
Bank Select	No	Yes	
Program Change True No.	No No	Yes 0-127 Yes 0-127	
All Sound Off	No	Yes	
All Notes Off	No	Yes	
Reset all Controllers	No	Yes	
System Exclusive	Yes	Yes	
System :Song Pos Common :Song Sel :Tune	No No No	No No No	
System :Clock Real Time :Cmnds	No No	Yes Yes	
Aux :Local On/off Msgs :Active Sense :Reset	No No No	No No No	
<b>NOTES:</b> Mode 1: Omni ON, Poly Mode 3: Omni OFF, Poly		Pan: -64 = hard left, +63 = hard right Mode 2: Omni ON, Mono Mode 4: Omni OFF, Mono	

Product ID for Proteus 2000 = OF.

Device ID = [00-7F] (0-126 decimal) 127 is broadcast to all.

Parameter Number and Parameter Value are 2 bytes each.

There is only one edit buffer which is used by the current preset (the preset shown in the display). You can edit only one preset at a time via SysEx commands, although these presets can be edited independently of the current preset edited using the Front Panel. Remote Preset selection is independent of the edit buffer. Changing the current preset erases the edit buffer.

*Received Channel  
Commands*

Channels number (n) = 0-15. Message bytes are represented in hex. All other numbers are decimal. Running Status is supported.

<b>Command</b>	<b>Message</b>	<b>Comments</b>
Note Off	8n kk vv	
Note On †	9n kk vv	velocity 0 = note off
Key Aftertouch	An kk vv	kk = 0-127 vv = 0-127
Program Change	Cn vv	0-127
Channel Aftertouch	Dn vv	0-127
Pitch Bend	En ll mm	l = lsb, m = msb
Real-time Controller	Bn cc vv	cc = 00-31
Footswitch	Bn cc vv	cc = 64-79, vv ≥ 64 = on
Volume	Bn 07 vv	0-127
Pan	Bn 0A vv	0=left, 127=right, 64=center
All Sound Off	Bn 78 00	turns all sound off
Reset All Controllers	Bn 79 00	ignored in omni mode
All Notes Off	Bn 7B 00	ignored in omni mode
Omni Mode Off*	Bn 7C 00	forces all notes & controls off
Omni Mode On*	Bn 7D 00	forces all notes & controls off
Mono Mode On (Poly Off)*	Bn 7E 00	forces all notes & controls off
Poly Mode On (Mono Off)*	Bn 7F 00	forces all notes & controls off
Bank Select MSB	Bn 00 bb	bb = bank MSB
Bank Select LSB	Bn 20 bb	bb = bank LSB

**\* Special Notes:**

- **From Omni Mode** .....Omni Off turns Poly On.
- **From Poly Mode** .....Omni On turns Omni On; Mono On turns Mono On.
- **From Mono Mode** .....Mono Off turns Poly On; Omni On turns Omni On.
- **From Multi Mode** .....Omni On turns Omni On; Omni Off or Mono Off turns Poly On; Mono On turns Mono On.
- All other changes have no effect.

*SysEx Specification*

Proteus 2000 contains an extensive set of MIDI SysEx commands. (Virtually every parameter is controllable via SysEx.) Because of the size and technical nature of the System Exclusive specification, it is beyond the scope of this manual. The complete SysEx specification for Proteus 2000 is available on the official E-MU Systems, Inc. web site: [www.emu.com](http://www.emu.com)

## Technical Specifications

<b>Audio Channels:</b>	128
<b>MIDI:</b>	2 MIDI In, 2 MIDI Out, 2 MIDI Thru
<b>MIDI Channels:</b>	32 (2 MIDI in ports)
<b>Presets:</b>	512 user presets. <i>(The number of ROM presets is determined by the sound SIMMs installed.)</i>
<b>Filters:</b>	6th Order (17 different types)
<b>Audio Outputs:</b>	6 polyphonic analog outputs
<b>Submix Inputs:</b>	4 analog inputs (sum to main outs)
<b>Digital Output:</b>	S/PDIF stereo (AES-pro compatible)
<b>Max. Output Level:</b>	+4 dB
<b>Output Impedance:</b>	1000 Ohms
<b>Sound Memory:</b>	32 MB (expandable to 128 MB)
<b>Data Encoding:</b>	16-bit linear data, 20-bit $\Delta\Sigma$ main outputs, 18-bit submix outs
<b>Effects Engine:</b>	24-bit internal processing
<b>Sample Playback Rate:</b>	44.1 kHz
<b>Signal to Noise:</b>	>92 dB
<b>Dynamic Range:</b>	>90 dB
<b>Frequency Response:</b>	20 Hz - 20 kHz (+2/-1 dB)
<b>THD + Noise:</b>	< 0.02% (1kHz sine wave, A-weighting)
<b>IMD</b>	< 0.05%
<b>Stereo Phase</b>	Phase Coherent +/- 1° at 1 kHz
<b>Power Consumption:</b>	15 Watts
<b>Voltage Input:</b>	90VAC-260VAC at 50Hz-60Hz
<b>Dimensions</b>	H: 1.75 inches W: 19 inches L: 8.5 inches
<b>Weight</b>	6 lb., 14 oz. (3.1 Kg)



## Warranty

### **Please read this warranty, as it gives you specific legal rights.**

#### *Warranty*

This product is warranted, to the original consumer purchaser, to be free of all defects in workmanship and materials for a period of one (1) year from the date of such purchase from an authorized EMU dealer, provided that (a) the Warranty Registration Card is filled out and returned to EMU within 14 days of the purchase date, and (b) the EMU service center is provided a copy of the consumer purchaser's sales receipt.

#### *Warranty Restrictions*

Specifically, but without limitation, EMU does not provide warranty service for:

- Damages due to improper or inadequate maintenance, accident, abuse, misuse, alteration, unauthorized repairs, tampering, or failure to follow normal operating procedures as outlined in the owner's manual;
- Deterioration or damage of the cabinet;
- Damages occurring during any shipment of the unit;
- Any unit which has been modified by anyone other than EMU.

No other express or implied warranty is made, and EMU specifically disclaims any implied warranty of merchantability, satisfactory quality, and fitness for a particular purpose. EMU's liability under warranty is limited to repair or replacement of the unit, or refund, at EMU's option. In no event will EMU be liable for loss of revenue or savings, loss of time, interruption of use, or any other consequential, indirect, incidental, special or exemplary damages. The foregoing will apply notwithstanding the failure of essential purpose of any remedy provided herein. Some jurisdictions do not allow the exclusion of implied warranties or conditions, or limitations on how long an implied warranty or condition may last, so the above limitations may not apply. This warranty gives you specific legal rights. You may have other rights which vary from jurisdiction to jurisdiction.

#### *How To Obtain Warranty Service*

All EMU products are manufactured with the highest standards of quality. If you find that your unit does require service, it may be done by any authorized EMU service center. If you are unable to locate a service center in your area, please contact EMU's Service Department at (831) 438-1921. They will either refer you to an authorized service center in your area or ask that you return your unit to the EMU factory.

When returning your unit to the EMU factory, you will be issued a Return Merchandise Authorization (RMA) number. Please label all cartons, shipping documents and correspondence with this number. EMU suggests you carefully and securely pack your unit for return to the factory. (Do not send the power cord or operation manual.) Send the unit to E-MU Systems, Inc., 1600 Green Hills Road, Scotts Valley, CA 95066. You must pre-pay shipping charges to EMU; EMU will pay return shipping charges. You will be responsible for any damage or loss sustained during shipment in any direction.

3/99

### *Outside Developer Credits*

<b>Ron Beck</b>	<b>Donna McCabe</b>	<b>Robert Semrow</b>
<b>Reza Ebrahimi</b>	<b>Kevin Moore</b>	<b>Andrew Schlesinger</b>
<b>G.L.O.W.O.r?m.</b>	<b>Scott Plunkett</b>	<b>Jack Spence</b>
<b>Manny Fernandez</b>	<b>Conrad Praetzel</b>	<b>Marc St. Regis</b>
<b>David Fitzpatrick</b>	<b>David Ritch</b>	<b>Gregg St. Regis</b>
<b>Bill Friedman</b>	<b>Christian Sales</b>	<b>Sam Ward</b>
<b>Sean Hall</b>	<b>Malcolm Seagrave</b>	

### *Demo Sequence Credits*

<b>P2kGonzoPop</b> Scott Plunket	<b>Three AM</b> Danny B., Ron E. Beck, Dave Bristow
<b>Are &amp; Be</b> Sam Ward Bruce Elephant Music	<b>Forat</b> Bruce Forat Forat Records
<b>World Five</b> Ed Mann	<b>In Memory</b> Gerry Bassermann OpusNine

# Index

## Symbols

“+” modulation polarity 116  
 “±” modulation polarity 116

## Numerics

19-tone tuning 126  
 2-pole filters 76  
 4-pole filters 76  
 6-pole filters 76

## A

A effect types 145, 146  
 absolute value processor 65  
 AES pro output format 53  
 aftertouch, mono 57  
 algorithm  
   FXA 147, 148  
   FXB 147, 149  
   master FXA 41  
   master FXB 42  
 all layers 85, 87  
 alternate tuning 126  
 amount, patchcord 80, 115  
 amplifier 98  
 amplitude 104, 134  
   envelope 99  
   modulation 56  
 assign group 103  
 attack, envelope 100, 110, 117, 138  
 audition  
   button 18, 22  
   preset 18  
   riff 129  
 auxiliary envelope 59, 110

## B

B effect types 145, 146  
 balance 79  
 band-pass filter 75, 105  
 bandwidth 77  
 bank  
   number 20, 26  
   organization 20  
   select display 22  
   selecting 27

base tempo 54  
 basic setup 14  
 basics, programming 55  
 bend range 36  
 breath controller 47  
 button  
   control 21  
   cursor 22  
   edit menu 21  
   home/enter 35  
   master menu 21  
   save/copy 22  
 bypass effects 150  
 bypassed, effects mode 150

## C

calibration 50  
 category, preset 166  
 center frequency 77  
 changing  
   filter type 138  
   MIDI preset 46  
   preset 20  
   the voice 131  
 channel  
   MIDI enable 45  
   MIDI select 26  
   pan 28  
   selection, MIDI 26  
   volume 27  
 chorus 101, 145, 155  
   effect 155  
   tutorial 133  
   width 133  
 clock  
   divisor 57  
   MIDI 54  
   modulation 63  
   sync delay time to 146  
 coarse tuning 98, 132  
 comb filter 106, 146  
 comb filter, effect 155  
 connection instructions 14  
 continuous controllers 80  
 contour, envelope 57, 100  
 control  
   button 21  
   data entry 23  
   effects multi mode 40  
   mode 21  
   rows 21  
   volume 21  
 controller  
   assigning real-time 46  
   footswitch 47  
   knobs 23, 25, 46, 81  
   MIDI 46, 80  
   MIDI #10 28

- MIDI #7 27, 80
- MIDI real-time 80
- modes 23
- quick edit and real-time mode 24
- real-time 21, 23
  - knobs 23
  - only mode 23
- standardized MIDI numbers 47
- copying
  - layers 158
  - patchcords 159
  - preset banks 160
  - preset patchcords 160
  - presets 158
- create random preset 161
- crossfade
  - between effects 123
  - random 58
  - ranges 94
- current tempo
  - offset 129
- cursor buttons 22
- curve
  - glide 104
  - velocity 37
  - volume 133
- cutoff frequency 75, 135

## D

- damping, high frequency 146, 154
- data entry control 23
- DC offset, example 72
- DCA 79, 140
- decay
  - effect A 42, 146
  - effects 146
  - envelope 133
- deep edit mode 49
- delay 101
  - effect B 43
  - effect processor 156
  - effects 145, 146
    - sync to master clock 146
  - LFO 113
  - master FxB 43
  - preset link 128
- demo sequences 18
- destinations, modulation 64, 117
- device ID 44, 190
- device, external MIDI 62
- digital output format 53
- dimensions 192
- diode processor 66
- display, viewing angle 54
- distortion effect processor 156
- distortion effects 145
- double and detune 101, 133
- doubling, effect 155

- dual tap, delay 156
- dynamic filters 73
- dynamic range 192

## E

- edit menu button 21
- editing presets 131
- effect diagram 119, 120, 122
- effect sends 38
  - diagram 120
- effects
  - A type 145
  - B into effect A 152
  - B submix routing 43
  - B type 145
  - busses 143
  - by channel number 152
  - channel number setup 152
  - chorus 155
  - decay 146
  - delay 146, 156
    - sync to master clock 146
  - description 154
  - distortion 156
  - doubling 155
  - dual tap delay 156
  - feedback 146, 156
  - flanger 155
  - FxA decay 42
  - FxA HF Damping 42
  - FxB feedback 43
  - FxB->FxA 42, 147
  - global 151
  - HF damping 146
  - LFO rate 43, 146
  - master 143, 148, 151
    - A algorithm 41
    - B algorithm 42
    - FxB->FxA 148
    - LFO rate 43
  - mode, bypass 40, 150
  - multi mode control 40, 150
  - panning delay 156
  - patchcords 123
  - preset 119, 147
  - processor 143
  - programmed in the preset 119, 147
  - returns 17
  - reverb 154
  - routing diagram 39
  - send amounts 143
  - sends 143
  - slapback 155
  - stereo delay 156
  - submix routing, A 42, 122, 123
  - type A 41, 121, 145, 146
  - type B 43, 122, 145, 146
  - vibrato 156

- enabling MIDI channels 45
- enter button 23
- envelope
  - attack 100, 110, 117
  - auxiliary 110
  - decay 133
  - filter 108, 136, 137, 139
  - generator 57, 59
    - example 76
  - mode, factory 134
  - mode, filter 137
  - release 133
  - repeating 60
  - reverberation 154
  - volume 99, 100, 133, 134
- equal temperament tuning 126
- errors, data transmission 51
- external processing 142

## F

- factory envelope mode 134
- Fc 108, 135
- feedback 146
  - effect 156
  - FxB 43
- filter
  - 2-pole 76
  - 4-pole 76
  - 6-pole 76
  - bandpass 75, 105
  - changing type 138
  - comb 106, 146
  - definition 74
  - dynamic 73
  - envelope 59, 108, 136, 137
  - envelope attack 138
  - envelope generator 108, 139
  - envelope mode 137
  - frequency 108, 117, 135
  - high-pass 74, 135
  - low-pass 74
  - mode 137
  - morph 78
  - notch 75
  - overview 135
  - parametric 77
  - pole 76
  - Q 108, 135, 136
  - swept EQ 77
  - troubleshooting 140
  - tutorial 73
  - type 135, 138
  - type, changing 138
  - Z-plane 78, 79, 104
- fine tuning 98, 132
- fingering glide solo mode 103
- first key 68
- flanger

- effect processor 155
- effects 145
- flip-flop processor 66
- footswitch 47, 57
- format, output 53
- free running, LFO 112
- frequency
  - center 77
  - cutoff 75
  - filter 108, 117
  - modulation 56
- front panel knobs 165
- FX cords 123
- FX mode 40, 150
- FxA algorithm 147, 148
- FxA parameters 122
- FxB -> FxA 147, 148, 152
- FxB algorithm 122, 147, 149
- FxB master algorithm 42
- FxB parameters 123
- FxB submix routing 43

## G

- gain processor 66
- gamelan tuning 126
- gate 57
- generator
  - envelope 57
  - filter envelope 108, 139
  - noise & random 57
  - volume envelope 99
- glide 104
  - curve 104
  - key 57
  - rate 57, 104
- global effects 148, 151
- group, assigning channels to a 103

## H

- headphones 14
- high frequency damping 42, 146, 154
- high-pass filter 74, 135
- home 23
- home position 20
- home/enter button 35

## I

- ID number, MIDI sysex 44
- implementation chart, MIDI 190
- initial pan position 98
- initial volume 98
- instrument 79, 131
  - category 29
  - listing 174-183
  - selecting 88
- inverting LFO waves 62

**J**

just C tuning 126  
     description 127  
 just intonation 126

**K**

key  
     glide 57  
     range 90  
         preset link 128  
     transpose 97  
     tuning 53  
     velocity 57  
 keyboard  
     character assignments 86  
     key 57  
     layering and splitting 141  
     pressure 57  
     range 89, 90  
     splitting 141  
     transpose 97  
     transpose on/off 102  
     tuning 126  
         19-tone 126  
         equal temperament 126  
         gamelan 126  
         just C 126  
         Vallotti 126  
 Kirnberger tuning 126  
 knobs  
     calibration 50  
     controller 25, 81  
     MIDI out 49  
     preset quick edit 48  
     transmit MIDI 24  
     typical functions 165  
 knobs MIDI out 49

**L**

lag amount 67  
 lag processor 65  
 layering presets 141  
 layers  
     copy 158  
     definition 87  
     instrument 55  
     selecting 87  
 legato 102  
 LFO 110  
     effect B 43  
     flanger 156  
     inverting waveforms 62  
     key sync 112  
     master FXB rate 43  
     rate 146  
     rate, effect 43

tricks & tips 111  
 trigger 62  
     variation 114  
     waveforms 61, 111  
 linking presets 128, 129, 141  
 looping envelopes 60  
 low frequency oscillator 57, 61, 110  
     delay 113  
     free running 112  
     sync 110, 112  
     variation 114  
 low-pass filter 74  
     example 76

**M**

main screen 26, 35  
 master  
     bend range 36  
     clock  
         current tempo 54  
         modulation 62  
         sync delay time to 146  
     effects 143, 148, 151  
     FxA algorithm 41  
     FxB algorithm 42  
     menu 35  
     menu button 21  
     tempo 48  
         offset 129  
     tuning 36  
 melody solo mode 102  
 menu  
     master 35  
     multi 31  
     preset edit 85  
     save/copy 157  
 MIDI 48  
     A-L messages 23  
     bank select display 18, 22  
     channel 26  
     channel selection 26  
     clock 54  
     continuous controllers 46, 57, 80  
     controller #7 27  
     device ID 44, 190  
     enable 45  
     external clock 62  
     footswitches 47  
     implementation chart 190  
     in 14  
     inputs A & B 15, 16  
     knobs transmit 24, 49  
     mode 30, 44, 143  
     multi mode 44  
     omni mode 44  
     out 15  
     pan control #10 28  
     poly mode 44

- port A & B 30
  - real-time controllers 80
  - receive program change 46
  - received channel commands 191
  - receiving sysex data 52
  - recording sysex data 52
  - send sysex data 52
  - standardized controller numbers 47
  - sysex data, sending 51
  - sysex packet delay 51
  - sysex send/receive 52
  - thru 16
  - transmit, knob 49
  - minimoog, solo mode 103
  - mix output 38, 118, 144
  - mod wheel 57
  - mode
    - control 21
    - controller 23
    - deep edit 49
    - effect bypass 150
    - effects 40, 150
    - factory 134
    - filter envelope 137
    - MIDI 44, 143
    - mono 191
    - multi 44, 143, 191
    - non-transpose 102
    - omni 44, 150, 191
    - poly 44, 150, 191
    - quick edit and real-time controller 24
    - real-time controllers only 23
    - solo 102
    - time-based 137
  - modulation
    - amplitude 56
    - clock 63
      - delay time 146
    - definition 56
    - destinations 64
    - note-on 64
    - polarity 116
    - processors 65, 69
    - random 58
    - routing 115
    - sources 57, 58
    - sources & destinations 117
    - wheel 47
  - mono aftertouch 57
  - mono A-I, assign group 103
  - mono mode 191
  - morph filter 78
  - multi mode 44, 143, 191
    - control, effects 150
    - effects control 40
    - map, send/receive 51
  - multimenu button 22, 31
  - multiple trigger solo mode 102
  - multisetup 22, 31
    - restore 32
    - saving 32
    - send/receive 51
  - multitimbral 30
    - operation 34
    - sequencing 34
- N**
- naming, preset 86
  - noise & random generators 57
  - non-transpose mode 102
  - notch filter 75
  - note-on modulation 64
- O**
- omni mode 44, 150, 191
  - output
    - format 53
    - headphones 14
    - jack 14, 15, 16
    - jacks 17
    - mix 38, 118, 144
    - mono 14
    - routing 118
    - stereo 83
  - overall tuning, adjusting 36
- P**
- packet delay, MIDI sysex 51
  - pan 79
    - channel 28
    - control 28
    - initial 98
    - preset link 128
  - panning delay, effect 156
  - panning L/R 28
  - parameters
    - effects 145
  - parametric filters 77
  - patchcord 58, 115
    - amount 80, 115
    - copying a 159
    - example 69
    - routing 64
  - pedal 57
  - performance controllers 57
  - performance setup 16
  - pink noise, example 71
  - pitch wheel 57, 139
    - master bend range 36
    - range 118
  - pitch, shifting 132
  - pitchbend range 118
  - play solo layers 129
  - polarity
    - modulation & LFO 116
    - patchcord 58, 62

- ramp rate 68
- pole filters 76
- poly all, assign group 103
- poly mode 44, 150, 191
- poly, assign group 103
- portamento 104
- power 17
- power consumption 192
- preset
  - architecture 87
  - audition 18, 22
  - category 20, 29, 166
  - changing 20
  - copying 158
  - editing 131
  - effects 119, 147
  - lag 67
  - links 128, 129, 141
  - listing 167-174
  - MIDI changes 46
  - naming 86
  - quick edit 48
  - ramp 67
  - random 161
  - saving a 157
  - selecting 19, 26
  - user 52
- processor
  - 4x gain 66
  - absolute value 65
  - diode 66
  - effect 143
  - flip-flop 66
  - modulation 69
  - quantizer 66
  - summing amp 65
  - switch 65
- product description 1
- program change, receive 46
- program->preset map 45
  - send/receive 51
- programming basics 55
- generator, noise and 57
  - modulation sources 58
- range
  - key 89, 90
  - keyboard 89
  - pitchbend 118
  - velocity 92
- rate
  - effect LFO 43, 146
  - glide 104
  - LFO 112
  - master FxB LFO 43
- rate/level envelopes 59
- real-time controller 21, 23, 80
  - assignment 46
  - crossfading 94
  - knobs 23
  - mode, quick edit and 24
- real-time crossfade 94
- receive program change 46
- received channel commands, MIDI 191
- receiving MIDI SysEx data 52
- recording MIDI SysEx data 52
- rectifier 65
- release velocity 57
- release, envelope 133
- resonance 75, 106, 107, 108, 136, 138
- restore multisetup 32
  - via MIDI 31
- reverb 145, 154
  - envelope 154
- riff
  - assignment 129
  - listing 184, 185, 186
  - MIDI out 49
  - playing 18, 22
- ROM card identifier 19
- routing
  - FXA submix 42, 122, 123
  - FxB submix 43
  - modulation 115
  - output 118

## Q

- Q 75, 106, 107, 108, 135, 136, 138
- quantizer 66, 72
  - example 71
- quick edit
  - and real-time controllers mode 24
  - preset 48

## R

- ramp rate 68
- random
  - creating presets 161
  - crossfade 58
  - crossswitch 95

## S

- S/PDIF 14
  - output format 53
- safety instructions 3
- save/copy button 22
- save/copy menu 157
- saving presets 157
- Scarlatti tuning 126
- screen
  - main 26, 35
  - preset select 26
  - viewing angle 54
- selecting a MIDI channel 26
- selecting presets 19, 26



- send
  - preset effect 118
- send amount 143
  - FXA 42, 122, 123
- sends
  - effect 38
- sequence
  - setup 34
  - using multisetups in a 31
- sequencing 34
- setup
  - basic 14
  - performance 16
  - studio 15
- Sicherheitsvorschriften 6
- signal path 79, 143
- slapback, effect 155
- solo layer 129
- solo mode 102
- sound navigator 29
  - selecting instruments 88
- sound start 101
- sources, modulation 117
- specifications, technical 192
- split keyboard 128, 141
  - using links 141
- stack
  - layers 91
  - presets 128
- standard MIDI switch numbers 48
- standardized MIDI controller
  - numbers 47
- step-by-step instructions 131
- stereo delay, effect 156
- stereo outputs 83
- stolen voices 103
- studio setup 15
- sub output jacks 17
- submix in/out 142
- submix jack routing 118
- submix routing
  - FXB 43
- summing amp 65, 66
- summing nodes 56
- swept EQ filter 77
- switch processor 65, 69
- sync
  - delay effect to master clock 146
  - LFO 110, 112
- synth solo modes 103
- system exclusive
  - device ID 44
  - ID 44
  - packet delay 51
  - send data 52

## T

- technical specifications 192
- tempo offset 129
- tempo-based 99, 134
- tempo-based envelope 60, 108
- time
  - master FXB delay 43
- time-based 99, 134, 137
- time-based envelope 59, 108
- transmission errors 51
- transmit MIDI, knob 49
- transpose 36, 97, 98
  - preset link 128
- troubleshooting, filter 140
- tune 36
- tuning 98, 132
  - 19-tone 126
  - coarse 132
  - equal temperment 126
  - fine 132
  - gamelan 126
  - just C 126
  - key 53
  - keyboard 126
  - Vallotti 126
  - Werkmeister 126
- tuning tables, send/receive 51
- tutorial
  - filter 73
  - programming 131

## U

- user key tuning 53
- user presets 52

## V

- Vallotti tuning 126
- variation, LFO 114
- velocity
  - crossfade 92
  - curve 37, 187
  - key 57
  - preset link 128
  - release 57
- vibrato, effect processor 156
- viewing angle, screen 54
- voices, changing 131
- voices, stolen 103
- voltage setting 17
- volume
  - channel 27
  - control 21
  - control #7 27
  - curve 133
  - envelope 59, 79, 99, 100, 133, 134
  - initial 98
  - preset link 128

### **W**

waveforms  
  inverting 62  
  LFO 61  
weight 192  
Werkmeister tuning 126  
wheel

  modulation 47, 57  
  pitch 57, 139  
width, chorus 133

### **Z**

Z-plane filter 78, 79, 104